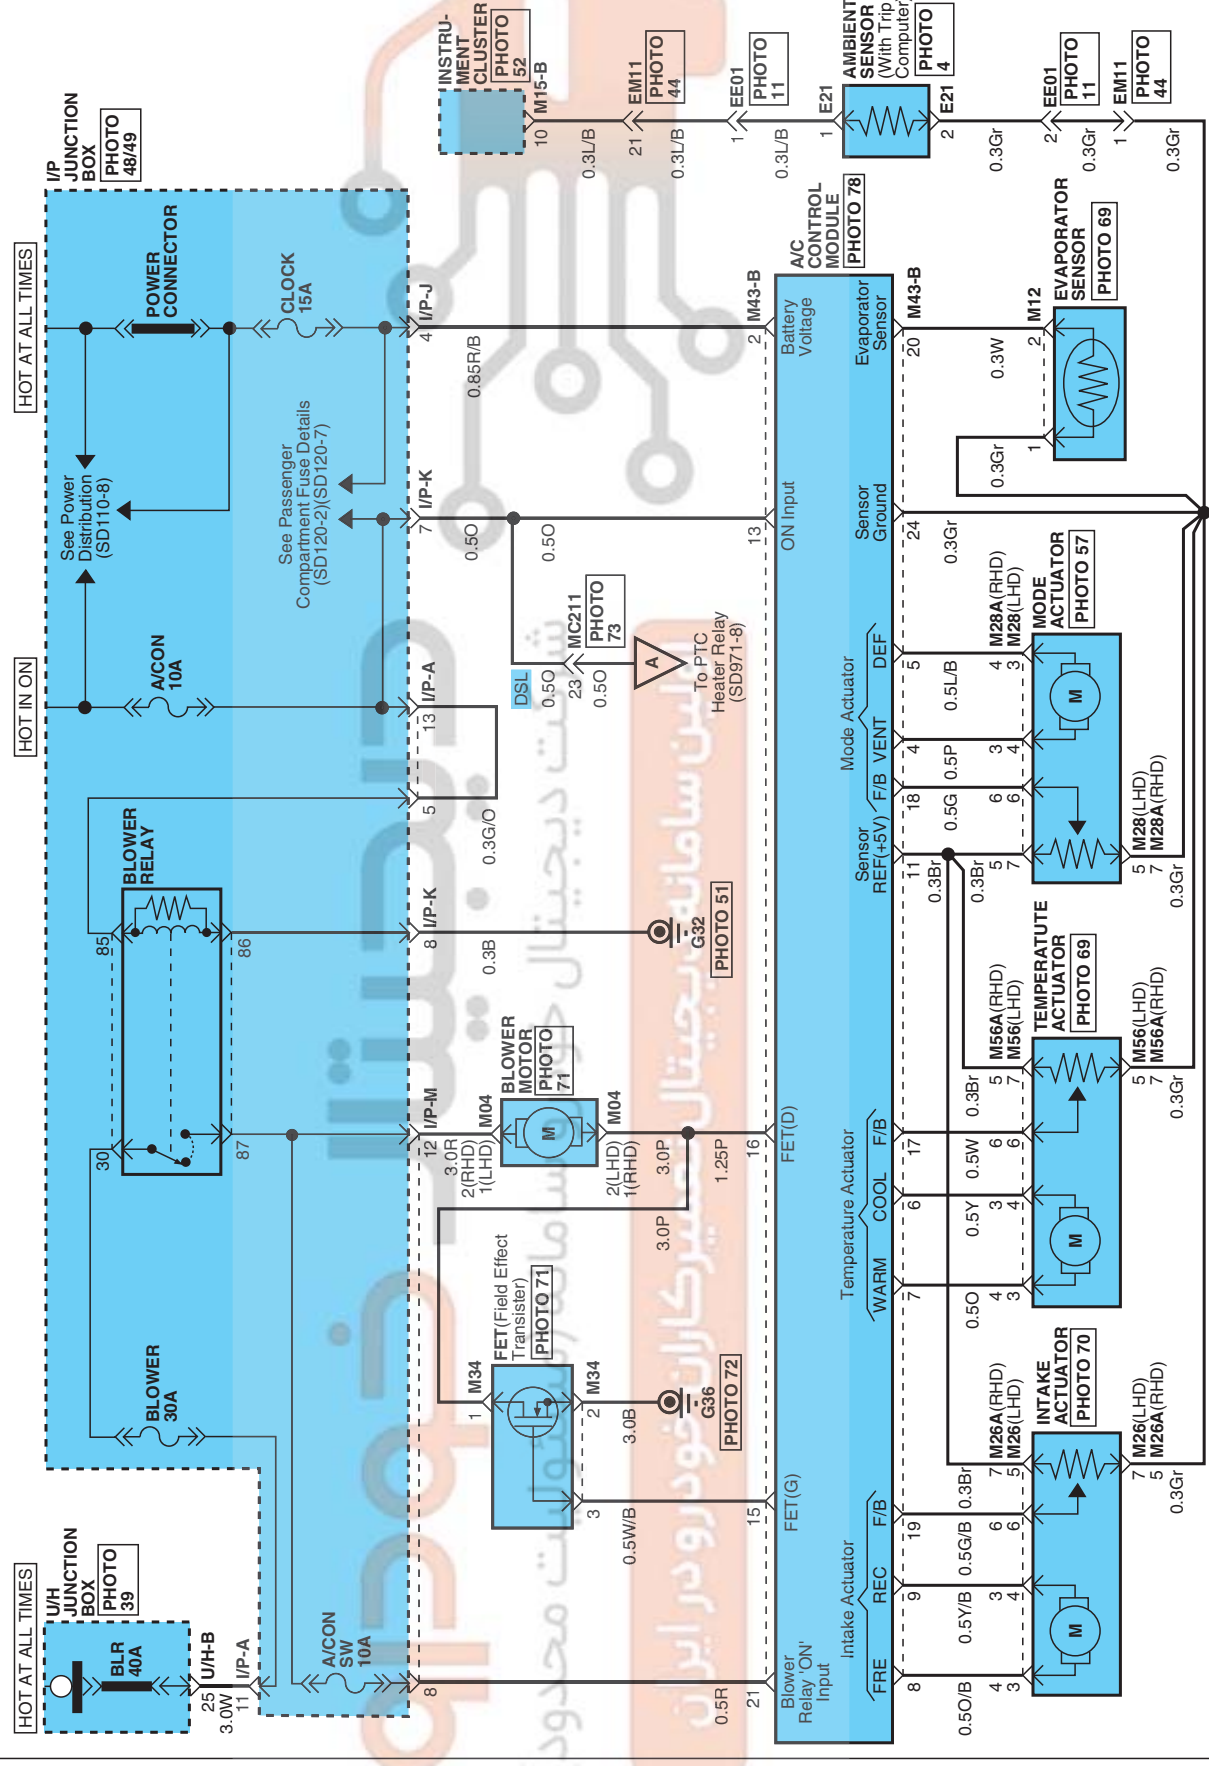


BLOWER & A/C CONTROLS

EC49F24C

BLOWER & A/C CONTROLS (MANUAL) (1)

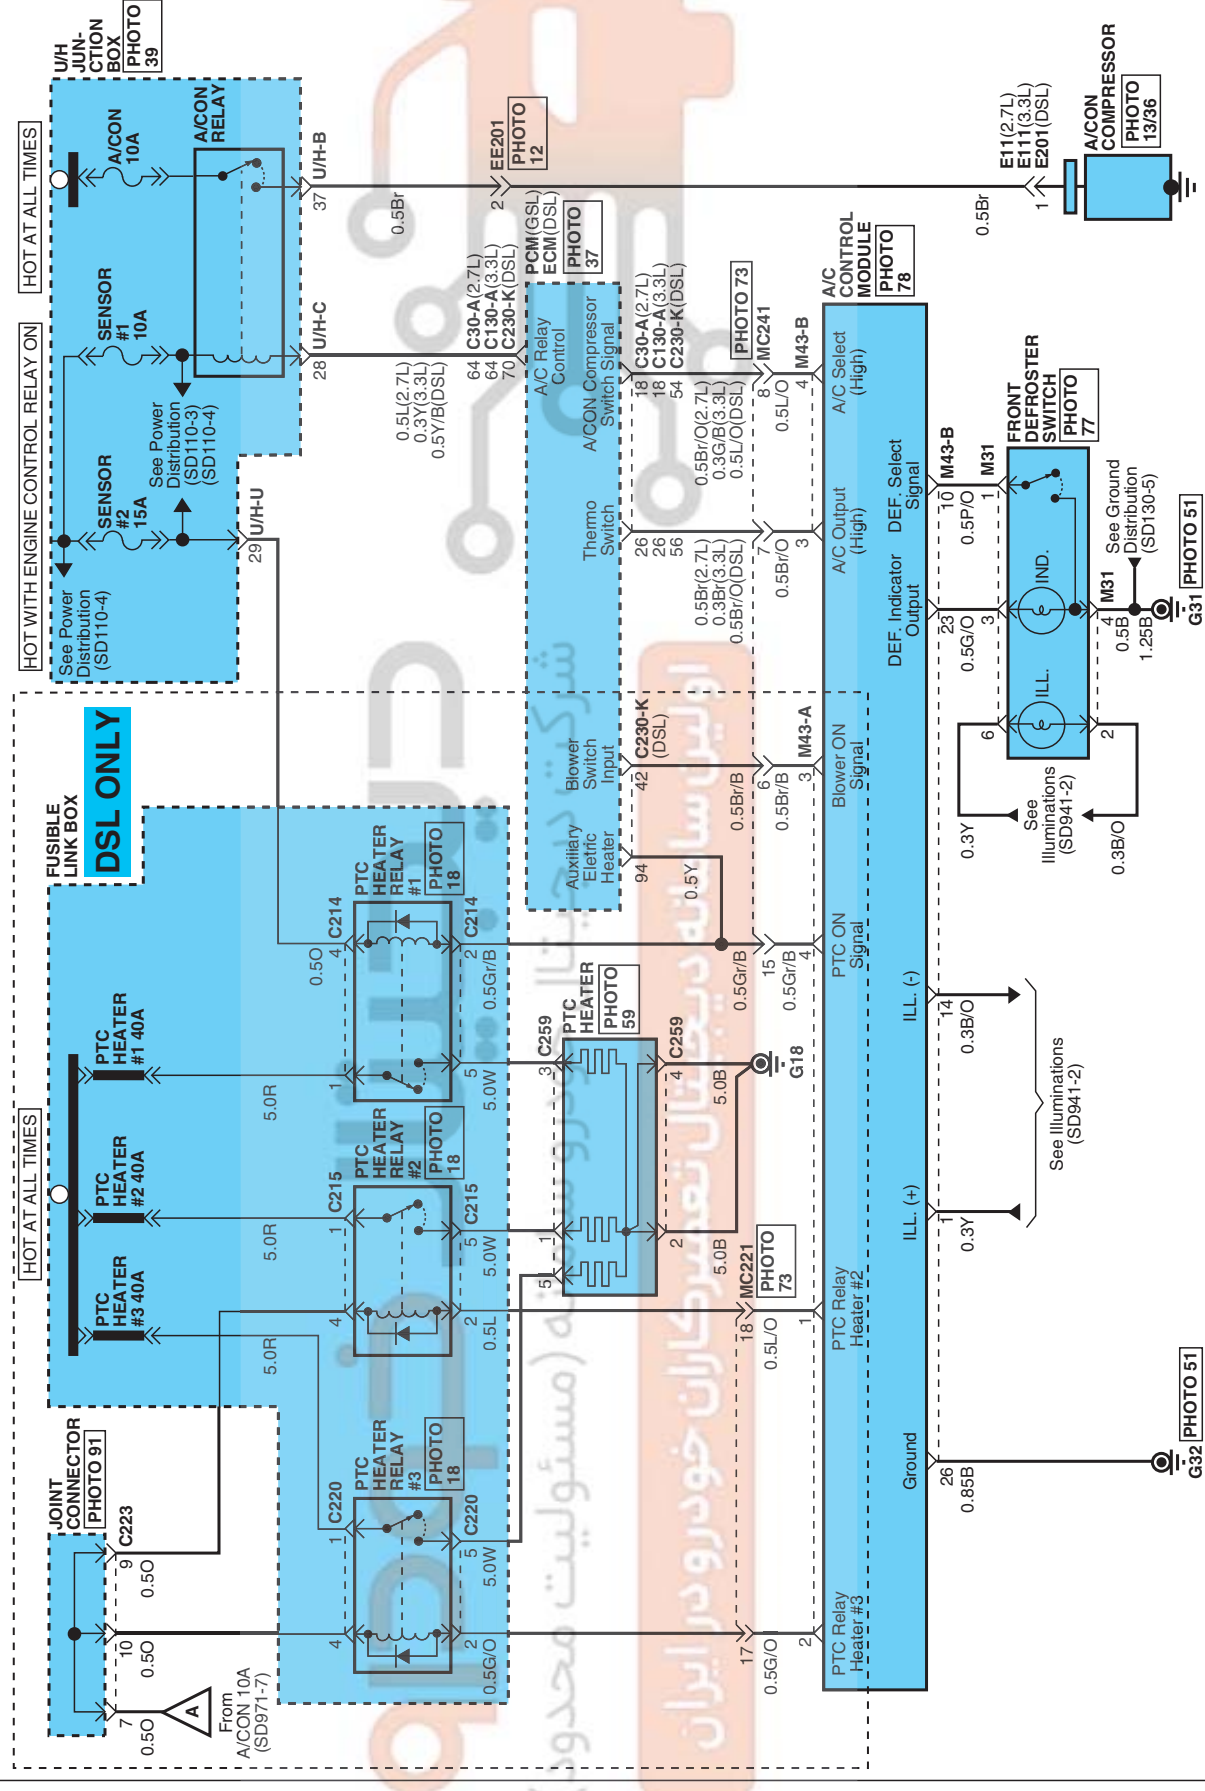
SD971-7



BLOWER & A/C CONTROLS

BLOWER & A/C CONTROLS (MANUAL) (2)

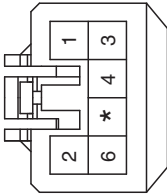
 
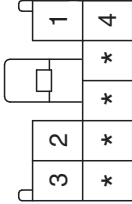
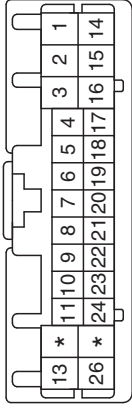
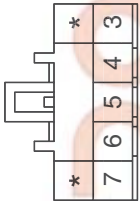
SD971-8



BLOWER & A/C CONTROLS

BLOWER & A/C CONTROLS (MANUAL) (3)			SD971-9		
C30-A		C130-A			
PKD_ECU_80F_Gr_NR		PKD_ECU_80F_Gr_3			
C214		C215		C220	
CR05F031	CR05F031	CR05F031	CR05F031	CR05F031	AMP_375_05F_B
E11		E21		E201	
PB625_01027	PB625_01027	KET_SWP_02F_B	PB625_01027	PB625_01027	KET_250_02F_W
M12		M15-B		M26/M26A	
KET_090II_02F_W_L	KET_090II_02F_W_L	AMP_040M2_16F_B	KUM_CDR_07F_B	KUM_CDR_07F_B	KUM_CDR_07F_W

BLOWER & A/C CONTROLS

BLOWER & A/C CONTROLS (MANUAL) (4)				SD971-10
M31 	M34 	M43-A 	M43-B 	KET_0407_26F_W
M56/M56A 	KUM_DSD_03F_B	KUM_CDR_07F_W	BLANK	BLANK