

FUSE & RELAY INFORMATIONS


FUSE & RELAY INFORMATIONS (3)

SD100-3

ENGINE COMPARTMENT JUNCTION BLOCK

LAYOUT

< FRONT >

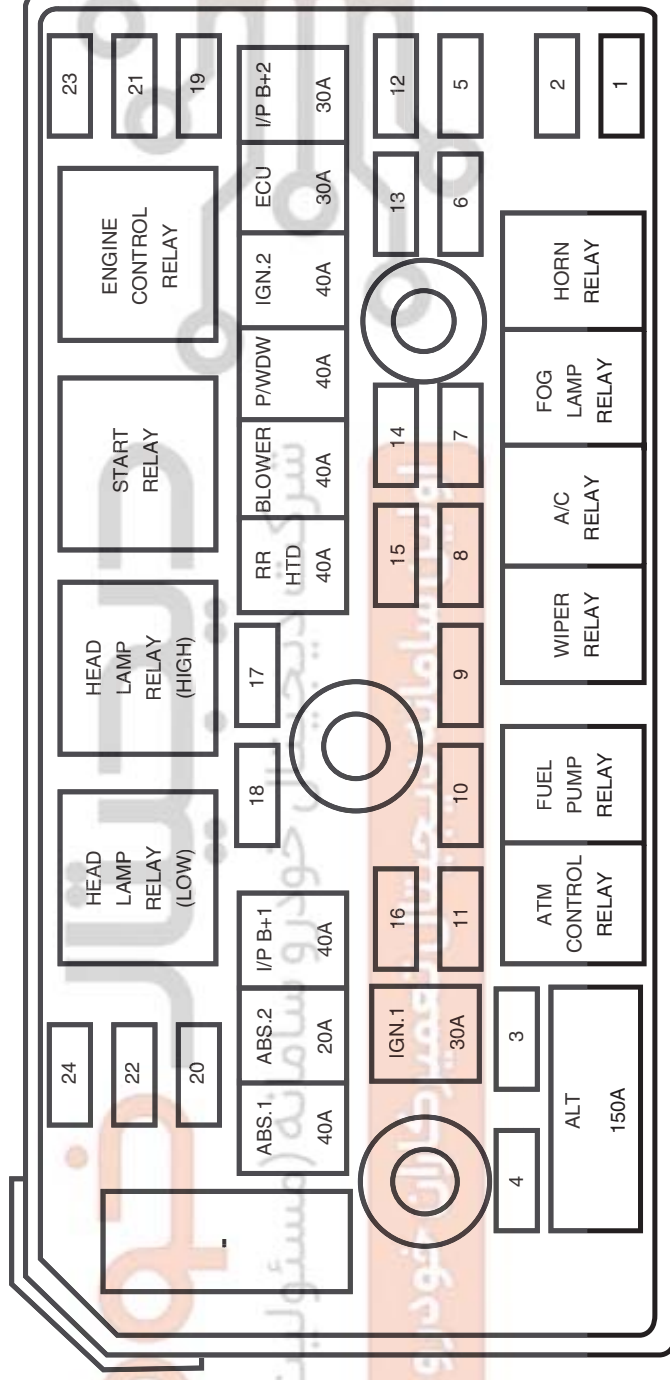

※ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATIONS

FUSE & RELAY INFORMATIONS (4)

SD100-4

CIRCUIT

Description	(A)	Circuit Protected
ABS.1	40A	ABS/ESP control module, Multipurpose check connector
ABS.2	20A	ABS/ESP control module, Multipurpose check connector
I/P B+1	40A	Fuse 23, 24, 30, 31, 32, 33, 34, 35
RR HTD	40A	Defogger relay
BLOWER	40A	Blower relay
P/WDW	40A	Power window relay, Fuse 16
IGN.2	40A	Start relay, Ignition switch (IG2, START)
ECU	30A	Engine control relay
I/P B+2	30A	Power connector. 1/2, Fuse 21, 22
IGN.1	30A	Ignition switch (ACC, IG1)
ALT	150A	Fusible link (ABS.1, ABS.2, RR HTD, BLOWER)
1 HORN	15A	Horn relay
2 TAIL LAMP	20A	Tail lamp relay
3 ECU	10A	PCM (GSL 3.3L)
4 IG1	10A	TCM (DSL)
5 DRL	15A	DRL control module, Burglar horn relay
6 FR FOG	15A	Front fog lamp relay
7 A/CON	10A	A/C relay
8 F/PUMP	20A	Fuel pump relay
9 DIODE	-	(SPARE)
10 ATM	20A	ATM control relay
11 STOP	15A	Stop lamp switch
12 HID LO RH	15A	(SPARE)
13 SUN ROOF	15A	Sunroof control module
14 H/LP WASHER	20A	Head lamp washer motor
15 H/LP HI	20A	Head lamp relay (High)
16 ECU(B+)	10A	PCM (GSL), TCM (DSL)
17 SNSR.3	10A	A/C relay, Cooling fan relay, Injectors (GSL), Lambda sensor (DSL)
18 SNSR.1	15A	Mass air flow sensor, Oil control valve, SMATRA, Camshaft position sensor
19 SNSR.2	15A	Fuel pump relay, Oxygen sensor (GSL), VGT actuator (DSL)
20 B/UP	10A	Back-up lamp switch, Pulse generator, Vehicle speed sensor, Transaxle range switch
21 IGN COIL	20A	Ignition coils, condenser
22 ECU(IG1)	10A	PCM (GSL)
23 H/LP LO	20A	Head lamp relay (Low)
24 ABS	10A	ABS/ESP control module, Multipurpose check connector

✘ USE THE DESIGNATED FUSE ONLY