


SQRD4G15B Cooling System

Circuit Diagram (Page 1 of 1)

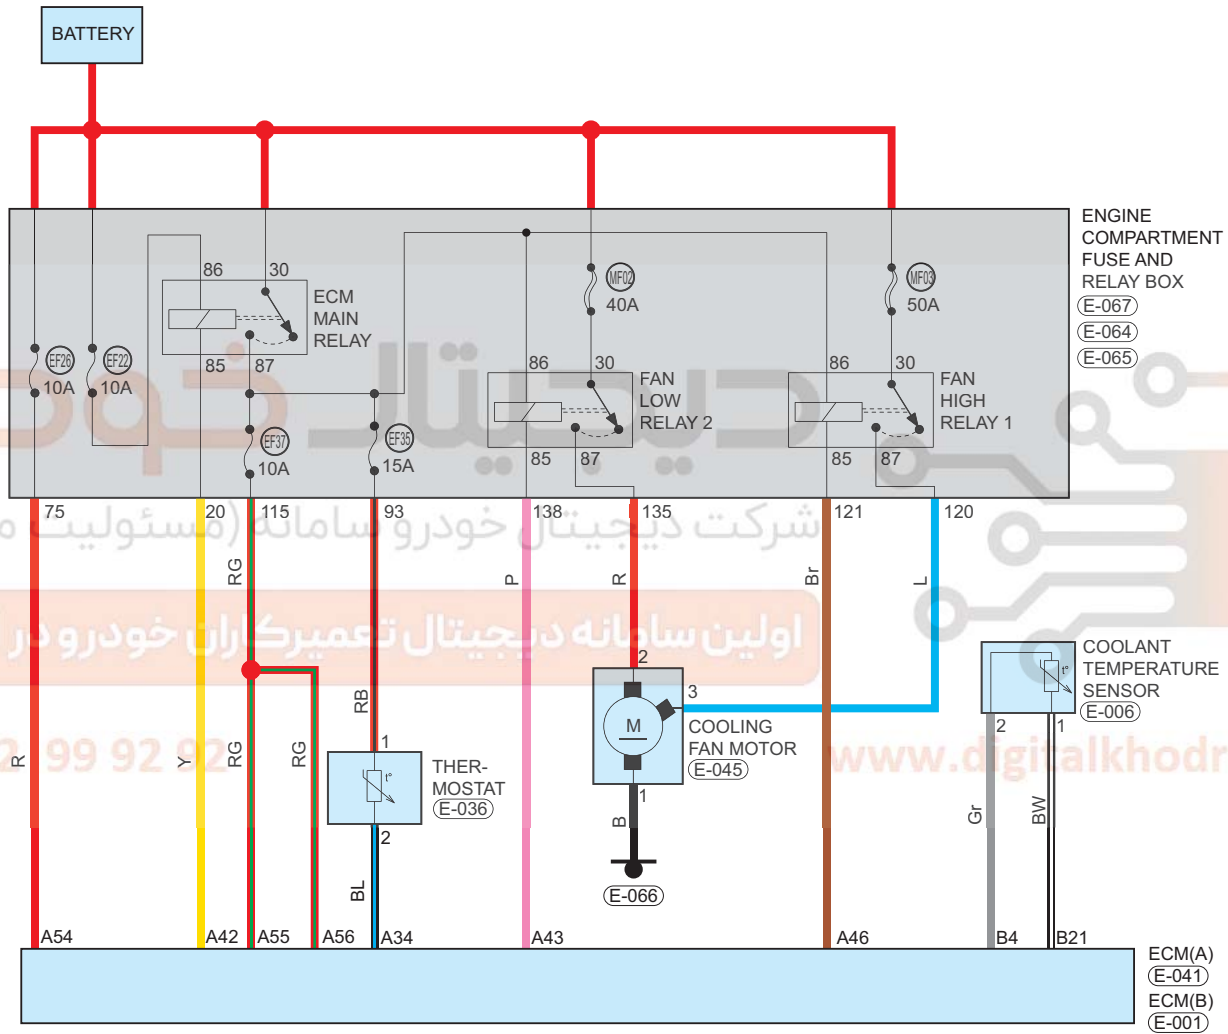

02 09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	08-5 (MT) 08-7 (AT)	E-064	08-5 (MT) 08-7 (AT)	E-065	08-5 (MT) 08-7 (AT)
E-036	08-5 (MT) 08-7 (AT)	E-066	08-5 (MT) 08-7 (AT)	E-045	08-5 (MT) 08-7 (AT)
E-006	08-3	E-041	08-5 (MT) 08-7 (AT)	E-001	08-3

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse and Relay Box
EF26	06-2	Engine Compartment Fuse and Relay Box
EF35	06-2	Engine Compartment Fuse and Relay Box
EF37	06-2	Engine Compartment Fuse and Relay Box
MF02	06-2	Engine Compartment Fuse and Relay Box
MF03	06-2	Engine Compartment Fuse and Relay Box
ECM Main Relay	06-2	Engine Compartment Fuse and Relay Box
Fan Low Relay	06-2	Engine Compartment Fuse and Relay Box
Fan High Relay	06-2	Engine Compartment Fuse and Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-067	12-6	E-064	12-5	E-065	12-5
E-036	12-4	E-066	12-5	E-045	12-4
E-006	12-2	E-041	12-4	E-001	12-2