

S.G.N.

8410-04 INTERIOR FUSE BOX

1) Mounting Location

The interior fuse box is located on the left-hand side of the instrument panel and should be removed together with main wiring.



2) Capacity and Name of Interior Fuse Box

