


1462-01 STARTING / CHARGING

1) G16DF

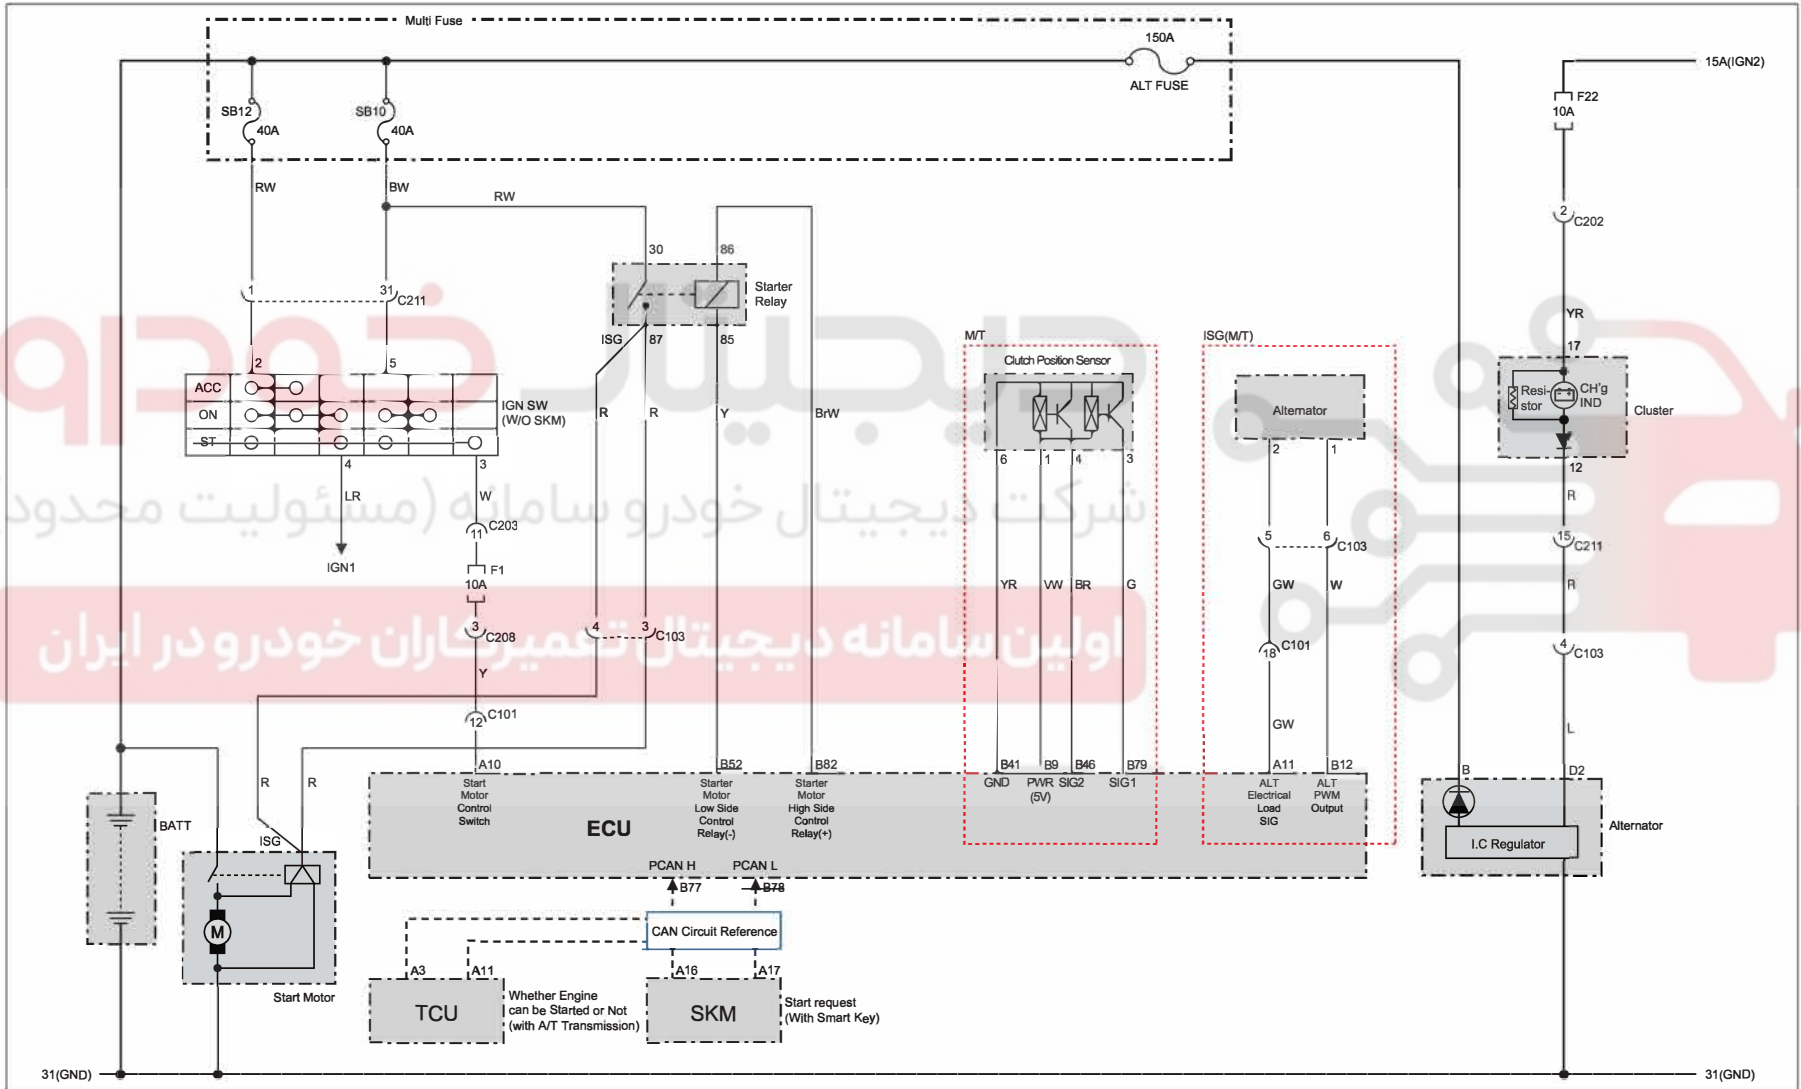

1) CONNECTOR

Connector Number (Pin Number/Color)	Connecting Wiring Harness	Connector Position	Remark
C101 26 Black	W/H Eng Main - W/H Eng Room	Under ECU Bracket	G16DF
C103 4 Black	W/H Eng Compartment - W/H BATT	Under Battery Tray	
C103 6 Black	W/H Eng Compartment - W/H BATT	Under Battery Tray	ISG
C202 16 White	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C203 18 White	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C208 18 White	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C211 41 White	W/H Eng Room - W/H IP (Main)	Inside of Driver Cowl Side	

2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

