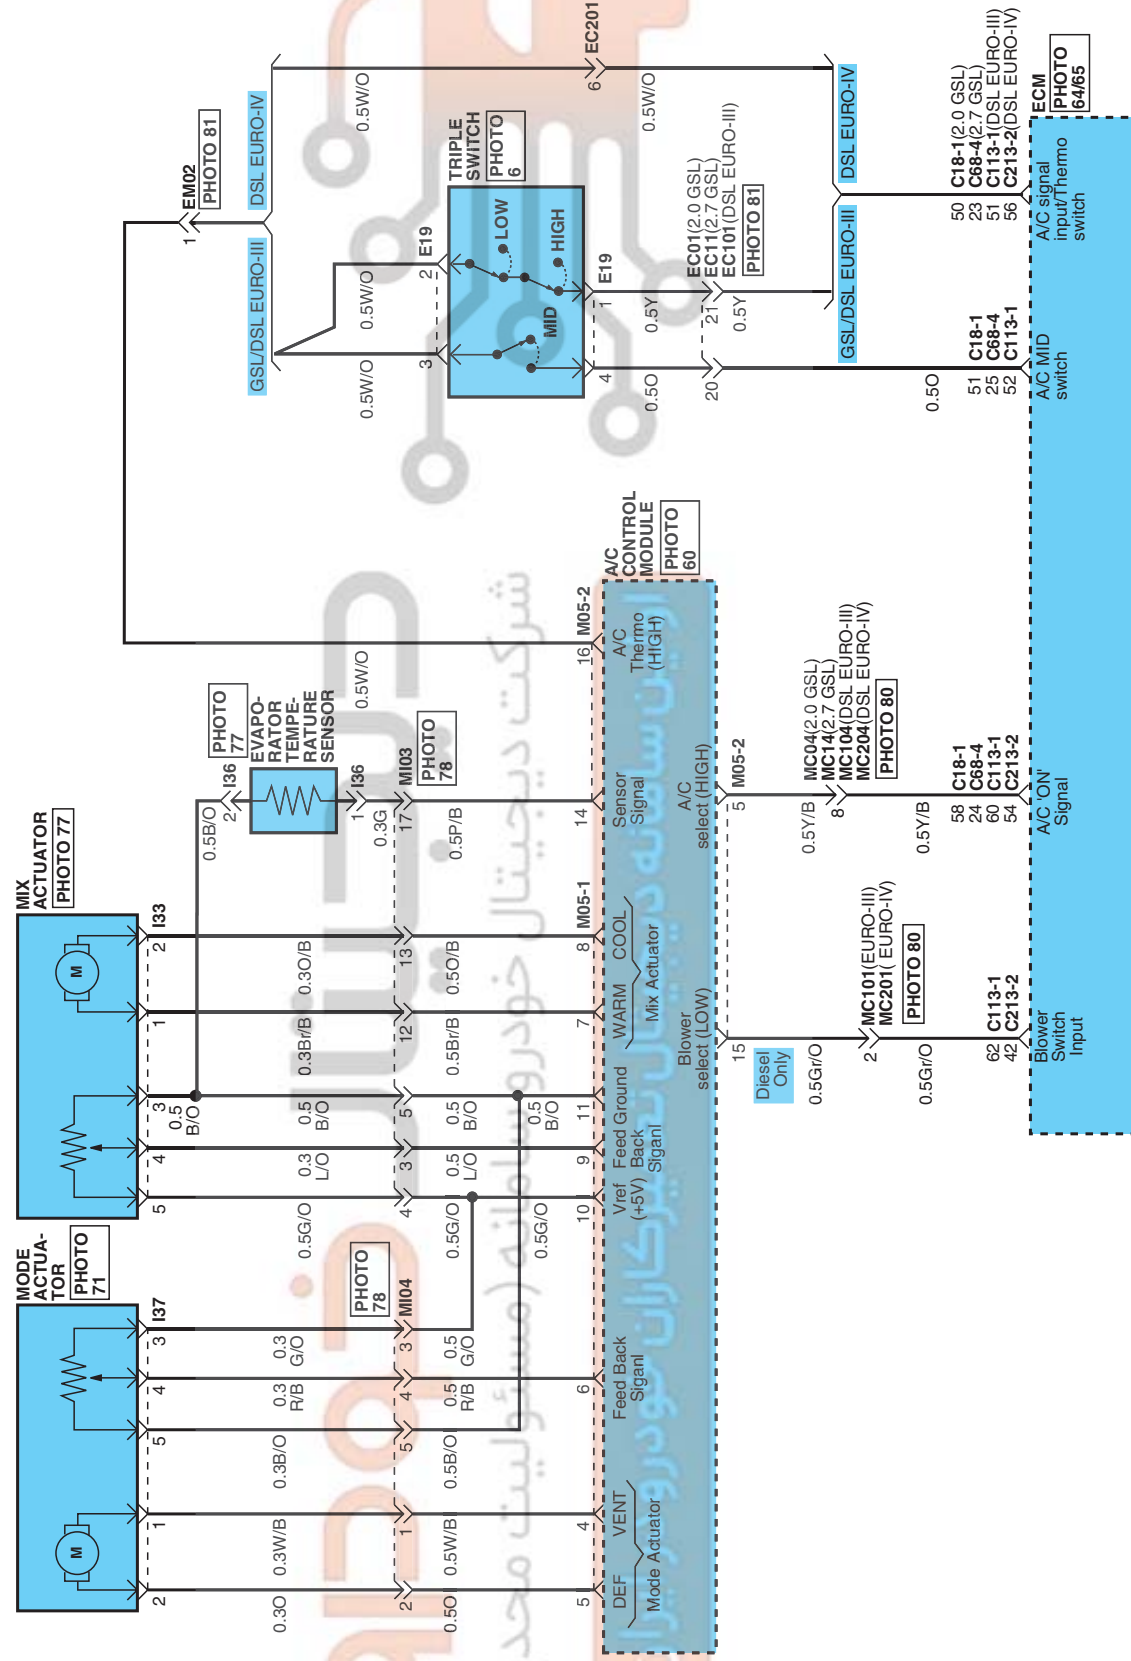


BLOWER & A/C CONTROLS

BLOWER & A/C CONTROLS (MANUAL) (2)

SD971-8

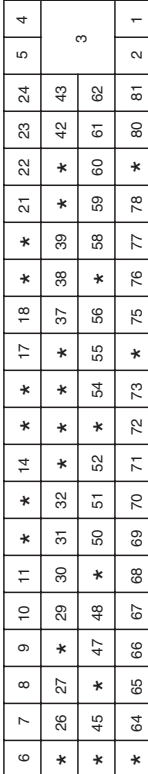
 
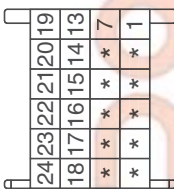
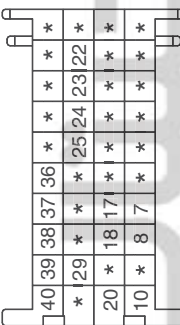
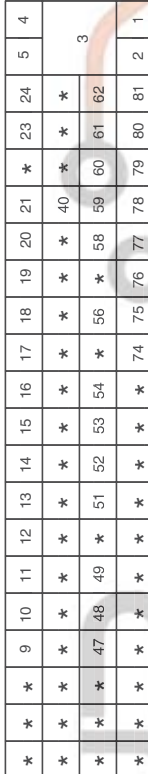
 
 
 
 
 
 
 
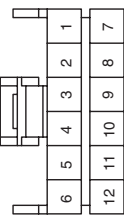
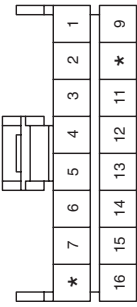


BLOWER & A/C CONTROLS (MANUAL) (3)

C18-1, JC04 : 2.0 GSL
C68-2, C68-4, JC14 : 2.7 GSL
C113-1, MC103, JC104 : DSL EURO-III
C213-2, MC203, JC204 : DSL EURO-IV



BLOWER & A/C CONTROLS

BLOWER & A/C CONTROLS (MANUAL) (4)										SD971-10									
C04					C18-1					C58					KET_SWP_01F_B				
															KET_SWP_01F_B				
KUM_NNWP_01F_B					KET_ECU_81F					KET_ECU_81F					KET_ECU_81F				
C68-2 					C68-4 					C113-1 					KET_ECU_81F				
AMP_ECU_24F_B_134P					AMP_ECU_40F_B_134					AMP_ECU_81F					KET_ECU_81F				
C134/C234 					C153/C253 					E19 					E104/E204 				
PRONER_960103_89129					AMP_ECU_40F_B_134					AMP_EJUMP_04F_B					KUM_NNWP_01F_B				
I30 					I31 					I32 					I33 				
KUM_PH776_02025					KET_MG612109					KUM_PH776_04027					KUM_PH845_07020				
I35/I37 					I36 					M05-1 					M05-2 				
KUM_PH845_07020					AMP_174463_1					AMP_040M1_12F_B					AMP_040M1_16F_B				