


Air Conditioning

Automatic A/C System

Circuit Diagram (Page 1 of 5)

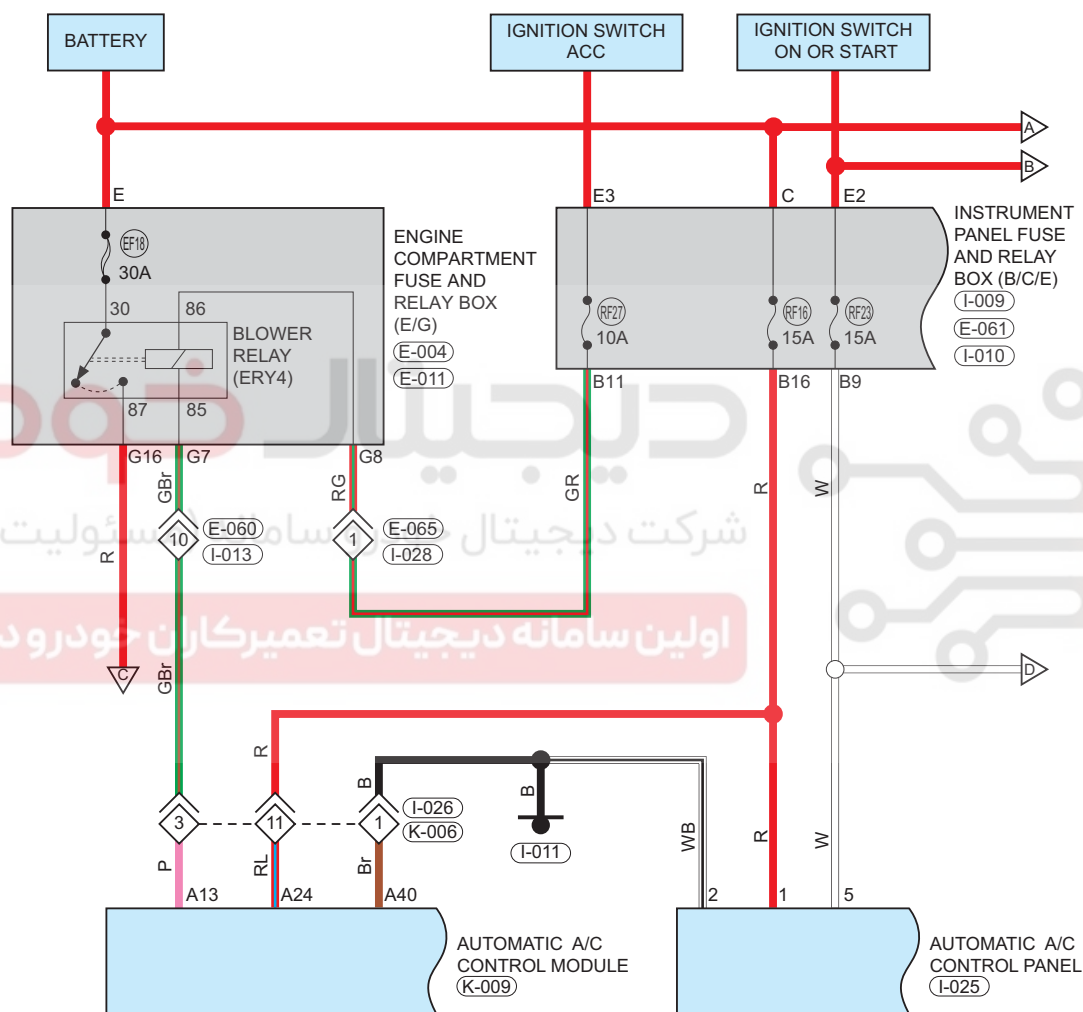

09

ET11091301

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-004	08-3	I-009	08-9	K-009	08-24
E-011	08-3	I-010	08-9	I-011	08-9
E-061	08-3	I-025	08-9		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF18	06-4	Engine Compartment Fuse and Relay Box
Blower Relay (ERY4)	06-4	Engine Compartment Fuse and Relay Box
RF16	06-15	Instrument Panel Fuse and Relay Box
RF23	06-15	Instrument Panel Fuse and Relay Box
RF27	06-15	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-060, I-013	08-3, 08-9	E-065, I-028	08-3, 08-9	I-026, K-006	08-9, 08-24

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-004	12-2	I-009	12-7	K-009	12-16
E-011	12-2	I-010	12-7	I-011	12-7
E-061	12-2	I-025	12-7	E-060, I-013	12-2, 12-7
E-065, I-028	12-2, 12-7	I-026, K-006	12-7, 12-16		

Circuit Diagram (Page 2 of 5)

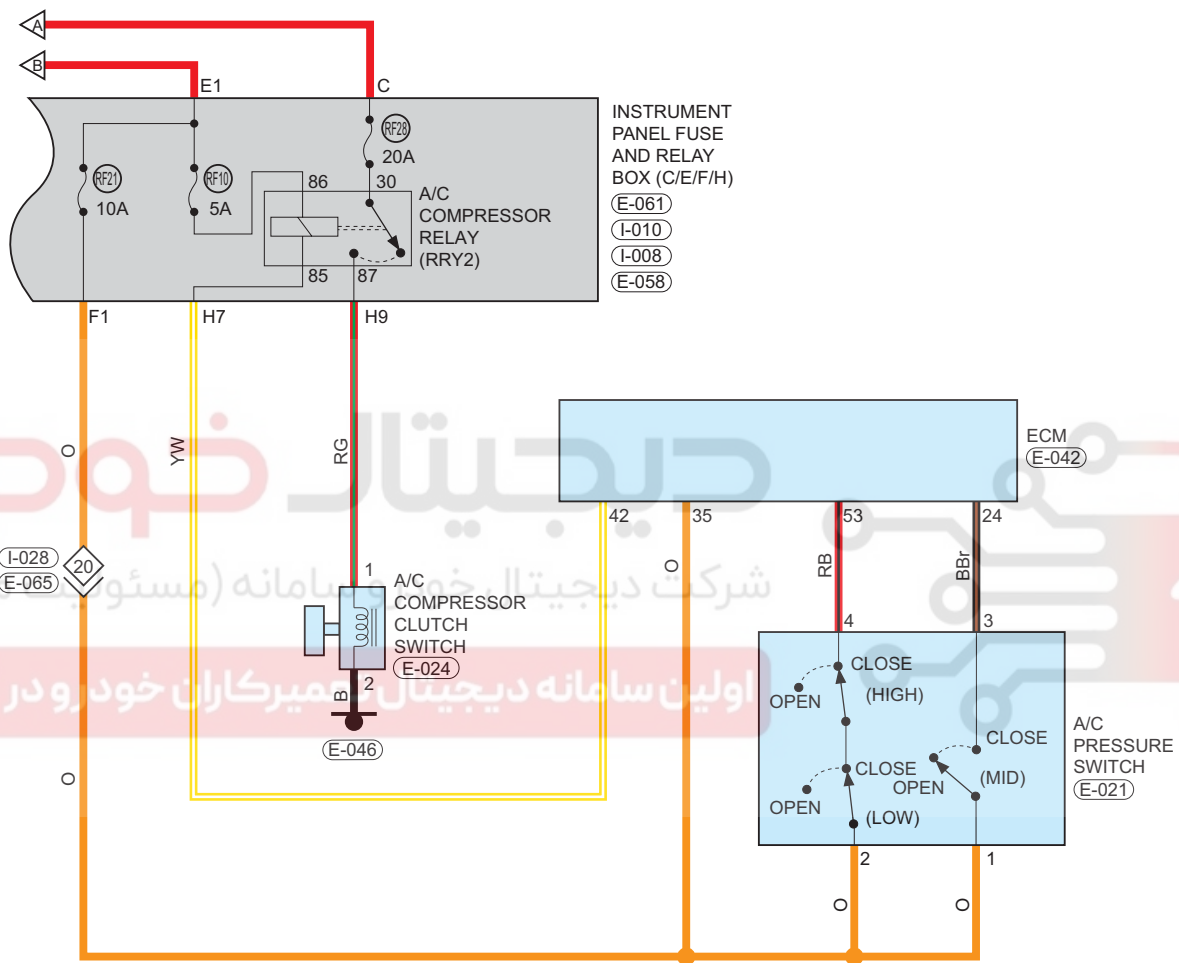

09

ET11091302

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-061	08-3	E-058	08-3	I-010	08-9
I-010	08-9	E-024	08-3	E-046	08-3
E-042	08-3	E-021	08-3		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF10	06-15	Instrument Panel Fuse and Relay Box
RF21	06-15	Instrument Panel Fuse and Relay Box
RF28	06-15	Instrument Panel Fuse and Relay Box
A/C Compressor Relay (RRY2)	06-15	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-028, E-065	08-9, 08-3				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-061	12-2	E-058	12-2	I-010	12-7
I-010	12-7	E-024	12-2	E-046	12-2
E-042	12-2	E-021	12-2	I-028, E-065	12-7, 12-2

Circuit Diagram (Page 3 of 5)

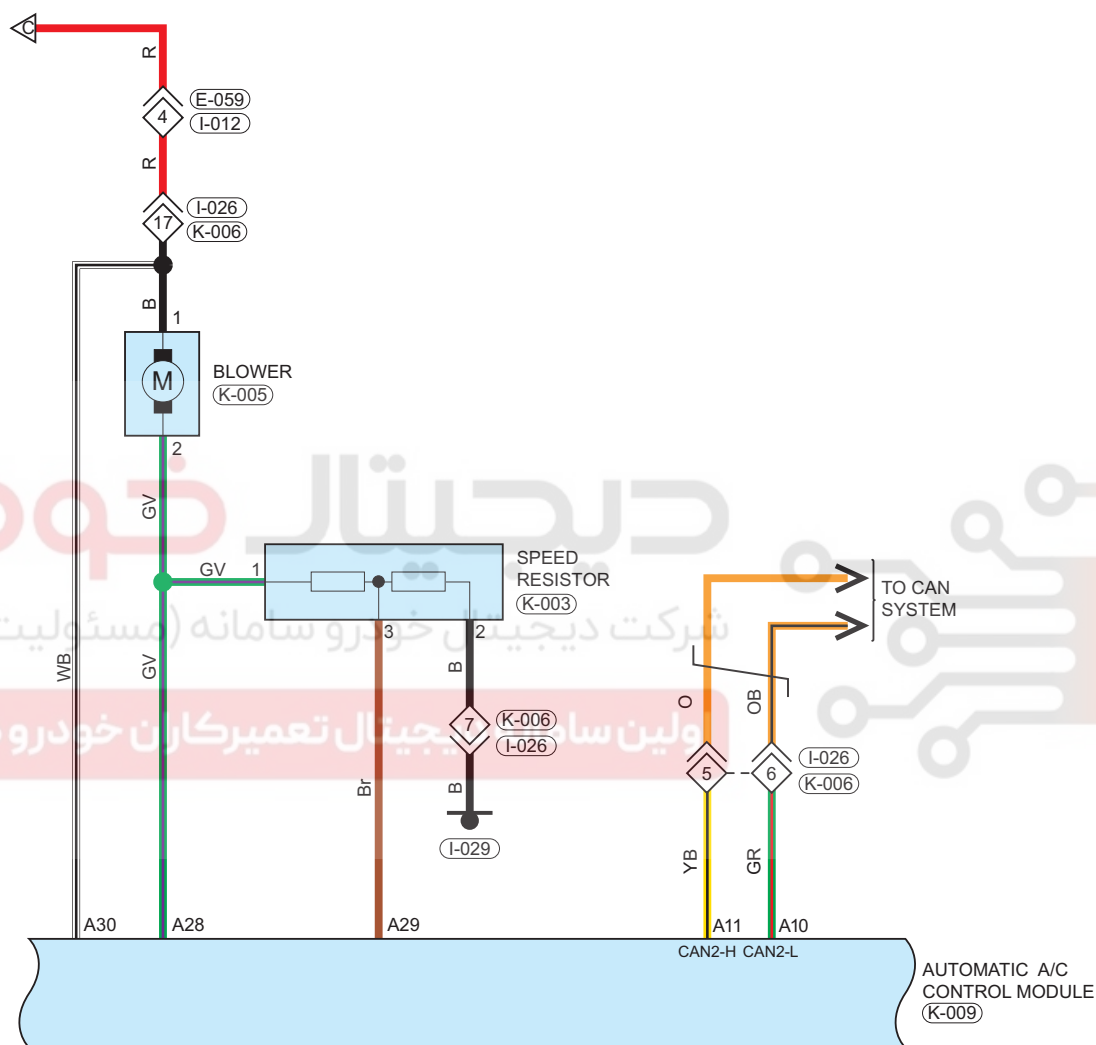

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-005	08-24	K-003	08-24	K-009	08-24

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-059, I-012	08-3, 08-9	I-026, K-006	08-9, 08-24		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-005	12-16	K-003	12-16	K-009	12-16
E-059, I-012	12-2, 12-7	I-026, K-006	12-7, 12-16		


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 4 of 5)

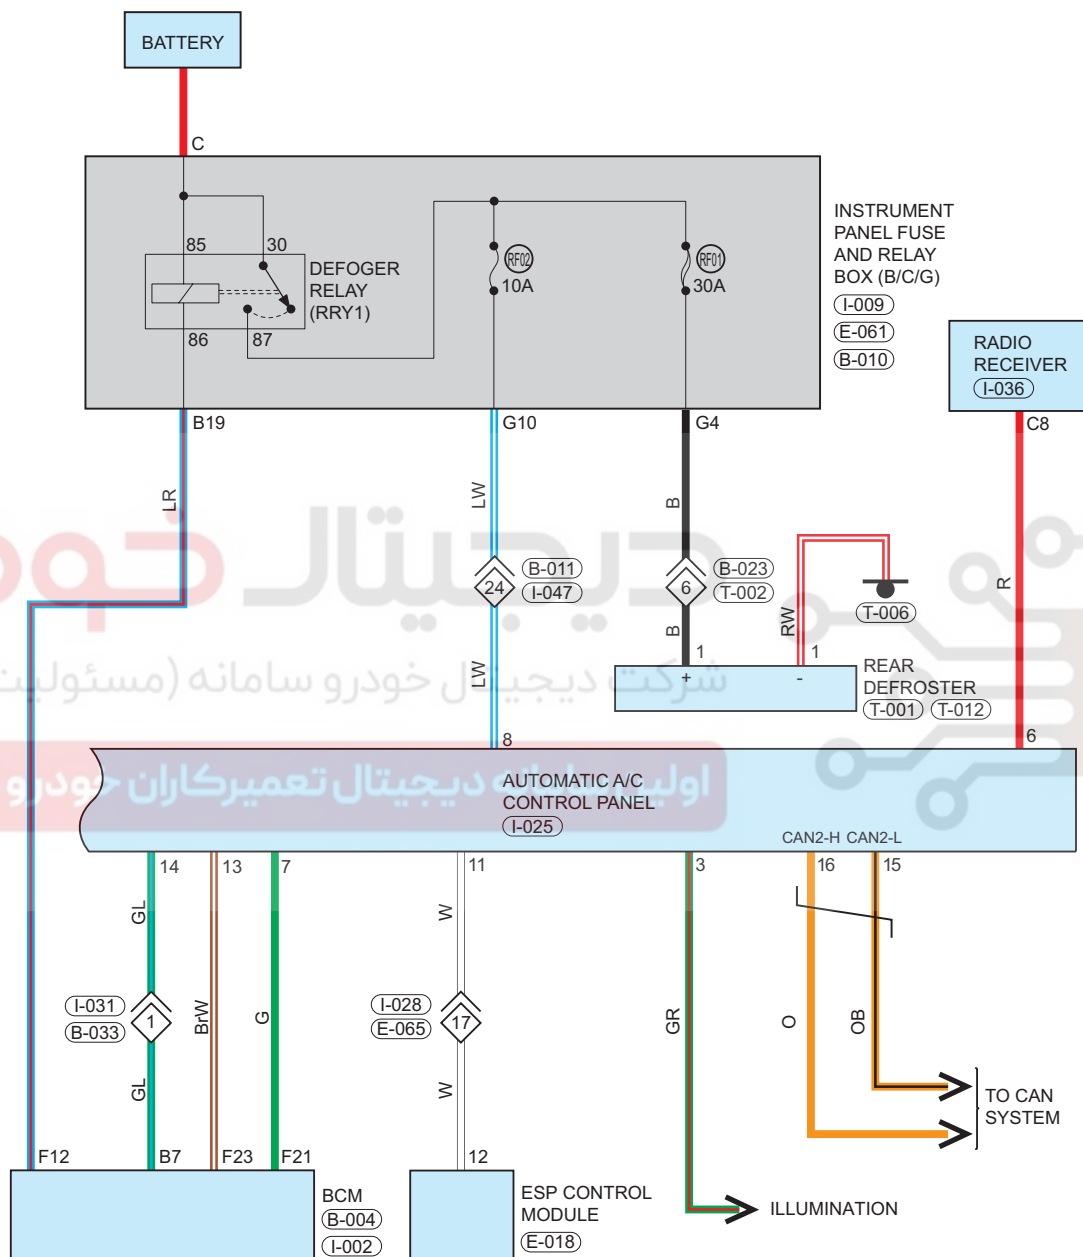

ET11091304

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-009	08-9	E-061	08-3	B-010	08-13
I-036	08-9	T-006	08-22	T-001	08-22
T-012	08-22	I-025	08-9	B-004	08-13
I-002	08-9	E-018	08-3		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF01	06-15	Instrument Panel Fuse and Relay Box
RF02	06-15	Instrument Panel Fuse and Relay Box
Defogger Relay (RRY1)	06-15	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-011, I-047	08-13, 08-9	B-023, T-002	08-13, 08-22	I-031, B-033	08-9, 08-13
I-028, E-065	08-9, 08-3				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-009	12-7	E-061	12-2	B-010	12-10
I-036	12-7	T-006	12-15	T-001	12-15
T-012	12-15	I-025	12-7	B-004	12-10
I-002	12-7	E-018	12-2	I-028, E-065	12-7, 12-2
B-011, I-047	12-10, 12-7	B-023, T-002	12-10, 12-15	I-031, B-033	12-7, 12-10

Circuit Diagram (Page 5 of 5)

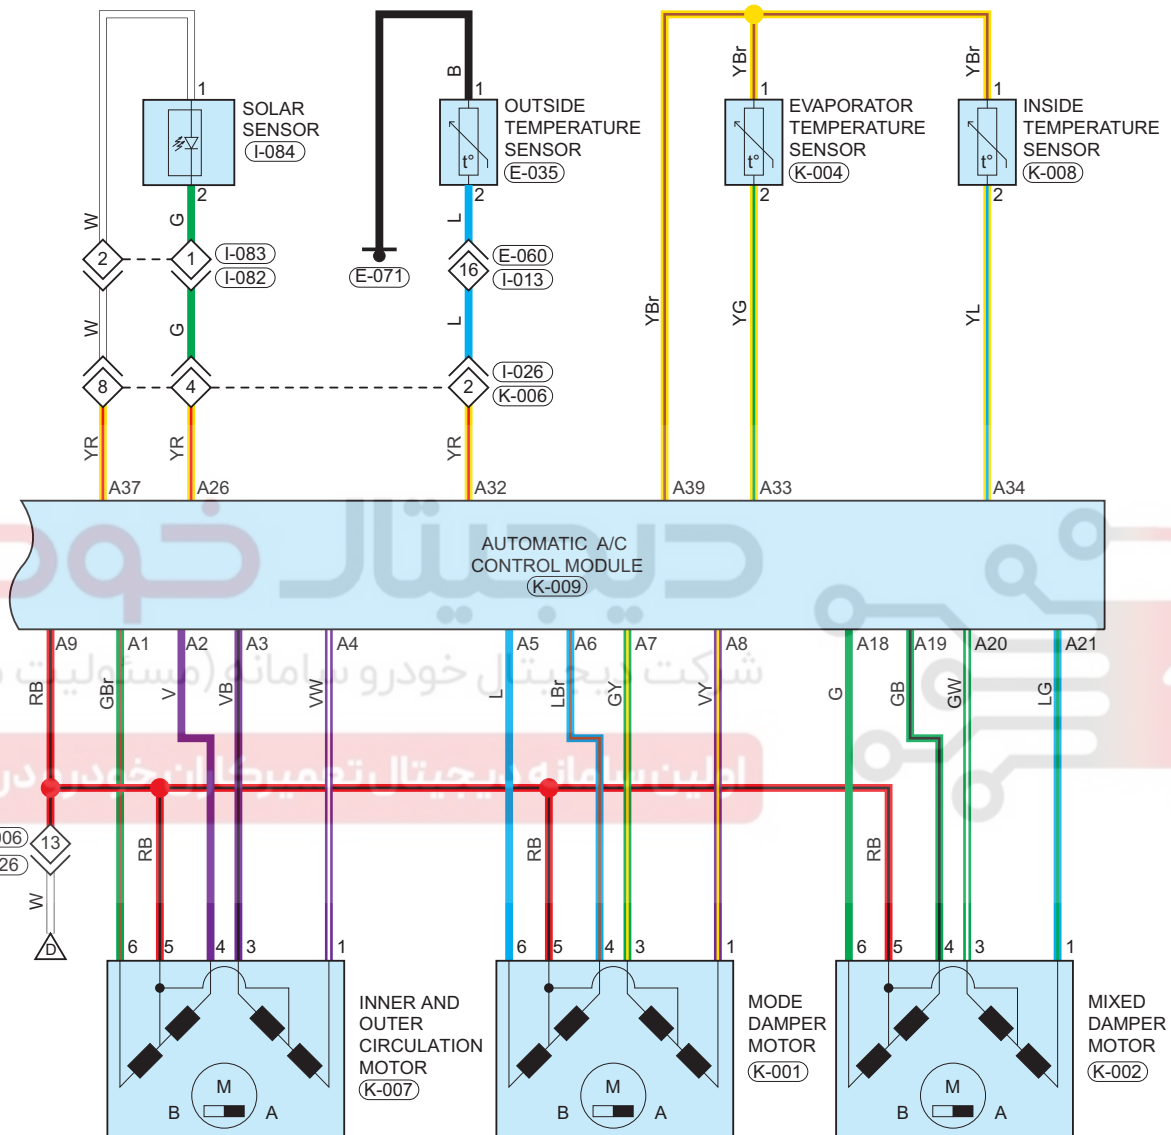

ET11091305