


Power Outside Mirrors

Power Outside Mirrors (2)

SD876-2

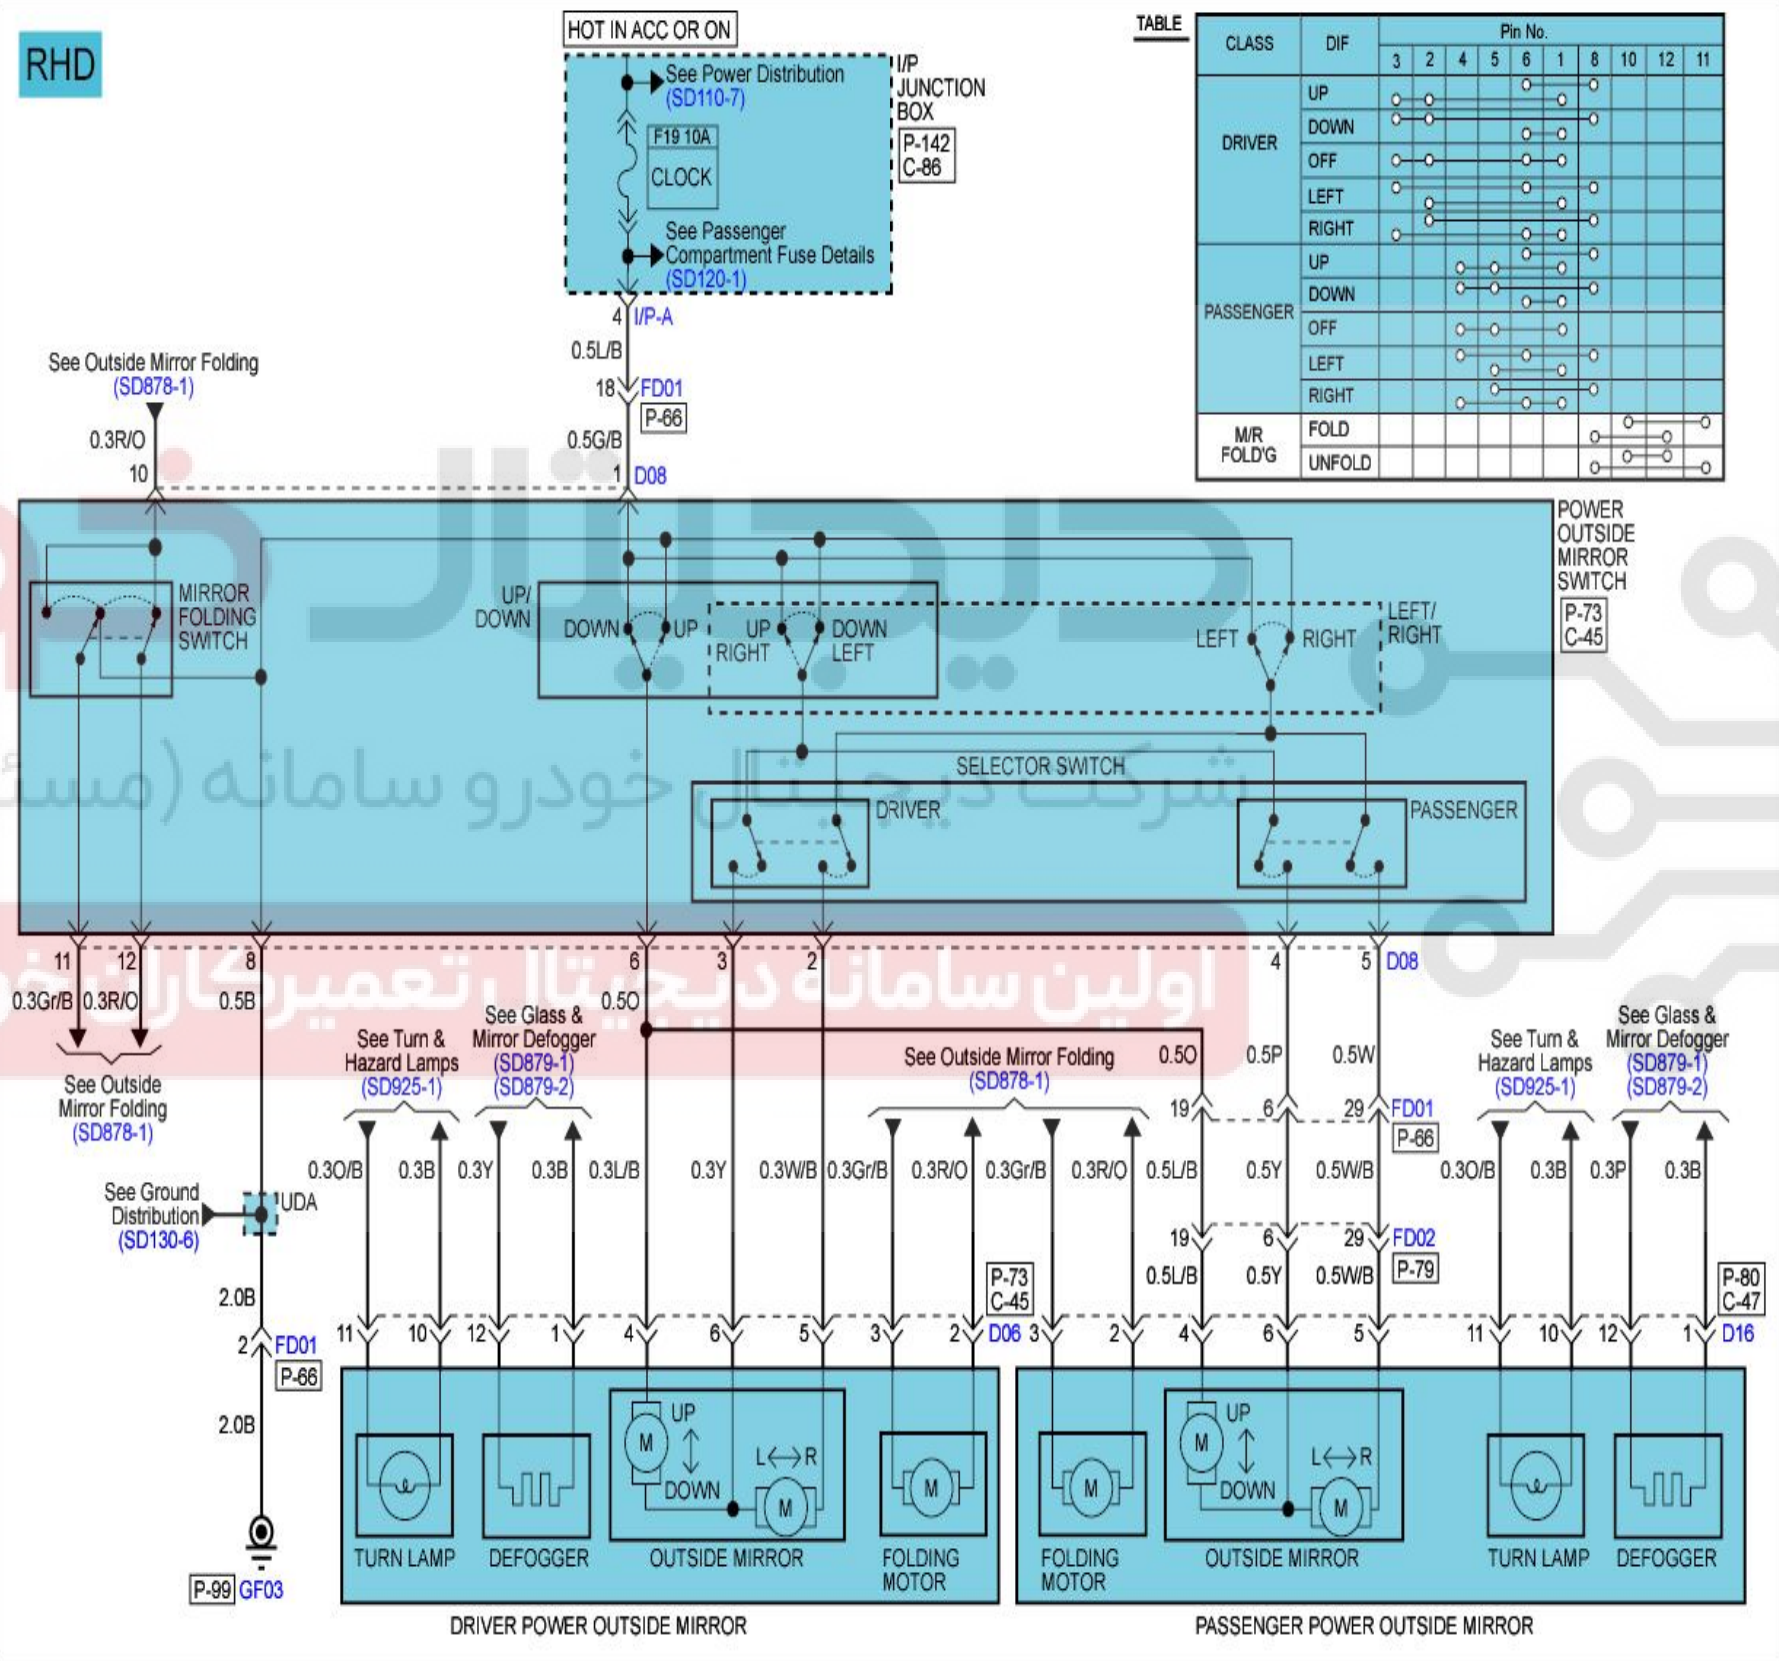



Connector

Component

Harness

D06

Driver Power Outside Mirror

- 12 Male / Black (MLX_040_12M_B_CLIP)


LHD

1. B	Ground (GF02)
2. R/O	Folding Motor (Unfold)
3. Gr/B	Folding Motor (Fold)
4. L/B	Outside Mirror Switch - Up/Down
5. W	Dri. Outside Mirror Switch (HL)
6. P	Dri. Outside Mirror Switch (VL)
7. —	—
8. —	—
9. —	—
10. B	Ground (GF02)
11. O/B	I/P Junction Box - IPS 9 (TWIN)
12. Y	I/P Junction Box - F13 10A

RHD

1. B	Ground (GF03)
2. R/O	Folding Motor (Unfold)
3. Gr/B	Folding Motor (Fold)
4. L/B	Outside Mirror Switch (Up/Down)
5. W/B	Dri. Outside Mirror Switch (HR)
6. Y	Dri. Outside Mirror Switch (VR)
7. —	—
8. —	—
9. —	—
10. B	Ground (GF03)
11. O/B	I/P Junction Box - IPS 9 (TWIN)
12. Y	I/P Junction Box - F13 10A

73. Driver Door

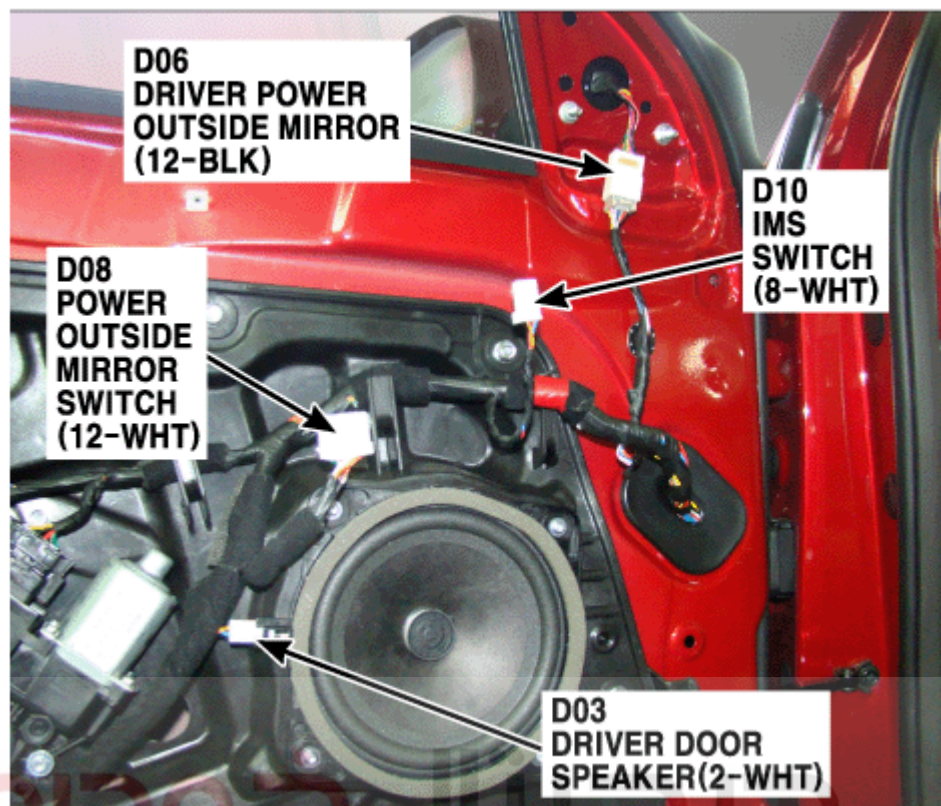

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)


اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Connector	Component	Harness
-----------	-----------	---------

D08 Power Outside Mirror Switch

- 12 Female / White (AMP_0407_12F_W_070)

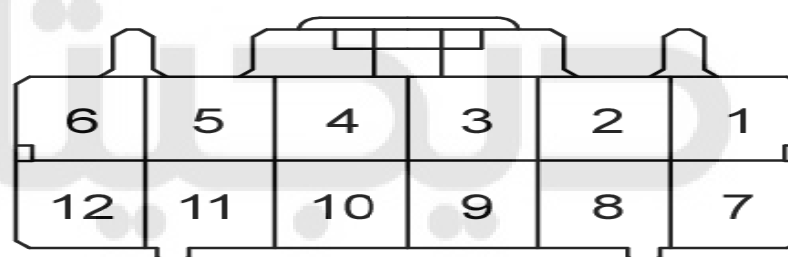


LHD

1. G/B	I/P Junction Box - F19 10A
2. W/B	Pass. Outside Mirror Switch (HR)
3. Y	Pass. Outside Mirror Switch (VR)
4. P	Dri. Outside Mirror Switch (VL)
5. W	Dri. Outside Mirror Switch (HL)
6. O	Up/Down Switch
7. —	—
8. B	Ground (GF02)
9. —	—
10. R/O	I/P Junction Box - F17 10A
11. Gr/B	Mirror Folding Switch
12. R/O	Mirror Unfolding Switch

RHD

1. G/B	I/P Junction Box - F19 10A
2. W/B	Dri. Outside Mirror Switch (HR)
3. Y	Dri. Outside Mirror Switch (VR)
4. P	Pass. Outside Mirror Switch (VL)
5. W/B	Pass. Outside Mirror Switch (HL)
6. O	Up/Down Switch
7. —	—
8. B	Ground (GF03)
9. —	—
10. R/O	I/P Junction Box - F17 10A
11. Gr/B	Mirror Folding Switch
12. R/O	Mirror Unfolding Switch

73. Driver Door

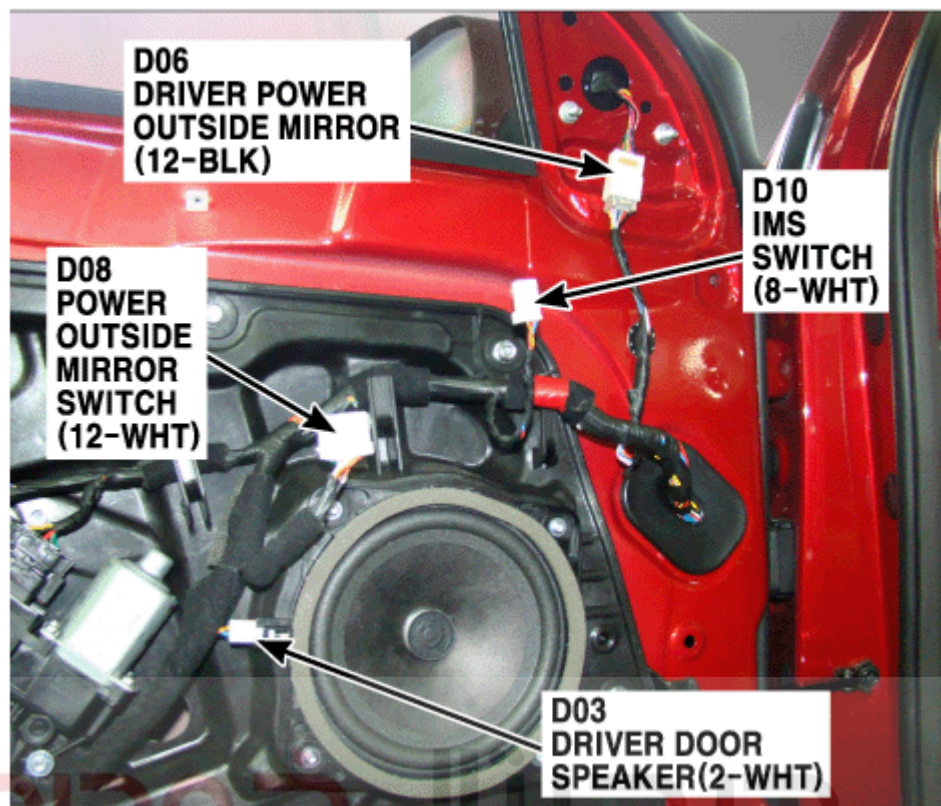

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران