


FUSE & RELAY INFORMATIONS EFD6C51F

FUSE & RELAY INFORMATIONS (1)

PASSENGER COMPARTMENT JUNCTION BLOCK LAYOUT

SD100-1

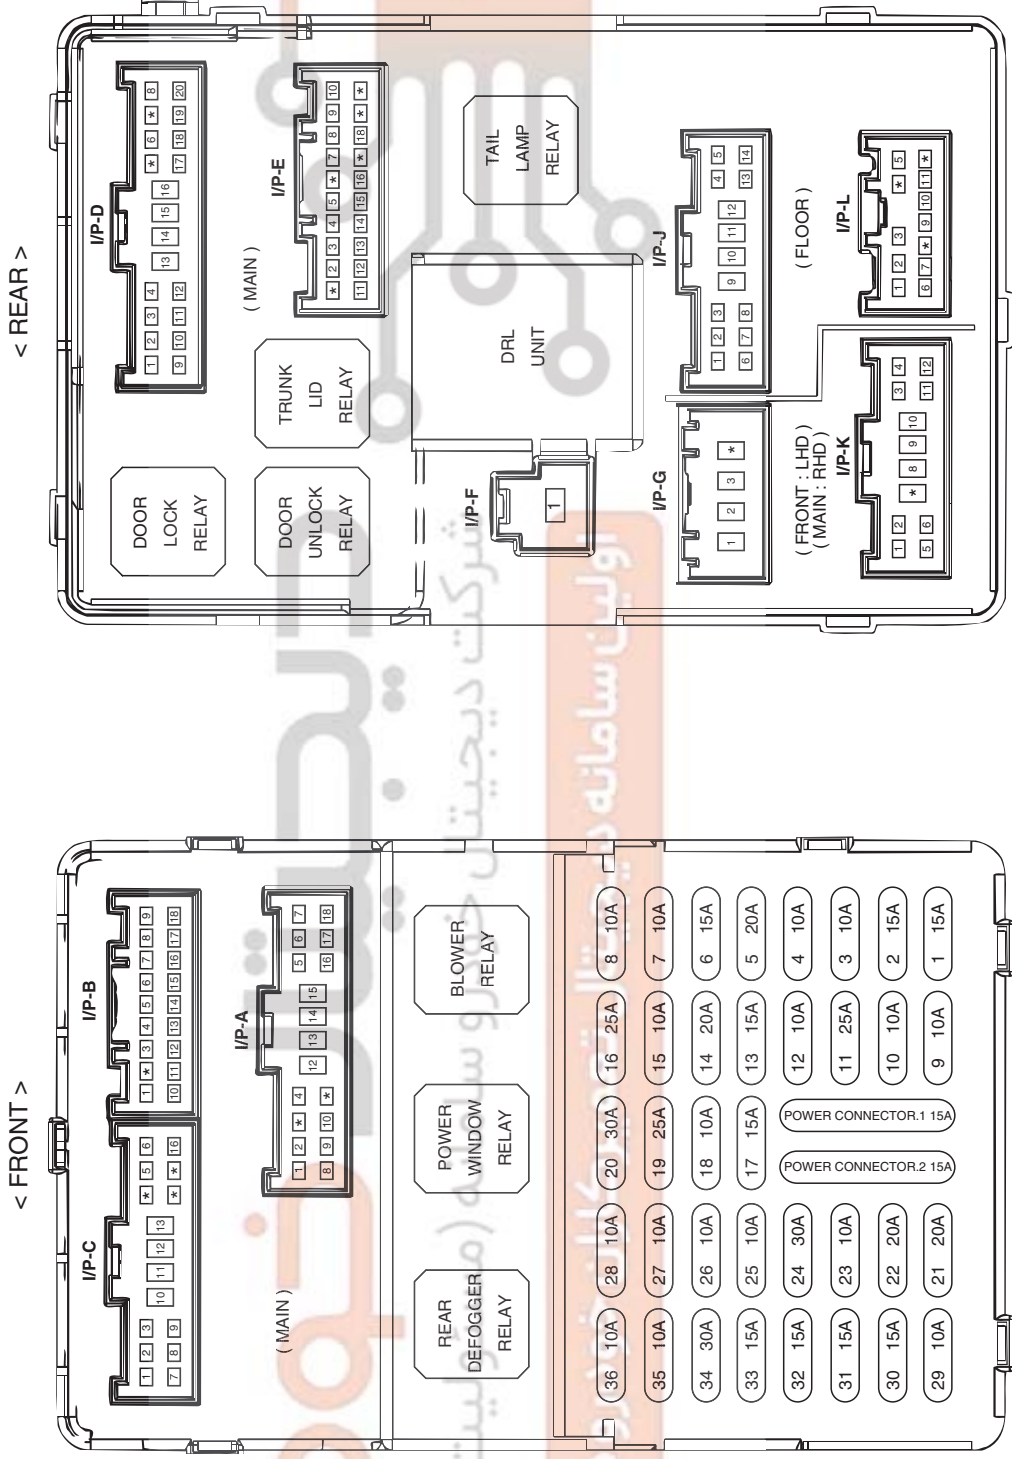

※ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATIONS

FUSE & RELAY INFORMATIONS (2)

SD100-2

CIRCUIT

FUSE	(A)	Circuit Protected
1	15A (SPARE)	
2	15A	Seat warmer switch
3	10A	BCM, Sunroof control module, Electronic chrome mirror, Rheostat
4	10A	Blower relay, Active incar & humidity sensor
5	20A	Cigarette lighter
6	15A (SPARE)	
7	10A	Illumination lamps, Right : License lamp, Rear combination lamp, Head lamp, Glove box lamp
8	10A	Front fog lamp relay, Left : License lamp, Rear combination lamp, Head lamp
9	10A	Head lamp washer relay, Right head lamp leveling actuator
10	10A	DRL control module, Head lamp relay, AQS & ambient sensor, PTC heater relay
11	25A	Wiper & washer
12	10A	A/C control module
13	15A	SRS control module, PAB switch
14	20A	Front accessory socket, Rear power outlet
15	20A	Digital clock, Audio, ATM key lock control module, Power outside mirror & mirror folding
16	25A	Safety window module
17	15A (SPARE)	
18	10A	ATM key lock control module
19	25A	Power window main switch, Left rear power window switch
20	30A	Power window main switch, Right power window switch
21	20A	Audio amp
22	20A	Door lock/unlock relay, Dead lock relay
23	10A	Hazard switch, Hazard relay
24	30A	Power seat manual switch (RHD)
25	10A	Instrument cluster
26	10A	Hazard switch
27	10A	BCM, Instrument cluster, Yaw rate sensor, ESP switch, Pre-Excitation resister
28	10A	AGCS module
29	10A	Burglar alarm relay
30	15A (SPARE)	
31	15A	Rear fog lamp relay
32	15A	Trunk lid relay, Fuel filler door & Trunk lid switch
33	15A (SPARE)	
34	30A	Power seat manual switch (LHD)
35	10A	Sport mode switch, Key solenoid
36	10A	A/C control module, Outside mirror & mirror folding motor
POWER CONNECTOR.1	15A	Audio
POWER CONNECTOR.2	15A	BCM, Digital clock, Instrument cluster, A/C control module, Courtesy lamps

✘ USE THE DESIGNATED FUSE ONLY