


Electrical A/C System (DCT)

Circuit Diagram (Page 1 of 4)

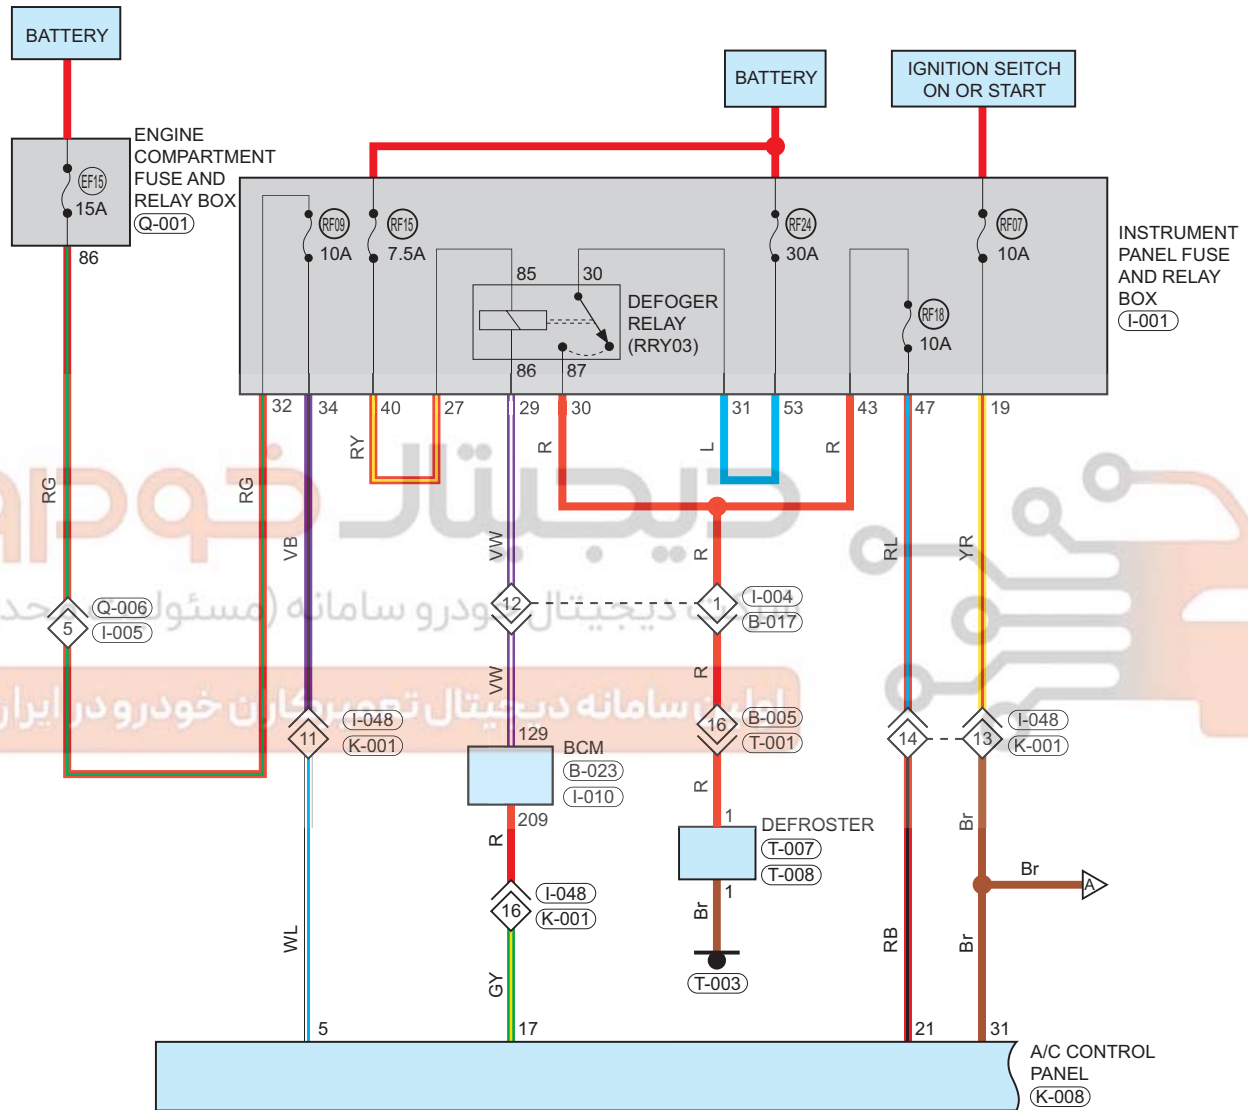

09

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	I-001	08-23	B-023	08-36
I-010	08-23	T-007	08-60	T-008	08-60
T-003	08-60	K-008	08-62		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF15	06-2	Engine Compartment Fuse And Relay Box
RF15	06-8	Instrument Panel Fuse and Relay Box
RF24	06-8	Instrument Panel Fuse and Relay Box
RF18	06-8	Instrument Panel Fuse and Relay Box
RF09	06-8	Instrument Panel Fuse and Relay Box
RF07	06-8	Instrument Panel Fuse and Relay Box
Defogger Relay (RRY03)	06-8	Instrument Panel Fuse and Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-006, I-005	08-10, 08-23	I-048, K-001	08-23, 08-62	I-004, B-017	08-23, 08-36
B-005, T-001	08-36, 08-60				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	I-001	12-4	B-023	12-8
I-010	12-4	T-007	12-16	T-008	12-16
T-003	12-16	K-008	12-13	Q-006, I-005	12-17, 12-4
I-048, K-001	12-4, 12-13	I-004, B-017	12-4, 12-8	B-005, T-001	12-8, 12-16

Circuit Diagram (Page 2 of 4)

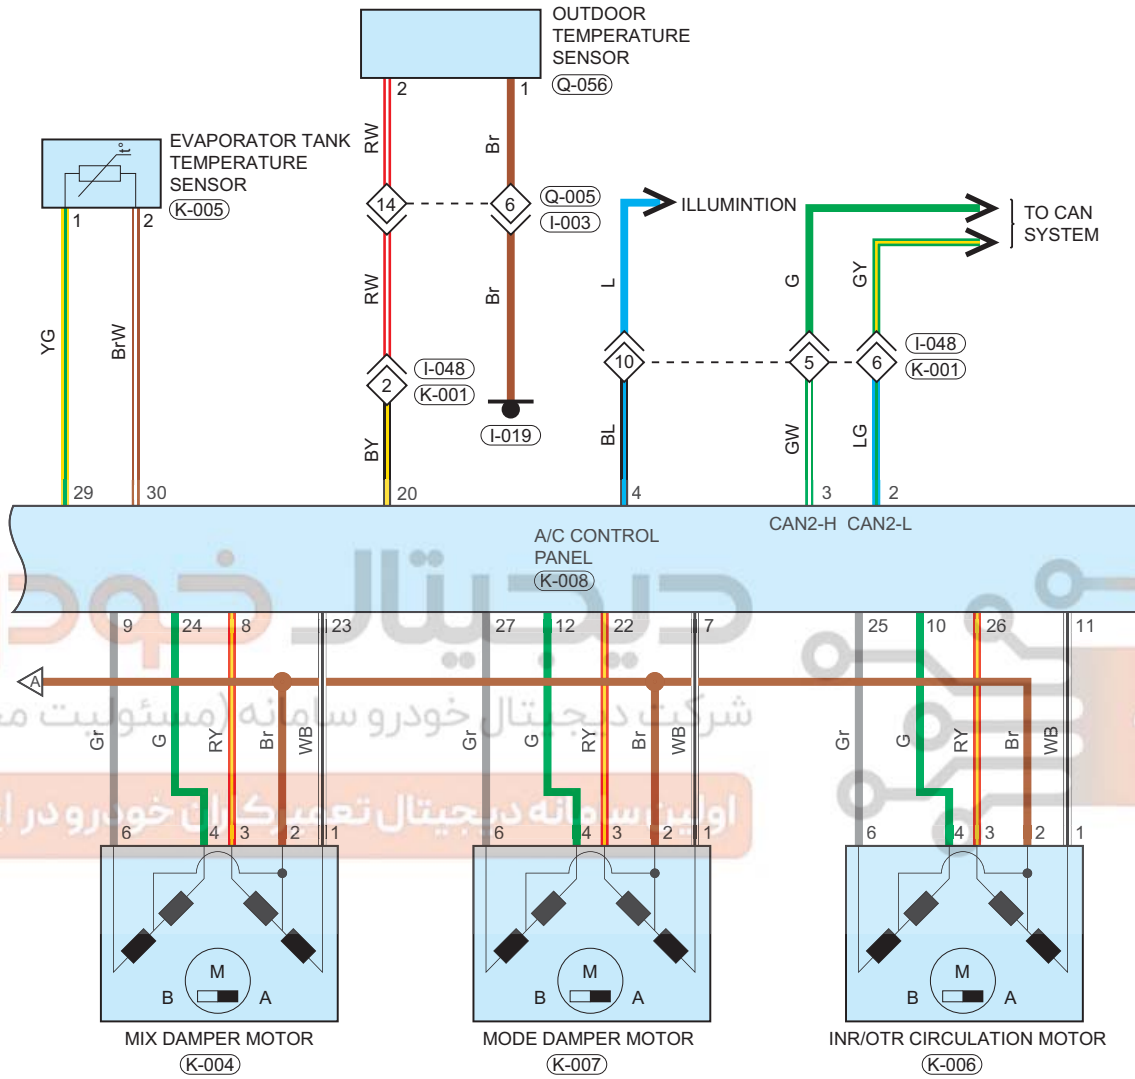

09

ACE002001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-005	08-62	Q-056	08-10	I-019	08-23
K-008	08-62	K-004	08-62	K-007	08-62
K-006	08-62				

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-048, K-001	08-23, 08-62	Q-005, I-003	08-10, 08-23		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
K-005	12-13	Q-056	12-17	I-019	12-4
K-008	12-13	K-004	12-13	K-007	12-13
K-006	12-13	I-048, K-001	12-4, 12-13	Q-005, I-003	12-17, 12-4


دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



Circuit Diagram (Page 3 of 4)

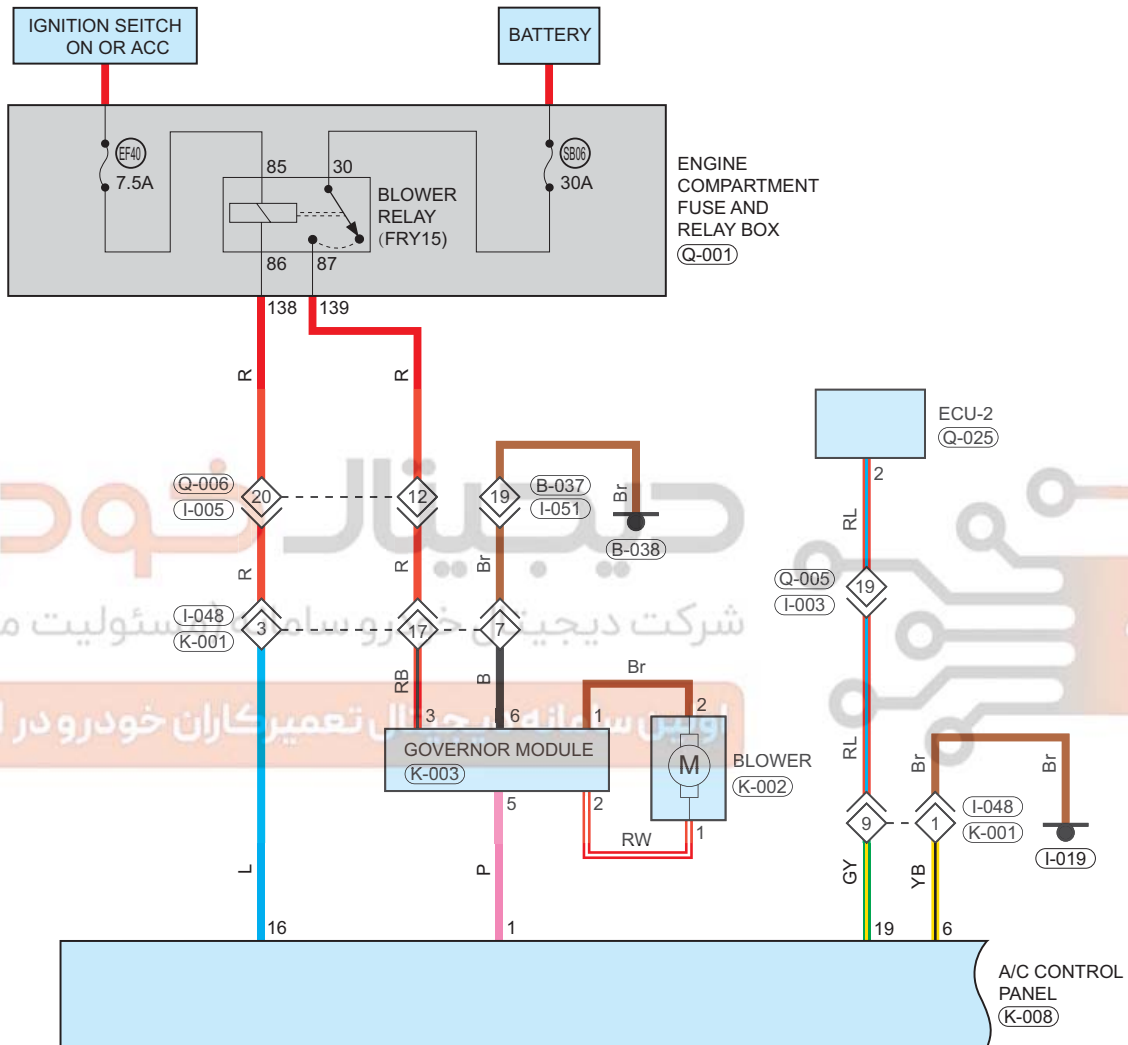

09

ACE003001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	B-038	08-36	Q-025	08-10
K-002	08-62	I-019	08-23	K-008	08-62
K-003	08-62				

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
SB06	06-2	Engine Compartment Fuse And Relay Box
EF40	06-2	Engine Compartment Fuse And Relay Box
Blower Relay (FRY15)	06-2	Engine Compartment Fuse And Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-006, I-005	08-10, 08-23	I-048, K-001	08-23, 08-62	I-051, B-037	08-23, 08-36
Q-005, I-003	08-10, 08-23				

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	B-038	12-8	Q-025	12-17
K-002	12-13	I-019	12-4	K-008	12-13
K-003	12-13	Q-006, I-005	12-17, 12-4	I-048, K-001	12-4, 12-13
I-051, B-037	12-4, 12-8	Q-005, I-003	12-17, 12-4		

Circuit Diagram (Page 4 of 4)

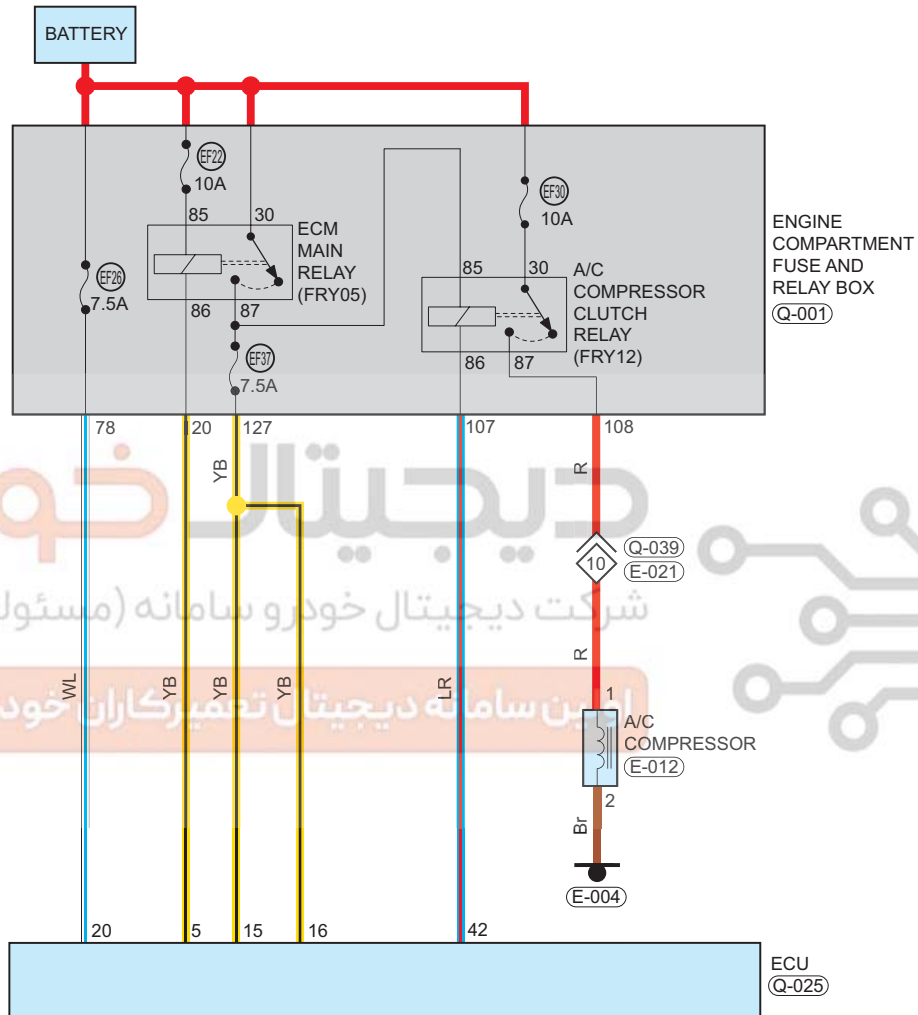

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
این سامانه دیجیتال تعمیرکاران خودرو در ایران



09