


Fuse & Relay

Engine Compartment Fuse and Relay Box

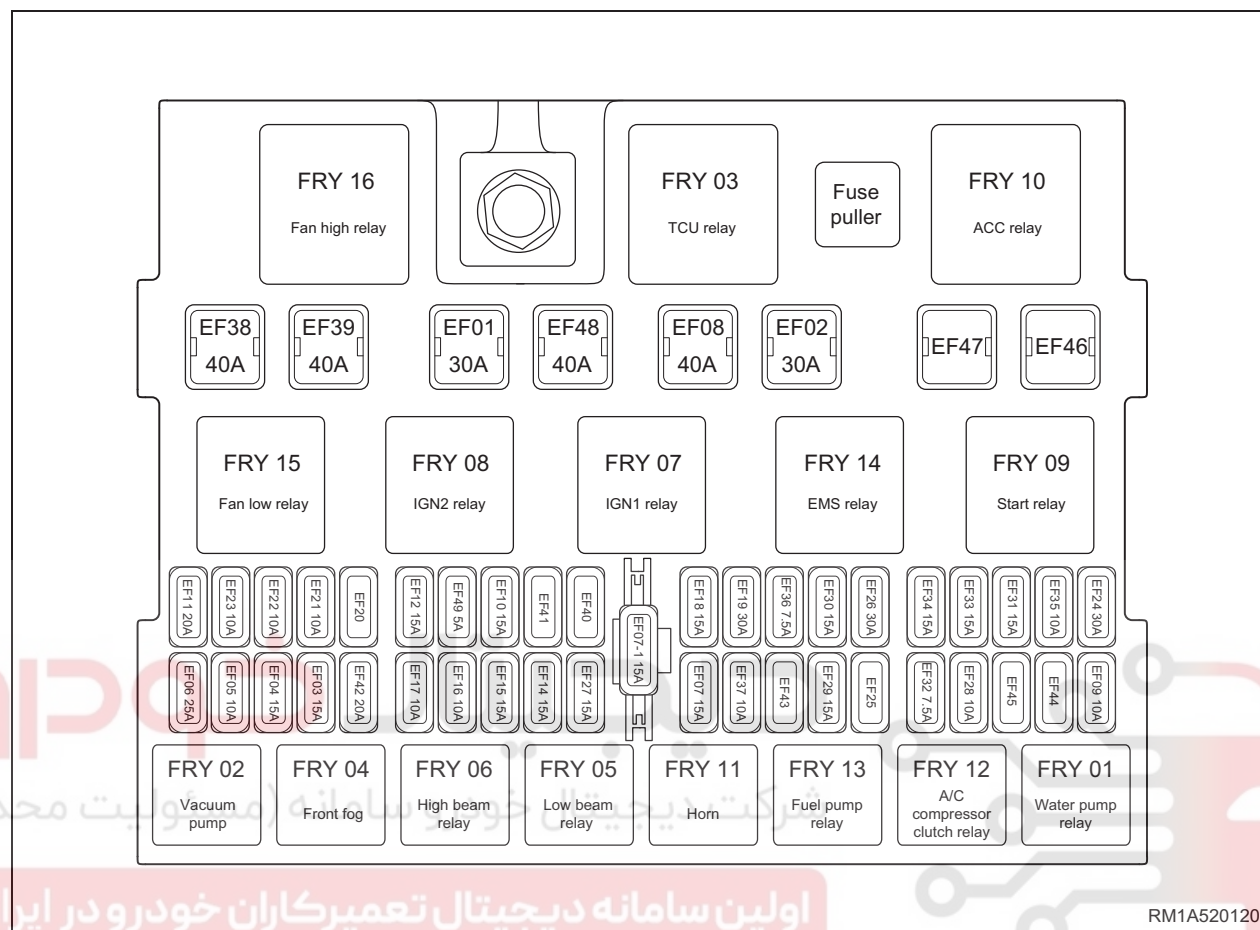

No.	Description	No.	Description	No.	Description
FB01	Spare	EF12	Front Fog Light	EF32	Upstream Oxygen Sensor
FB02	Instrument Panel Relay Box	EF13	-	EF33	Fuel Injector
FB03	BCM	EF14	Right Low Beam	EF34	Engine Sensor
FB04	Spare	EF15	Left Low Beam	EF35	Reserve
FB05	Reserve	EF16	Right High Beam	EF36	Downstream Oxygen Sensor
FB06	Spare	EF17	Left High Beam	EF37	ECM
FB07	Reserve	EF18	PEPS (Reserve)	EF38	Low-speed Fan
FB08	Alternator	EF19	Instrument Panel Relay Box (IGN)	EF39	High-speed Fan
FB09	Spare	EF20	Spare	EF40	Spare
EF01	Ignition Switch	EF21	Brake Switch	EF41	Spare
EF02	Blower	EF22	Back-up Light	EF42	Sunroof

No.	Description	No.	Description	No.	Description
EF03	Engine Immobilizer System/Brake Light	EF23	Reversing Radar/A/C Pressure Switch/Sunroof Switch	EF43	Spare
EF04	Ignition Switch	EF24	Starter	EF44	Spare
EF05	TCU (CVT)	EF25	Spare	EF45	Spare
EF06	ABS Valve	EF26	Instrument Panel Relay Box (ACC)	EF46	Spare
EF07	Instrument Panel Relay Box (B+)	EF27	Horn	EF47	Spare
EF08	ABS Pump	EF28	A/C Compressor	EF48	Reserve
EF09	Reserve	EF29	Fuel Pump	EF49	Spare
EF10	Reserve	EF30	ECM		
EF11	TCU (CVT)	EF31	Ignition Coil		

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

