


TURN SIGNAL LAMP / HAZARD LAMP

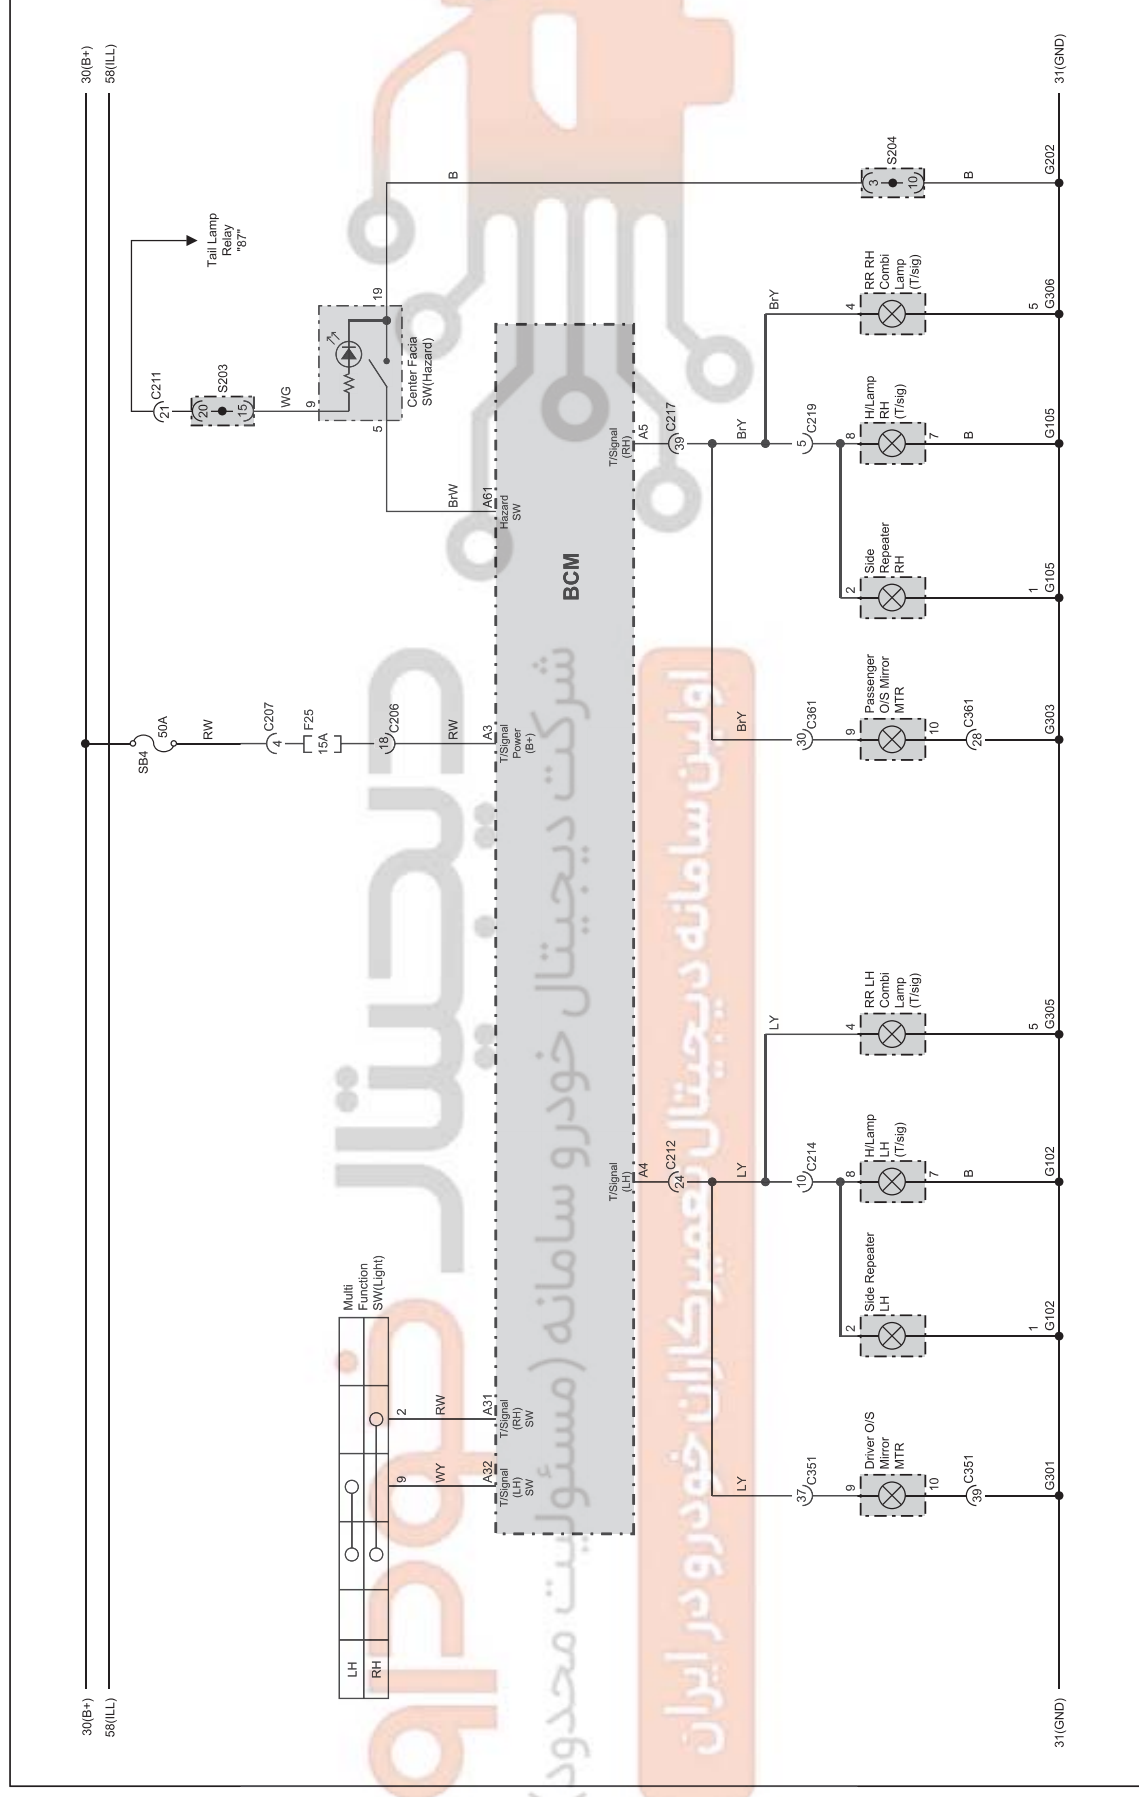

Modification basis	
Application basis	
Affected VIN	

1) CONNECTOR

Connector Number (Pin Number/Color)	Connecting Wiring Harness	Connector Position	Remark
C206	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C207	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C212	W/H IP (Main) - W/H Floor	Inside of Driver Cowl Side	
C214	W/H Eng Room - W/H Floor	Inside of Driver Cowl Side	
C217	W/H IP (Main) - W/H Floor	Inside of Front Passenger Cowl Side	
C351	W/H Floor - W/H Driver DR	Under Driver Door Hinge	
C361	W/H Floor- W/H Passenger DR	Under Front Passenger Door Hinge	

2) GROUND

Connector Number	Connecting Wiring Harness	Connecting Position	Remark
G102	W/H Eng Room	Above External Buzzer (back)	LH headlamp/side repeater, stop lamp switch, wiper motor
G105	W/H Eng Room	Frame at Washer Tank Mounting Part	RH headlamp/side repeater
G202	W/H IP (Main)	Rear LH of Cluster (IP Panel Frame)	S202, S204, IP Fuse
G301	W/H Floor	Inside of Driver Door Scuff	Driver door/seat, IP fuse box
G303	W/H Floor	Inside of Passenger Door Scuff	Rear RH door, front passenger door/door switch, front passenger seat
G305	W/H Floor	Inside of LH C-pillar Upper Cover (above Luggage Lamp)	Tailgate, power outlet, rear fog lamp, rear LH seat warmer, rear LH door switch, LH combination lamp, TPMS, rear PAS
G306	W/H Floor	Inside of RH C-pillar Upper Cover	LH/RH combination lamps, rear RH seat warmer, rear RH door switch

3) SPLICE PACK

Connector Number (Pin Number)	Connecting Wiring Harness	Connector Position	Remark
S202	W/H IP (Main)	Rear RH of IP	Ground, PCAN
S203	W/H IP (Main)	Rear LH of Front Passenger Air Bag	B+, room lamp
S204	W/H IP (Main)	Rear Center of Front Passenger Air Bag	Ground

4) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

