


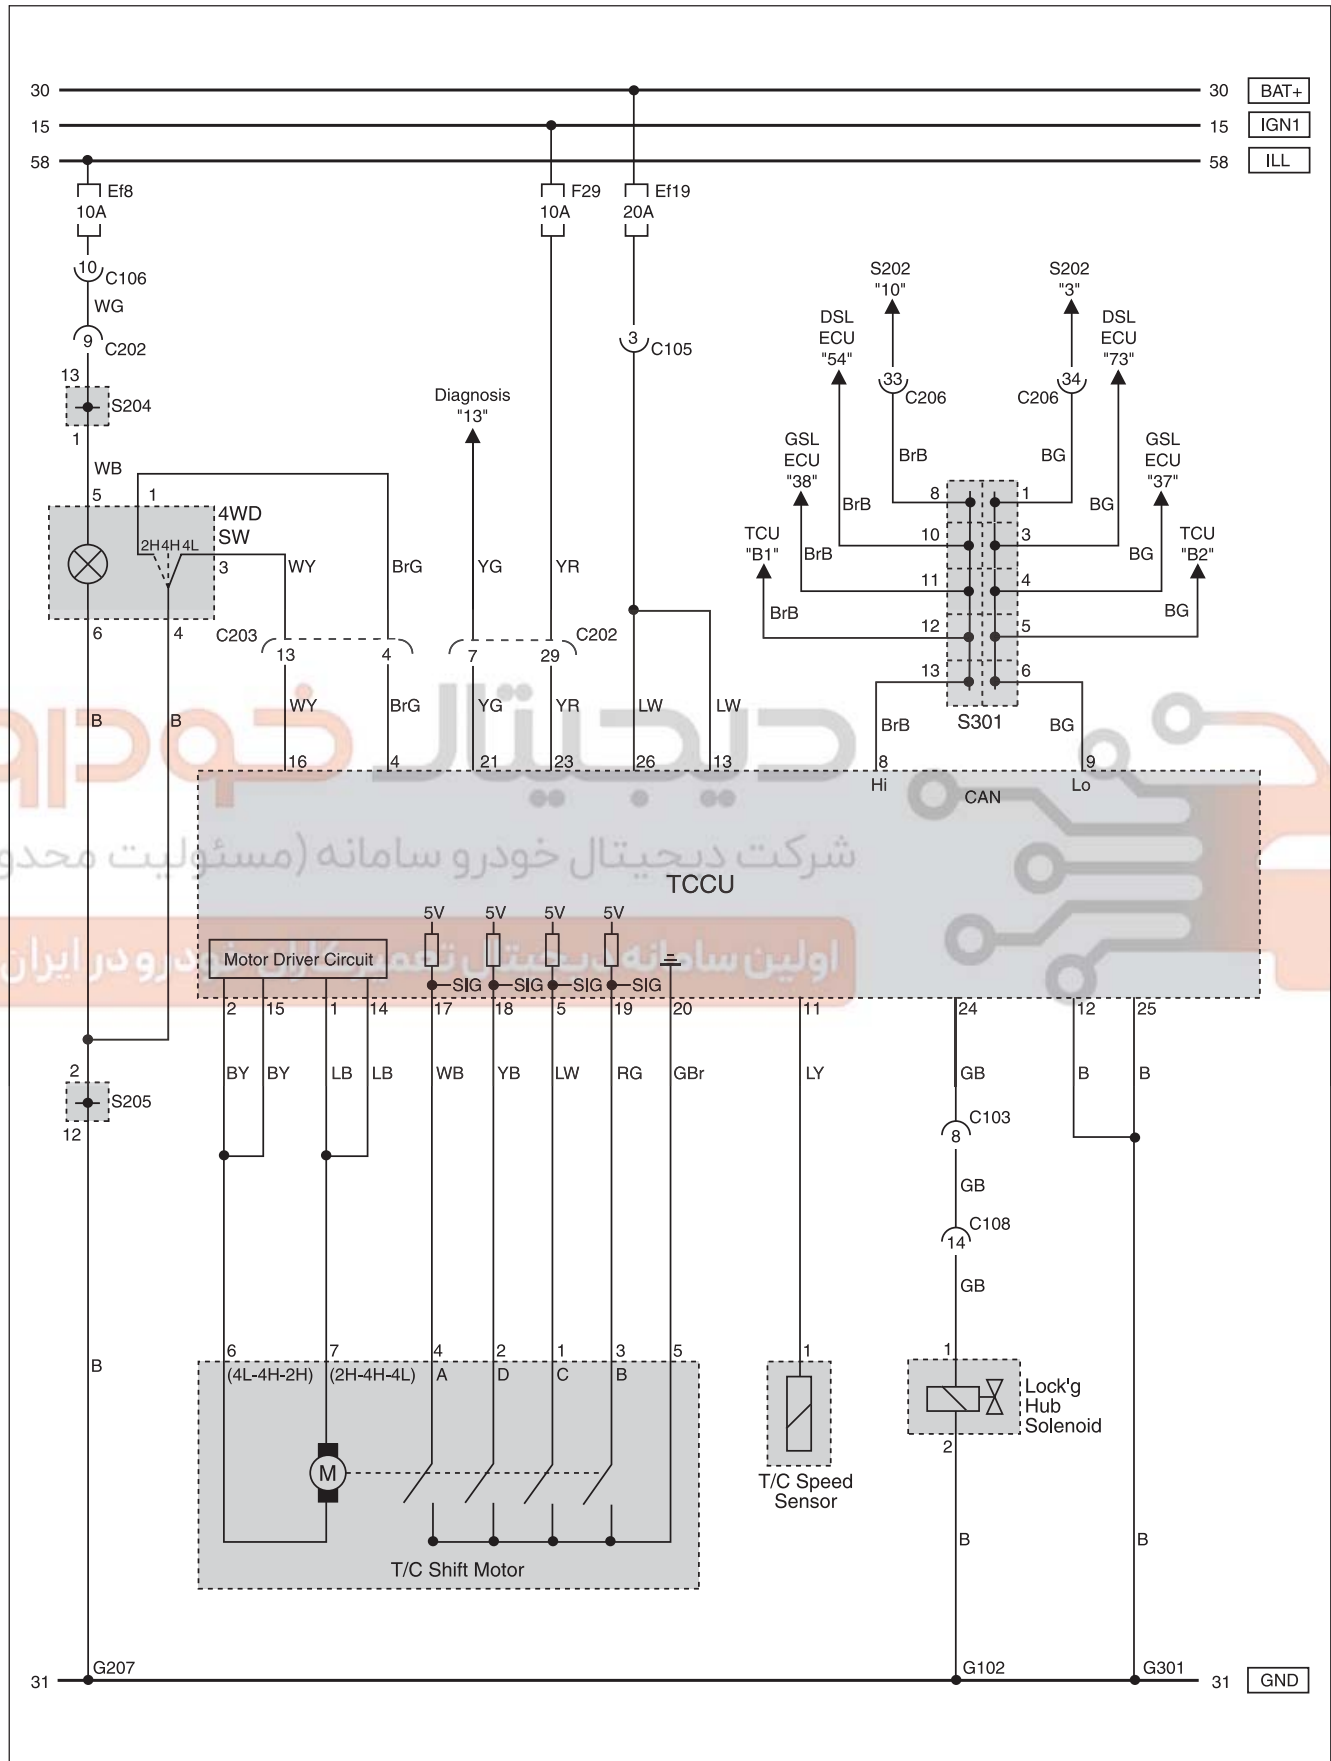

7. TCCU 3410





**A. CONNECTOR INFORMATION**

 
Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C105 (10Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
G102	W/H Eng Room	Behind LH Head Lamp	
G207	W/H Main	Inner the Passenger Cowl Side PNL	
G301	W/H Floor	Under the Driver Seat	
S202 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	CAN
S204 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	ILL
S205 (14Pin, Black)	W/H Main	Upper the PTC Protector	GND
S301 (14Pin, Black)	W/H Main	Beside Driver Seat W/H Protector	CAN

- 01
- 02
- 03
- 04
- 05

**B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION**

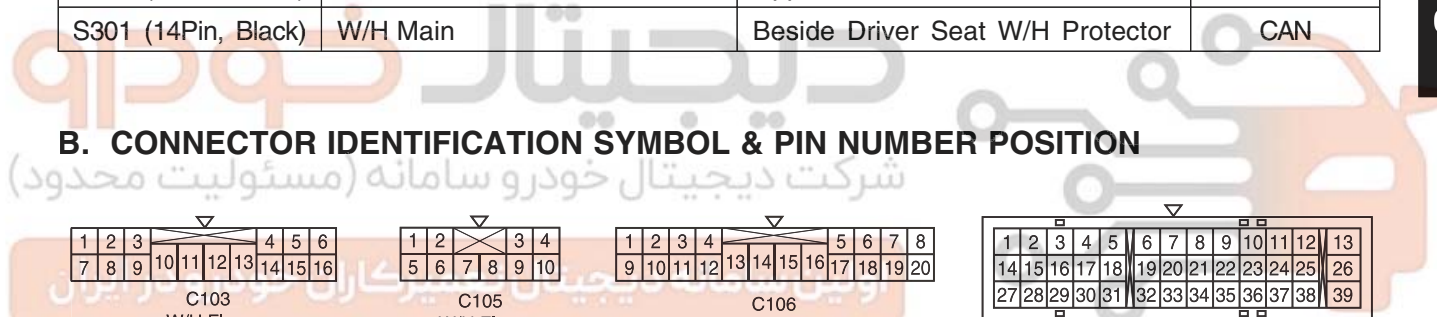

 
C103  
W/H Floor  
(Eng Room Fuse & Relay Box)




C105  
W/H Floor  
(Eng Room Fuse & Relay Box)



 
C106  
W/H Floor  
(Eng Room Fuse & Relay Box)




C202  
W/H Floor

 

C203  
W/H Floor

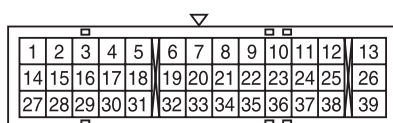

C206  
W/H Floor

 


TCCU




T/C Speed Sensor



 Lock'g Hub Solenoid



4WD SW

 

Diagnosis



T/C Shift Motor