

Sound system


Component location diagram



Audio host




Front loudspeaker

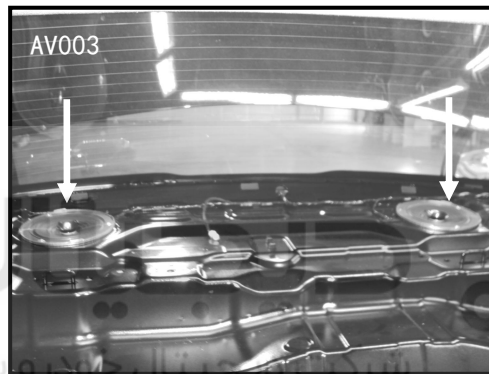


Rear loudspeaker

Sound system schematic

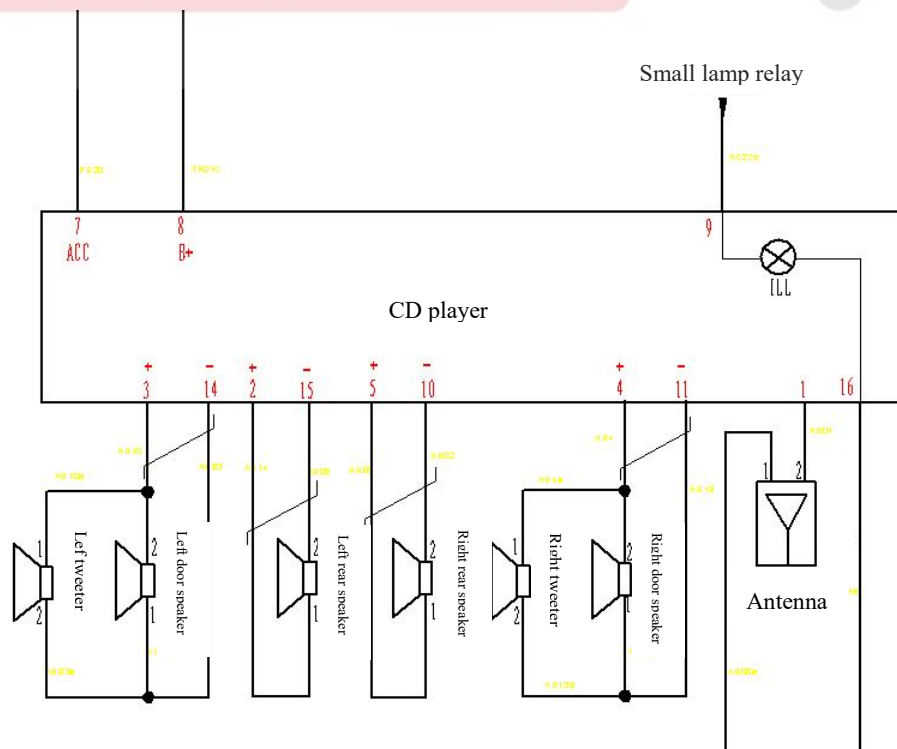

AV-1

Audio host port description

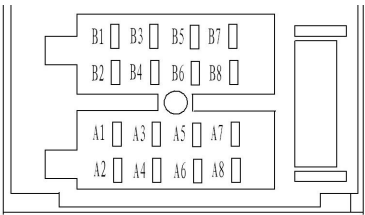Main Connector Draft	PIN	SIGNAL	
 <p>Type: Tyco:1897097</p>	A1	Background light (-)	ILL-
	A2	Line GND	LINE- GND
	A3	Line controlled signal	LINE- CON
	A4	ACC	ACC
	A5	Antenna amplifier power supply	ANT
	A6	Background light (+)	ILL+
	A7	Battery power supply	B+
	A8	GND	GND
	B1	Right rear speaker (+)	RR+
	B2	Right rear speaker (-)	RR-
	B3	Right front speaker (+)	FR+
	B4	Right front speaker (-)	FR-
	B5	Left front speaker (+)	FL+
	B6	Left front speaker (-)	FL-
	B7	Left rear speaker (+)	RL+
	B8	Left rear speaker (-)	RL-


Audio host and antenna replacement

1、Audio host replacement

1) Disassemble

① Disconnect the negative electrode of the battery.

② Remove the air conditioner control panel. See "Air Conditioner Control panel replacement".

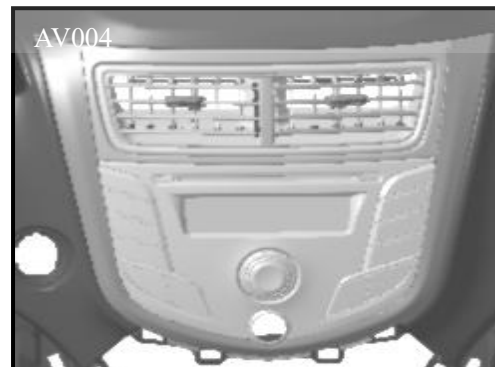


③ Remove center dashboard cover plate.

Notice:


■The front speaker can only be compared with other front lifters and the rear speaker with other rear speakers. Do not compare the front speaker to the back

speaker for the following reasons: The front and back speakers may be different speakers. Different installation environments for the front and rear speakers may result in different acoustics.

④ Unscrew the four screws fixing the sound engine.

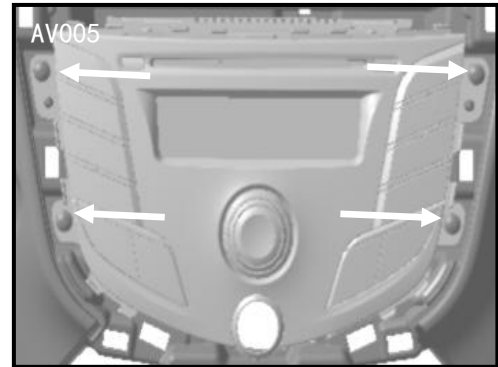

⑤ Pull the sound engine forward and disconnect Electrical connector, remove audio host assembly.

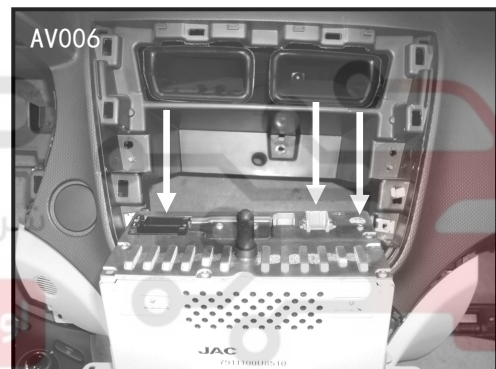

2) Install

Install in the reverse order of disassembly, and check whether the sound host is normal.

■ Tightening moment: 2 N·m

2. The antenna signal cable is replaced

1) Disassemble


① Remove the instrument panel.

② Disconnect the antenna signal cable from the antenna amplifier conductor. Disconnect the antenna signal cable behind the audio host, see "Audio Host Replacement".



2) Install

- ① Install the antenna signal cable.
- ② Connect the antenna signal cable to the back of the CD player and install the CD player. Connect the antenna signal cable to the antenna amplifier wire.

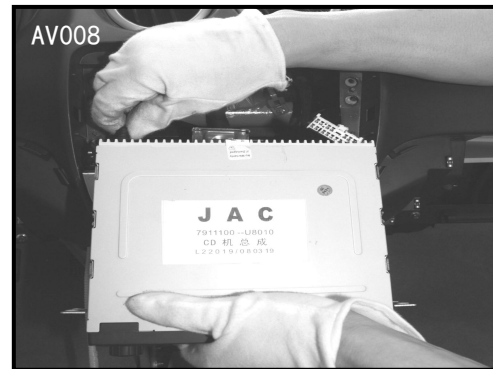

- ③ Install right panel insulator. See "Dashboard Replacement."

Three-car rear speaker replacement

1、Disassemble

- 1) Remove the rear seat.
- 2) Remove coat rack assembly.
- 3) Disconnect the electrical connector of the rear speaker.
- 4) Remove the left and right 3 rear speaker bolts.



- 5) Remove the rear speaker.

2、Install

- 1) Install 3 rear speaker bolts.

■Tightening moment: 3 N·m

- 2) Connect the rear speaker electrical connector.

- 3) Decorative shelf after installation.


■Tightening moment: 3 N·m

- 4) Remove the side trim panel

Front door speaker replacement

1. Disassemble

- 1) Remove the front door lining.
- 2) Disconnect the electrical connector from the front door speaker.

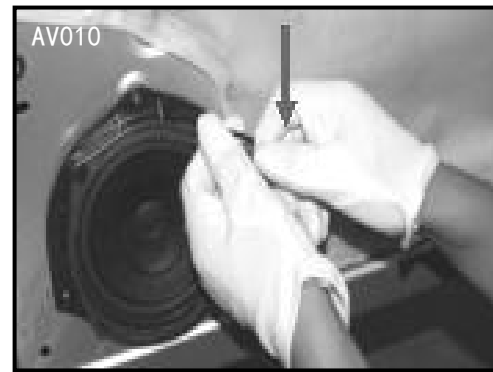


- 3) Remove the front door speaker bolts.
- 4) Remove the front door speaker.

2. Install

- 1) Put into the front door speaker.
- 2) Install 3 front door speaker bolts.

■ Tightening moment: 2 N·m

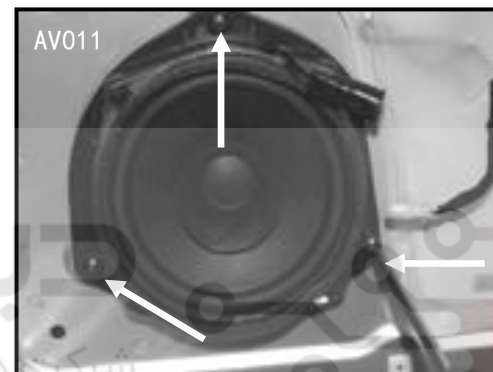

- 3) Connect the electrical connector on the front door speaker.



- 4) Install interior trim lining for front door.