


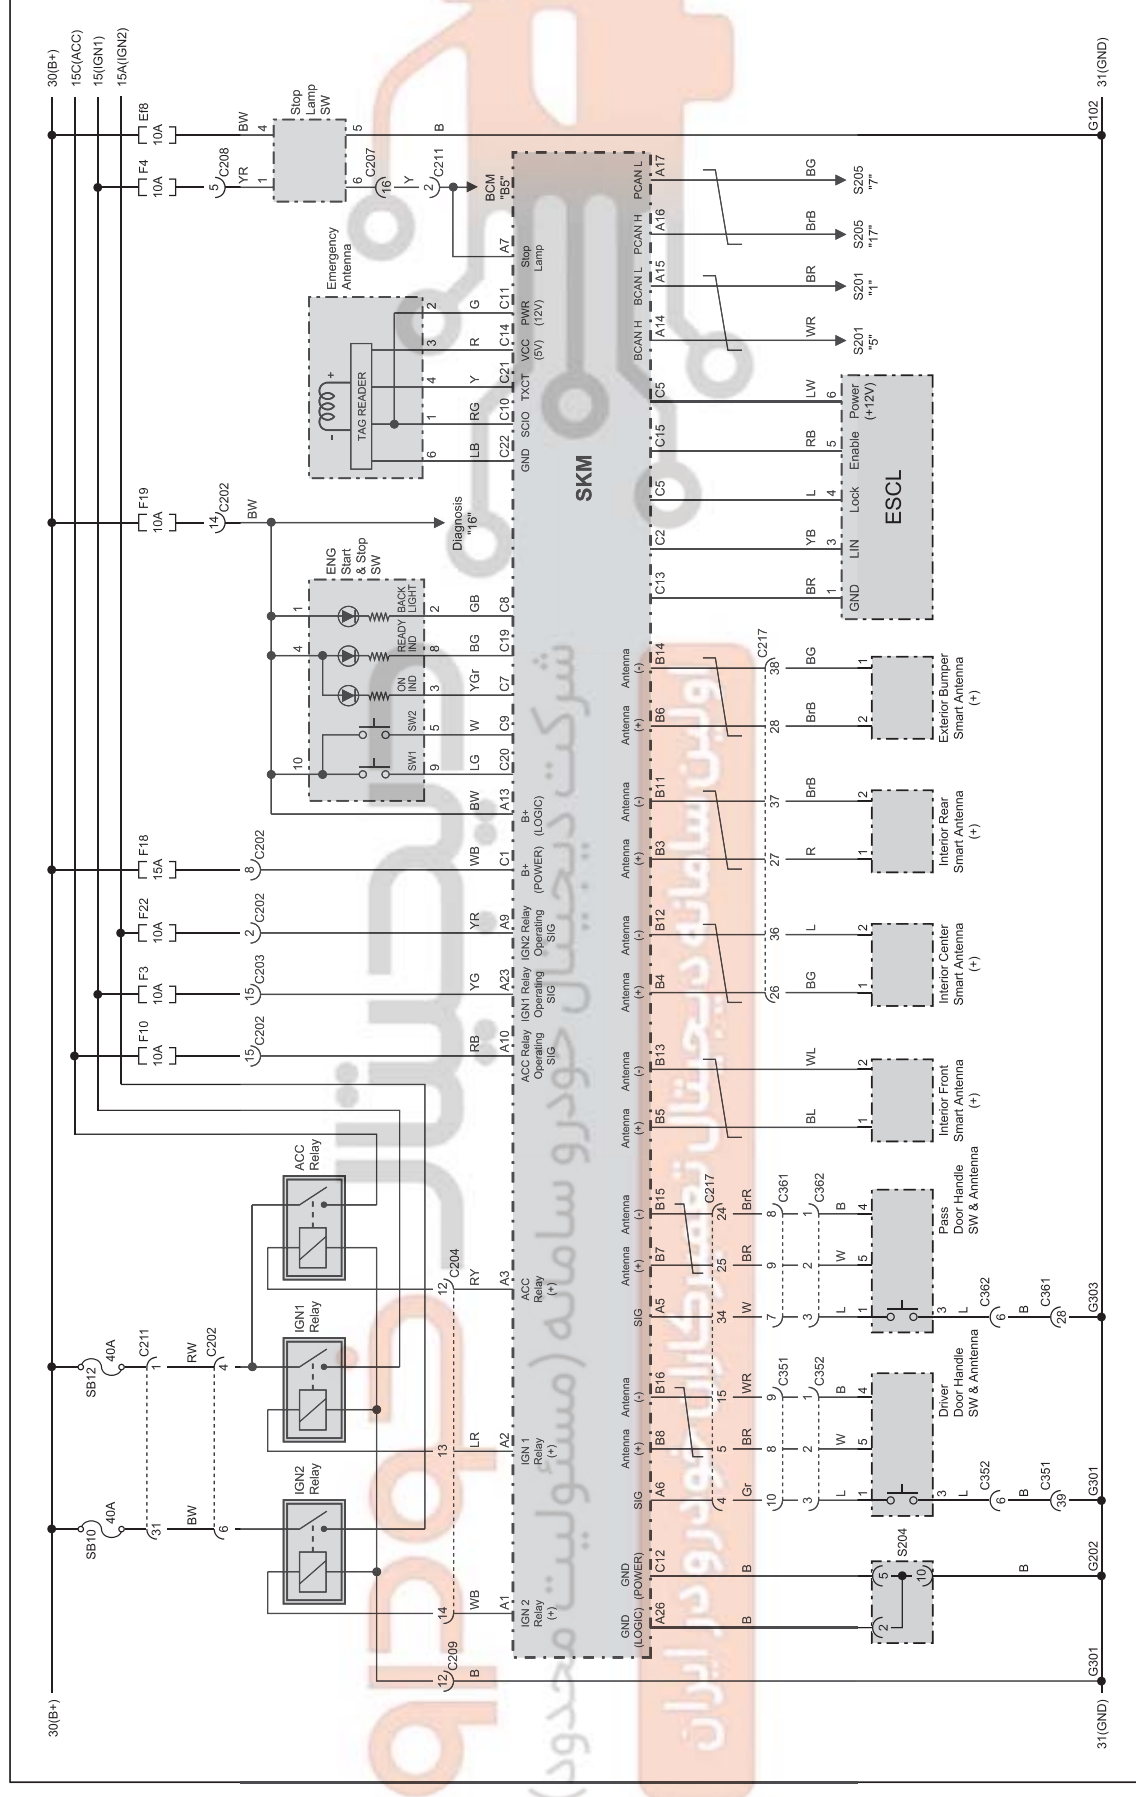

1) CONNECTOR

Connector Number (Pin Number/Color)	Connecting Wiring Harness	Connector Position	Remark
C202	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C203	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C204	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C207	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C208	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C209	W/H Floor - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C211	W/H Eng Room - W/H IP (Main)	Inside of Driver Cowl Side	
C217	W/H IP (Main) - W/H Floor	Inside of Front Passenger Cowl Side	
C351	W/H Floor - W/H Driver DR	Under Driver Door Hinge	
C352	W/H Driver DR- W/H Smart Key	Inside of Driver Door	
C361	W/H Floor- W/H Passenger DR	Under Front Passenger Door Hinge	
C362	W/H Passenger DR- W/H Smart Key	Inside of Front Passenger Door	

2) GROUND

Connector Number	Connecting Wiring Harness	Connecting Position	Remark
G102	W/H Eng Room	Above External Buzzer (back)	LH headlamp/side repeater, stop lamp switch, wiper motor
G202	W/H IP (Main)	Rear LH of Cluster (IP Panel Frame)	S202, S204, IP Fuse
G301	W/H Floor	Inside of Driver Door Scuff	Driver door/seat, IP fuse box
G303	W/H Floor	Inside of Passenger Door Scuff	Rear RH Door, Front Passenger Door/ Door Switch, Front Passenger Seat

3) SPLICE PACK

Connector Number (Pin Number)	Connecting Wiring Harness	Connector Position	Remark
S201	8	W/H IP (Main)	Rear LH of IP
S204	20	W/H IP (Main)	Rear Center of Front Passenger Air Bag
S205	20	W/H IP (Main)	Rear RH of Front Passenger Air Bag

4) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

