


## Fuse & Relay Information (7)

RAM ( REAR AREA MODULE )

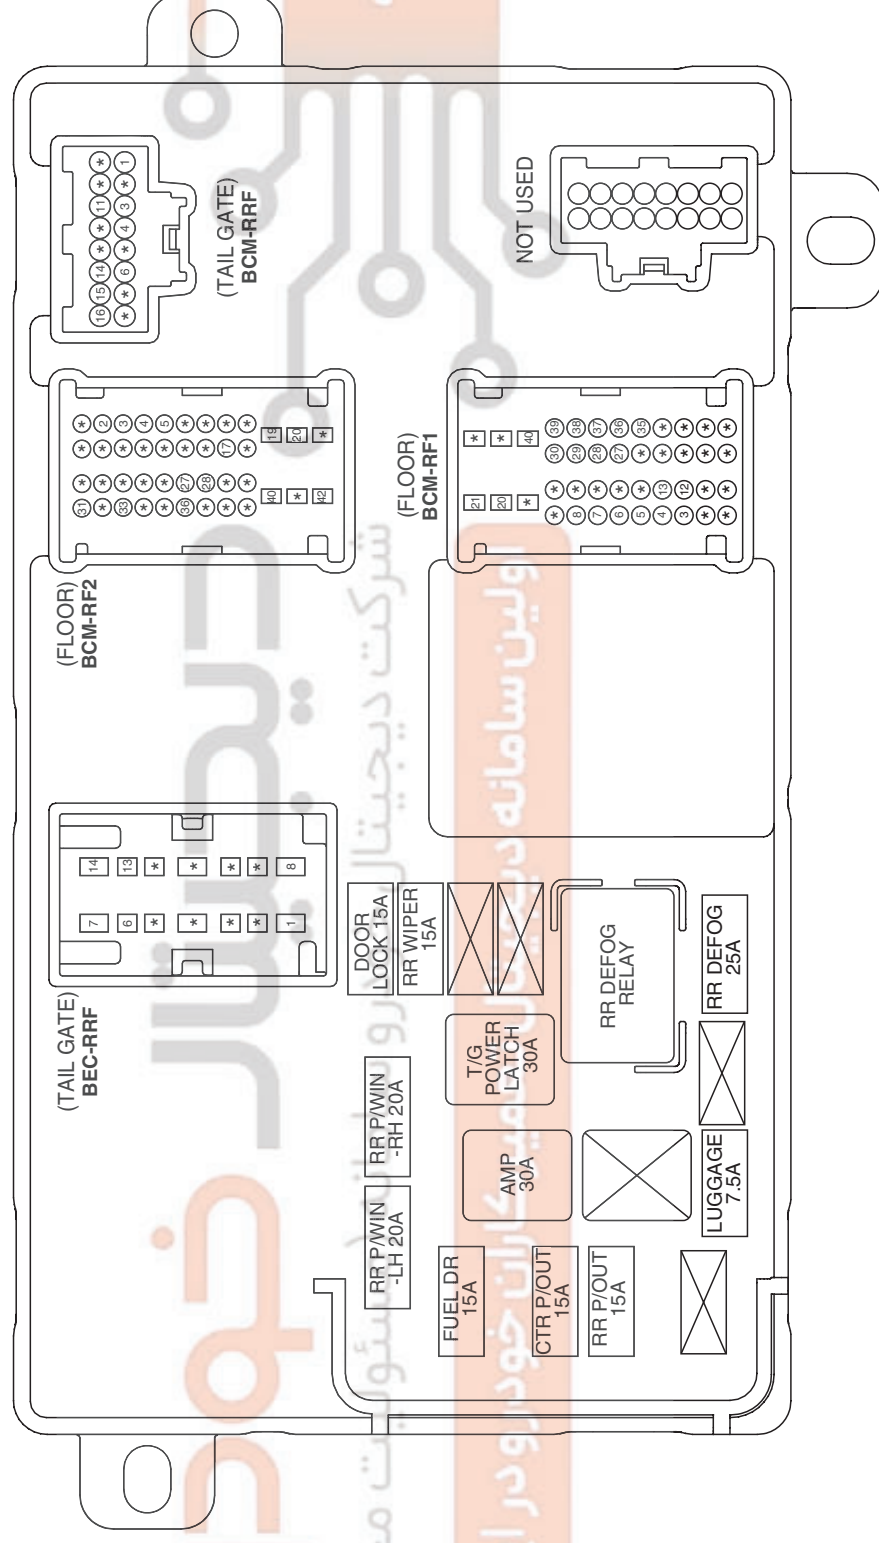

EHMSD9100GL  
021 62 99 92 92

**FUSE & RELAY INFORMATION****Fuse & Relay Information (8)****SD100-8****CIRCUIT**

| Description  |                 | (A)  | Circuit Protected                                             |
|--------------|-----------------|------|---------------------------------------------------------------|
| FUSE         | DOOR LOCK       | 15A  | Rear Door Lock Actuator LH/RH, Rear Door Lock/Unlock Relay    |
|              | RR WIPER        | 15A  | Rear Wiper Motor Relay (+), Rear Wiper Motor                  |
|              | RR DEFOG        | 25A  | RR Defog Relay, Rear Defogger (+)                             |
|              | RR P/WIN-RH     | 20A  | Rear Power Window Relay RH(UP/DN), Rear Power Window Motor RH |
|              | LUGGAGE         | 7.5A | Luggage Lamp                                                  |
|              | RR P/WIN-LH     | 20A  | Rear Power Window Relay LH(UP/DN), Rear Power Window Motor LH |
|              | FUEL DR         | 15A  | Fuel Door Relay, Fuel Filler Door Actuator                    |
|              | CTR P/OUT       | 15A  | Console Power Outlet                                          |
| FUSIBLE LINK | RR P/OUT        | 15A  | Rear Power Outlet                                             |
|              | T/G POWER LATCH | 30A  | Tail Gate Control Module                                      |
|              | AMP             | 30A  | AMP                                                           |

**✘ USE THE DESIGNATED FUSE ONLY**

FUSE & RELAY INFORMATION

Fuse & Relay Information (9)

SD100-9

RAM (REAR AREA MODULE)

< REAR >

