


FUSE & RELAY INFORMATION E7E13A69

FUSE & RELAY INFORMATION (1)

I/P JUNCTION BOX

< FRONT >

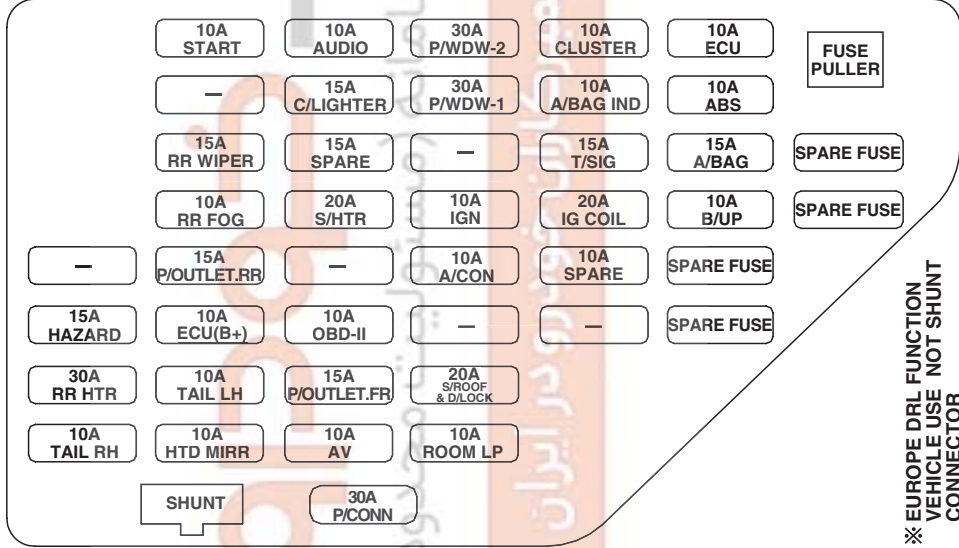


※ EUROPE DRL FUNCTION
VEHICLE USE NOT SHUNT
CONNECTOR

< REAR >

(LHD)

(RHD)

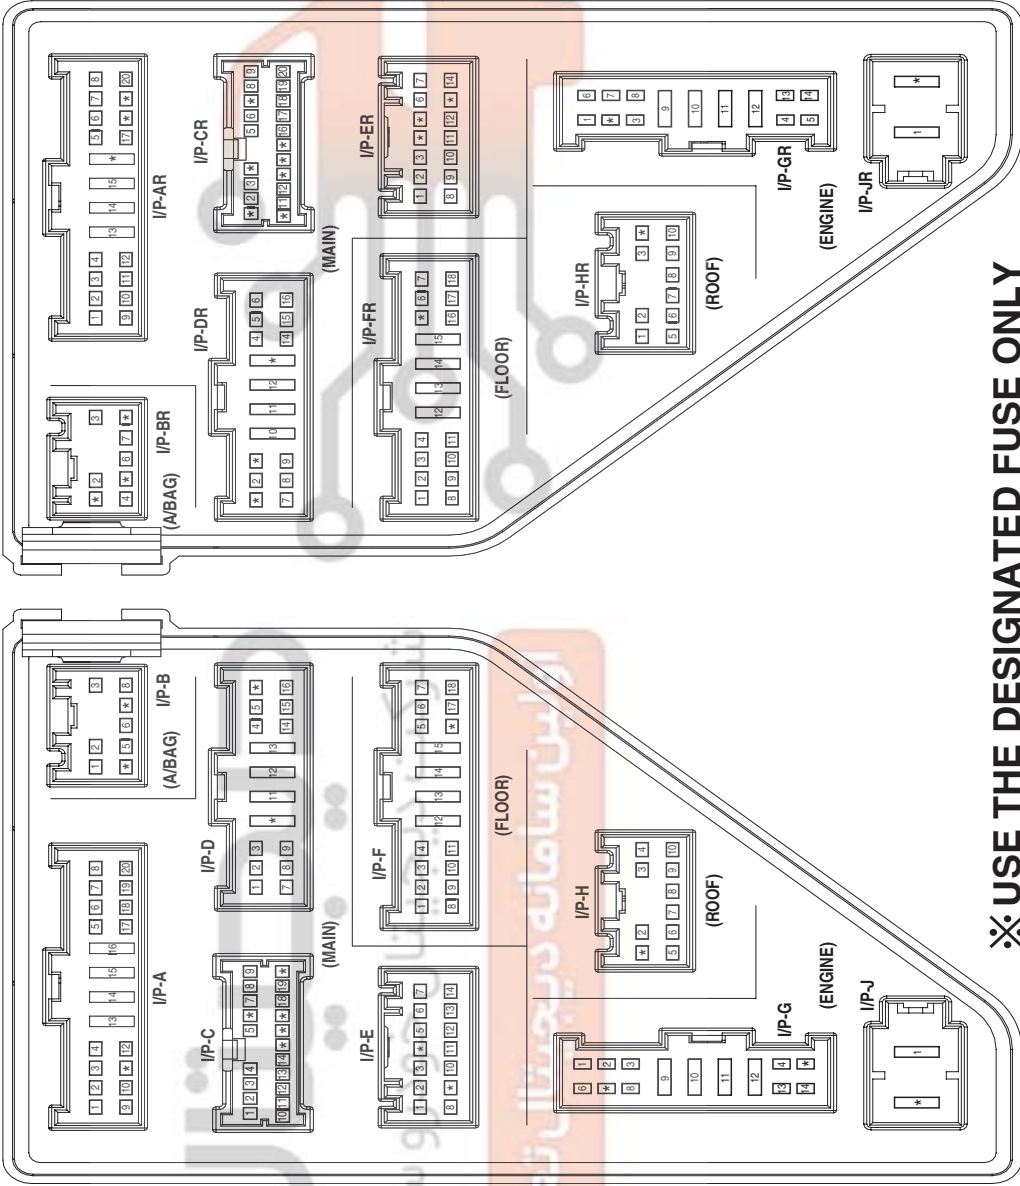

※ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (2)

SD100-2

CIRCUIT

FUSE	(A)	Circuit Protected
TAIL RH	10A	Rear Combi Lamp RH, Head Lamp RH, Front Fog Lamp Relay, DRL Control Module, Illuminations
RR HTR	30A	Rear Defogger Relay, Contact, Fuse(HTD MIRR)
HAZARD	15A	Hazard Relay, Hazard Switch, ETACM, Instrument Cluster Multifunction Switch, Rear Combi Lamp LH/RH, Head Lamp LH/RH, Side Repeater Lamp LH/RH,
HTD MIRR	15A	Power Outside Mirror Motor LH/RH,
TAIL LH	10A	A/C Control Module
ECU(B+)	10A	Head Lamp LH, Rear Combi Lamp LH, License Lamp LH/RH
P/OUTLET. RR	15A	TCM, Immobilizer Control Module
RR FOG	10A	Rear Power Outlet
RR WIPER	15A	Rear Fog Lamp Relay
START	10A	Instrument Cluster, ETACM, Luggage Lamp, Cargo Lamp, Tailgate Switch, Rear Window Switch, Rear Wiper Relay, Multifunction Switch, Rear Defogger Relay, Safety Relay
AV	10A	Burglar Alarm Relay, Cruise Control Module, Start Relay Transaxle Range Switch
P/OUTLET. FR	15A	Audio
OBD-II	10A	Front Power Outlet
S/HTR	20A	Data Link Connector, Multipurpose Check Connector
C/LIGHTER	15A	Seat Warmer Switch
AUDIO	10A	Cigarette Lighter
		Power Outside Mirror Switch, Digital Clock
		Audio

FUSE	(A)	Circuit Protected
ROOM LP	10A	Key Remind Switch, Instrument Cluster, ETACM, Room Lamp A/C Control Module, Digital Clock, Luggage Lamp, Front Door Lamp, Map Lamp, Cargo Lamp, Sunroof Switch
S/ROOF & D/LOCK	20A	Door Lock / Unlock Relay, Sunroof Controller
A/CON	10A	A/C Control Module, ETACM, Blower Relay, Sunroof Controller Electro Chrome Mirror & Compass
IGN	10A	Head Lamp Relay, AQS Sensor, DRL Control Module, Fuel Filter Heater Relay
P/WDW -1	30A	Driver Power Window Switch
P/WDW -2	30A	Rear Power Window Switch LH
IG COIL	20A	Passenger Power Window Switch
T/SIG	15A	Rear Power Window Switch RH
A/BAG IND	10A	Ignition Coil(2.7 GSL)
CLUSTER	10A	Hazard Switch, Auto Light & Photo Sensor
B/UP	10A	Instrument Cluster
A/BAG	15A	Instrument Cluster, ETACM, Immobilizer Control Module
ABS	10A	Pre-excitation Resistor, Alternator, DRL Control Module
ECU	10A	Back-up Lamp Switch, Transaxle Range Switch
		SRS Control Module
		ABS Control Module, ESP Control Module, G-sensor, TCS Switch, ESP Switch, Steering Angle Sensor
		Immobilizer Control Module, Vehicle Speed Sensor, ECM, TCM Pulse Generator 'A/B', Fuel Filter Warning Switch, Cruise Control Module, Mass Air Flow Sensor, 4WD ECM, Stop Lamp Switch, Multifunction Switch

✕ USE THE DESIGNATED FUSE ONLY