


Engine Compartment Fuse and Relay Box

Location of Engine Compartment Fuse and Relay Box

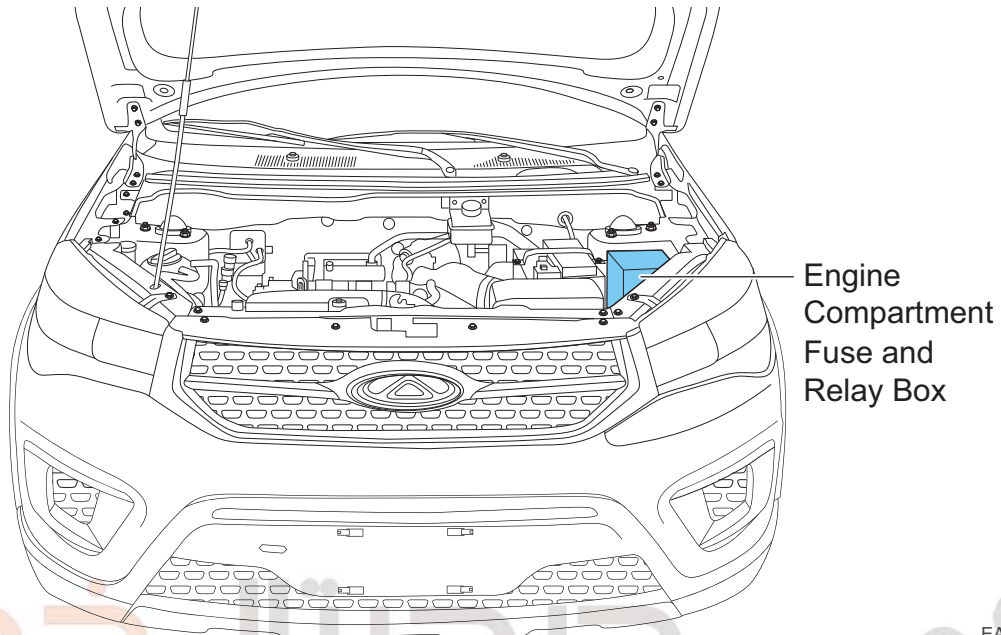


EA13T060030

06

Fuse and Relay Layout in Engine Compartment Fuse and Relay Box

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

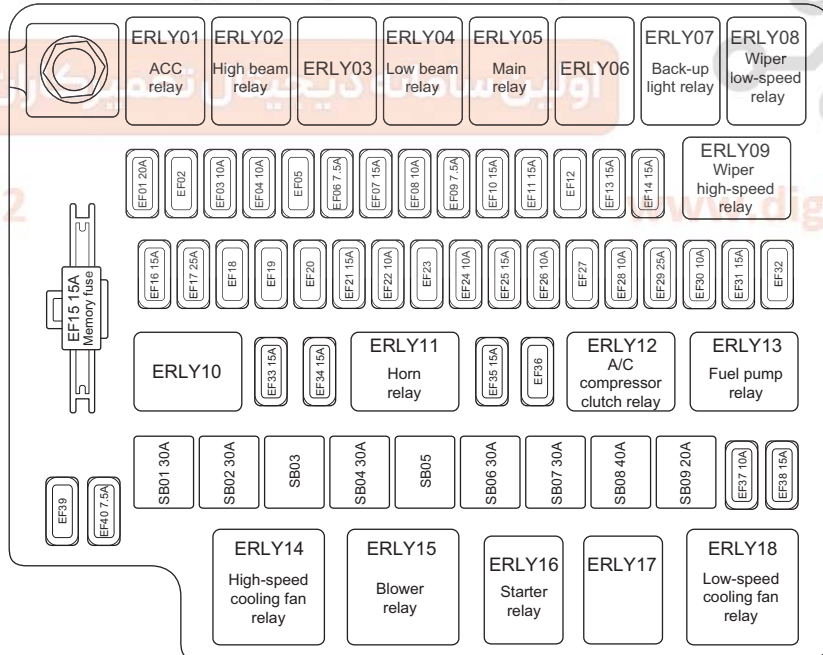

EA13T060040

Engine Compartment Fuse Description


No.	Description	No.	Description	No.	Description
EF01	Spare	EF18	-	EF35	Control valve
EF02	-	EF19	-	EF36	-
EF03	High beam headlight LH	EF20	-	EF37	ECM
EF04	High beam headlight RH	EF21	BCM	EF38	Injector
EF05	-	EF22	Coil power	EF39	-
EF06	ESP/ABS	EF23	-	EF40	Blower relay coil
EF07	ECM/TCU (AT model)/ Brake switch	EF24	Brake switch	SB01	ESP/ABS
EF08	A/C switch/Radar	EF25	Horn	SB02	BCM
EF09	Generator excitation	EF26	ECM/TCU (AT model)	SB03	-
EF10	BCM	EF27	-	SB04	BCM
EF11	BCM	EF28	Back-up light	SB05	-
EF12	-	EF29	Wiper	SB06	Blower
EF13	Oxygen sensor	EF30	A/C compressor	SB07	Starter
EF14	Ignition coil	EF31	Fuel pump	SB08	ESP/ABS
EF15	Memory fuse	EF32	-	SB09	ACC
EF16	BCM	EF33	Low beam headlight LH		
EF17	Sunroof	EF34	Low beam headlight RH		

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

View of Engine Compartment Fuse and Relay Box


Front View

06

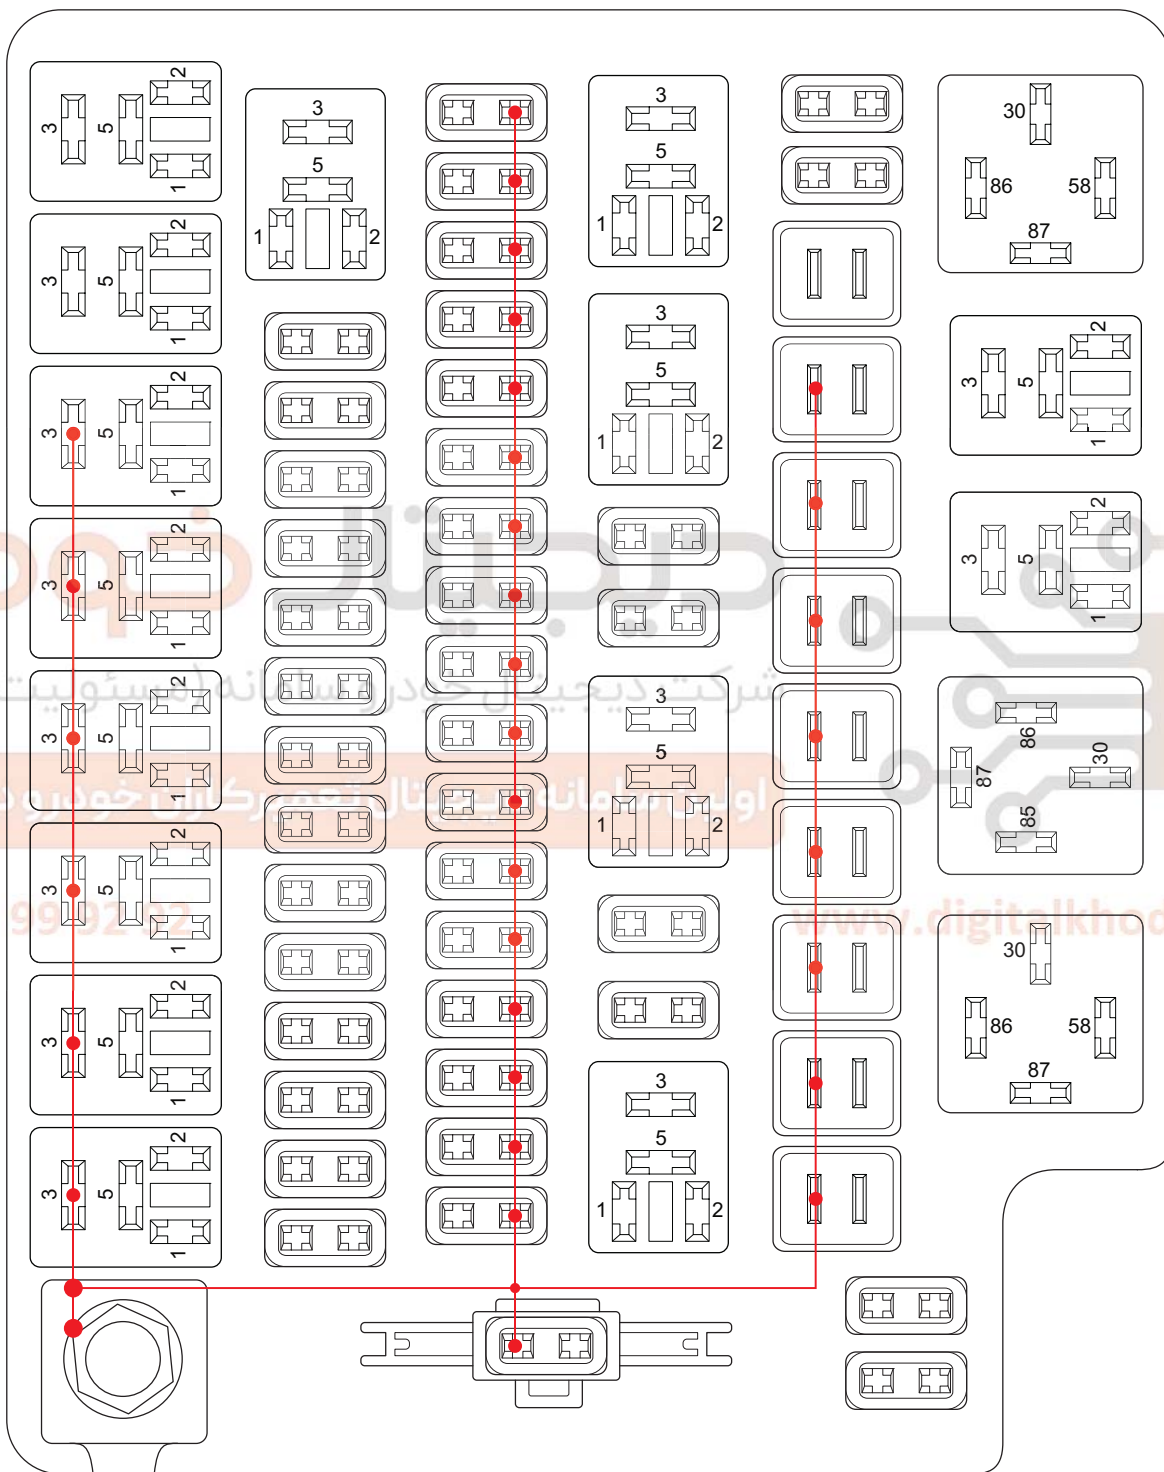

EA13T060050

Back View

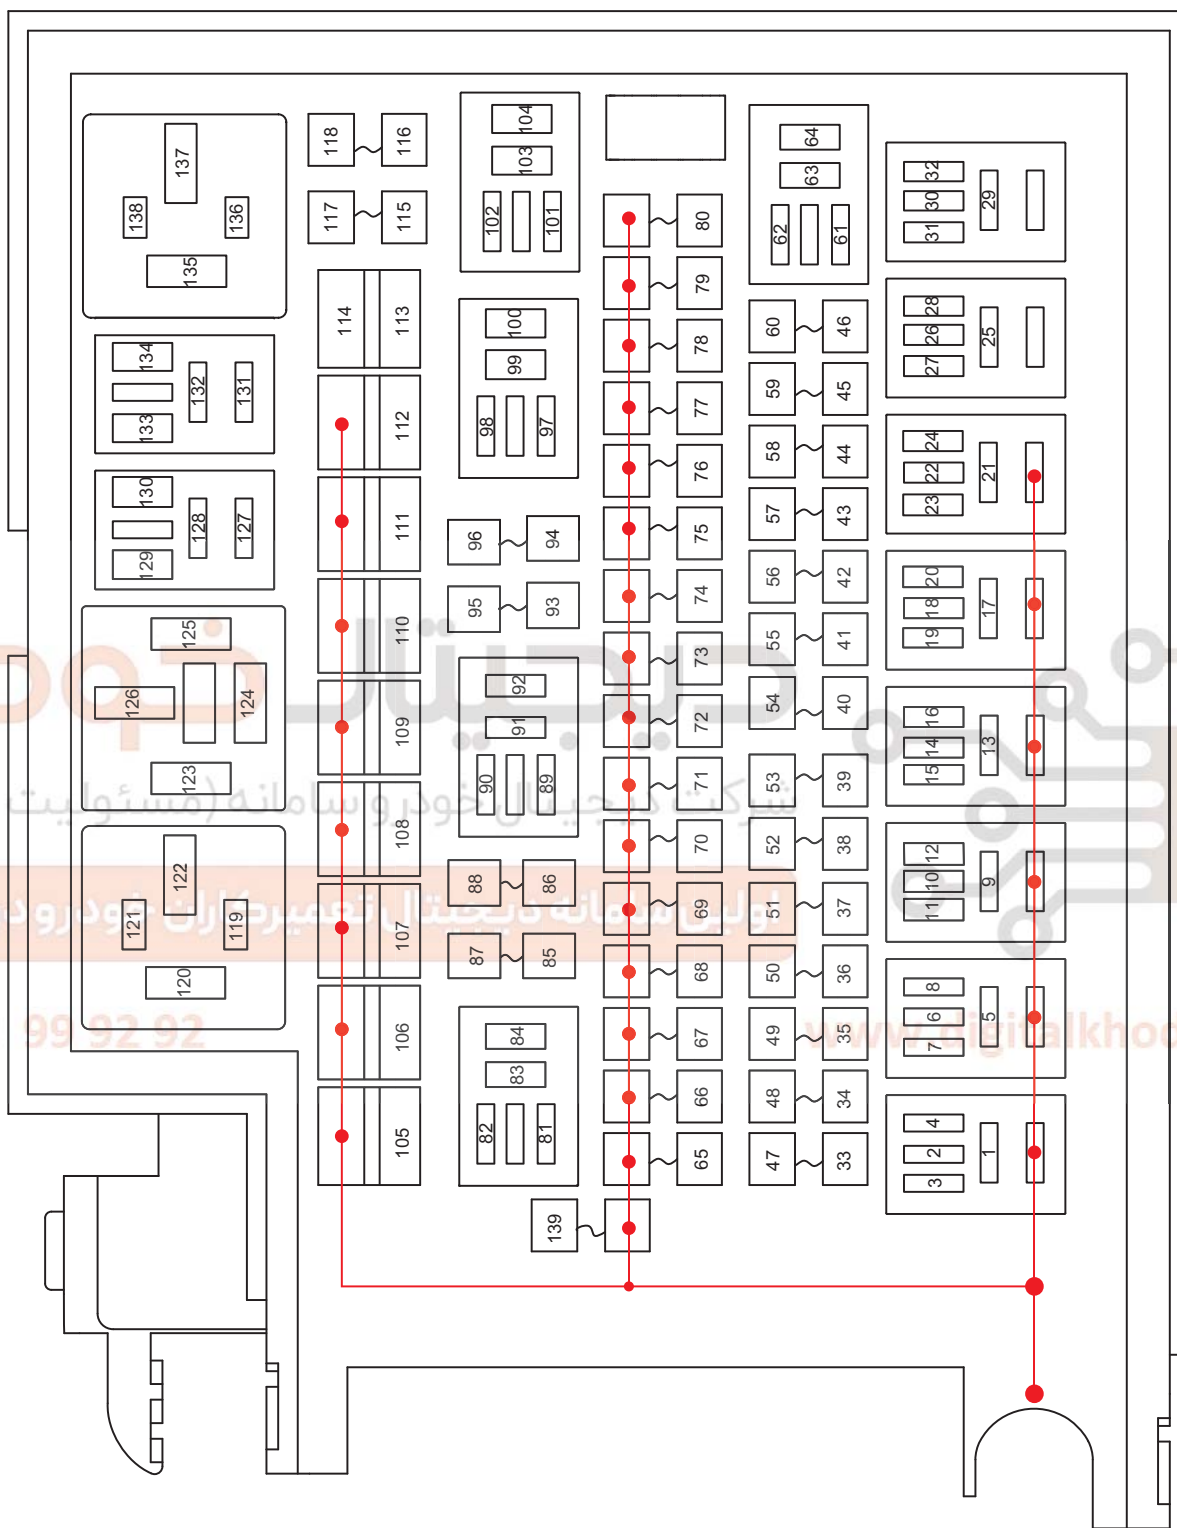


06

EA13T060060

Engine Compartment Fuse and Relay Box Inner Circuit

Circuit Diagram (Page 1 of 4)

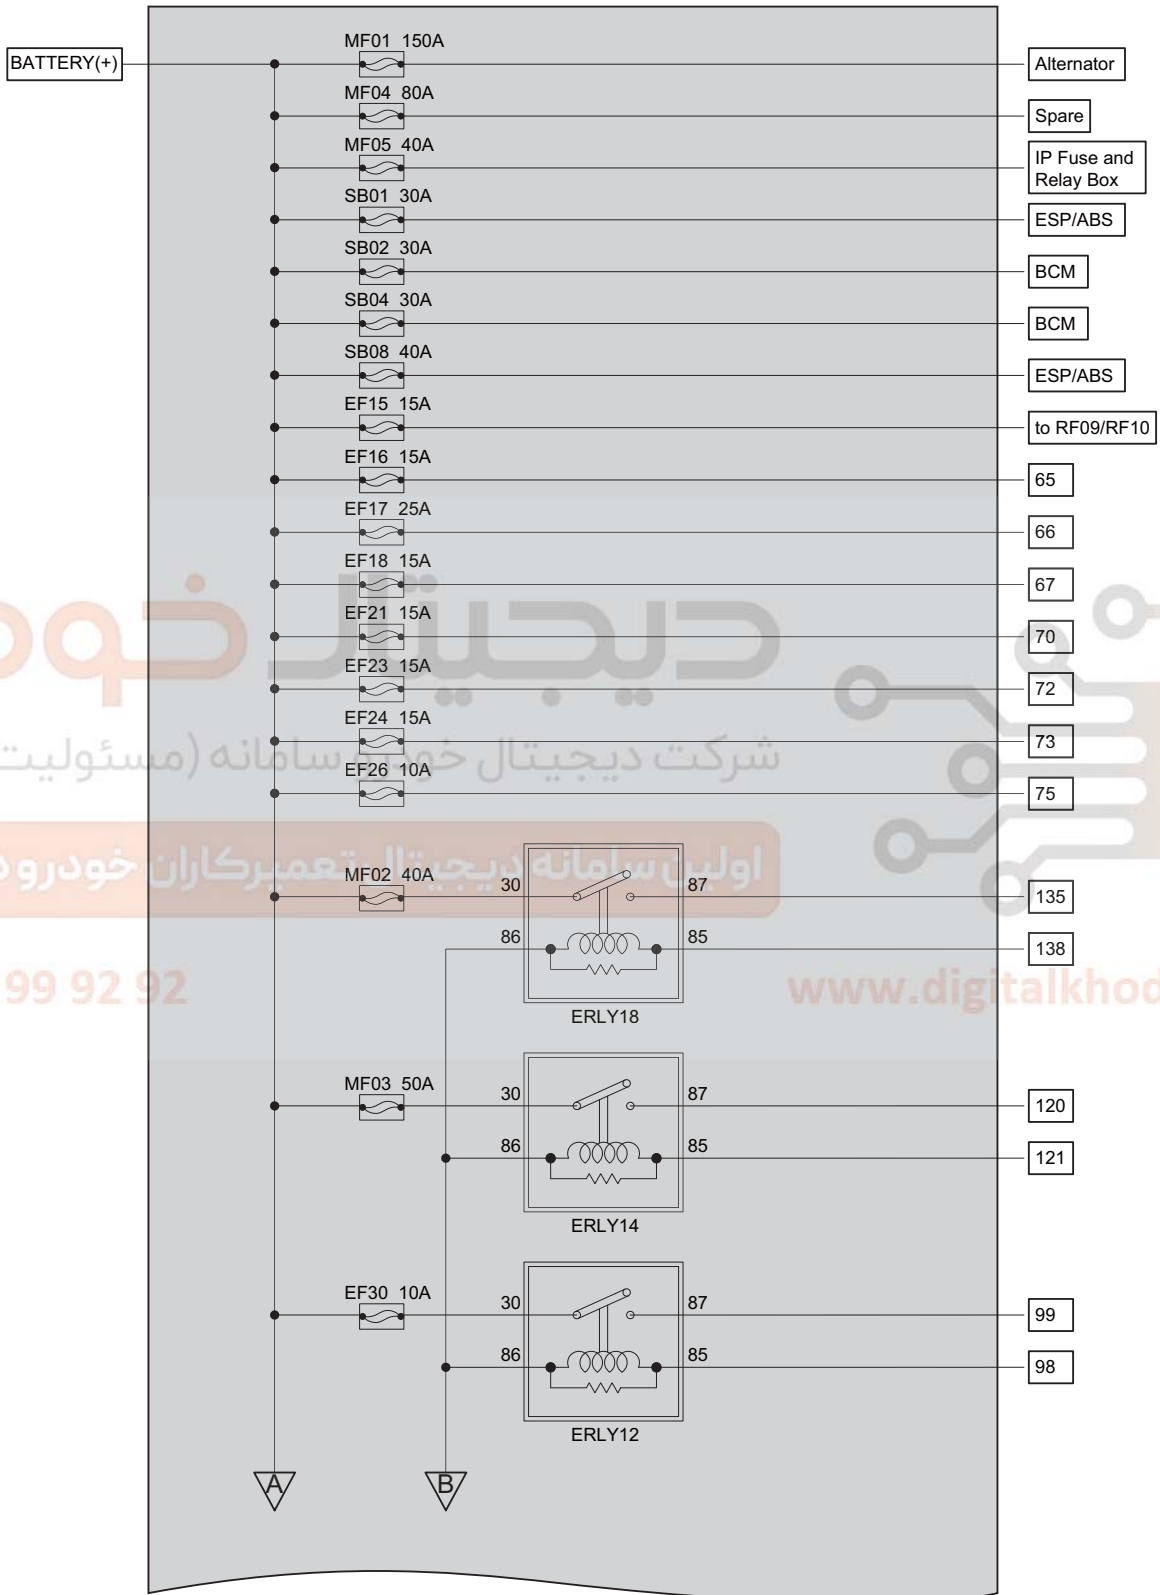

06




021 62 99 92 92

www.digitalkhodro.com

EA13T060061

Circuit Diagram (Page 2 of 4)

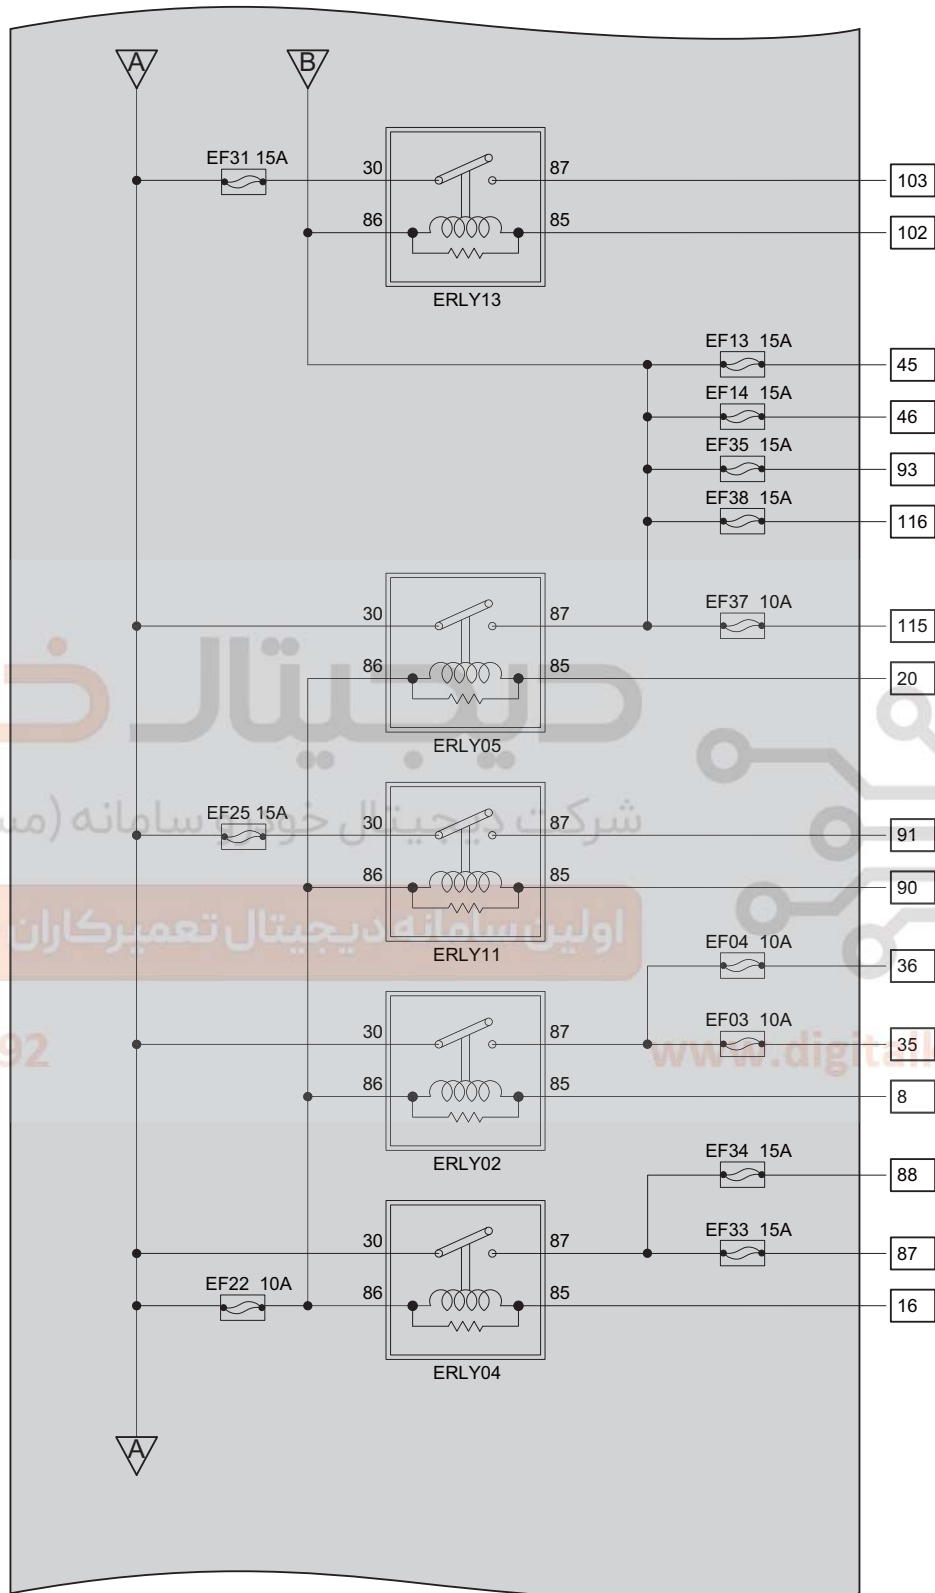


06

دیجیتال خودرو
شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجیتال تعمیرکاران خودرو در ایران
www.digitalkhodro.com

EA13T060062

Circuit Diagram (Page 3 of 4)

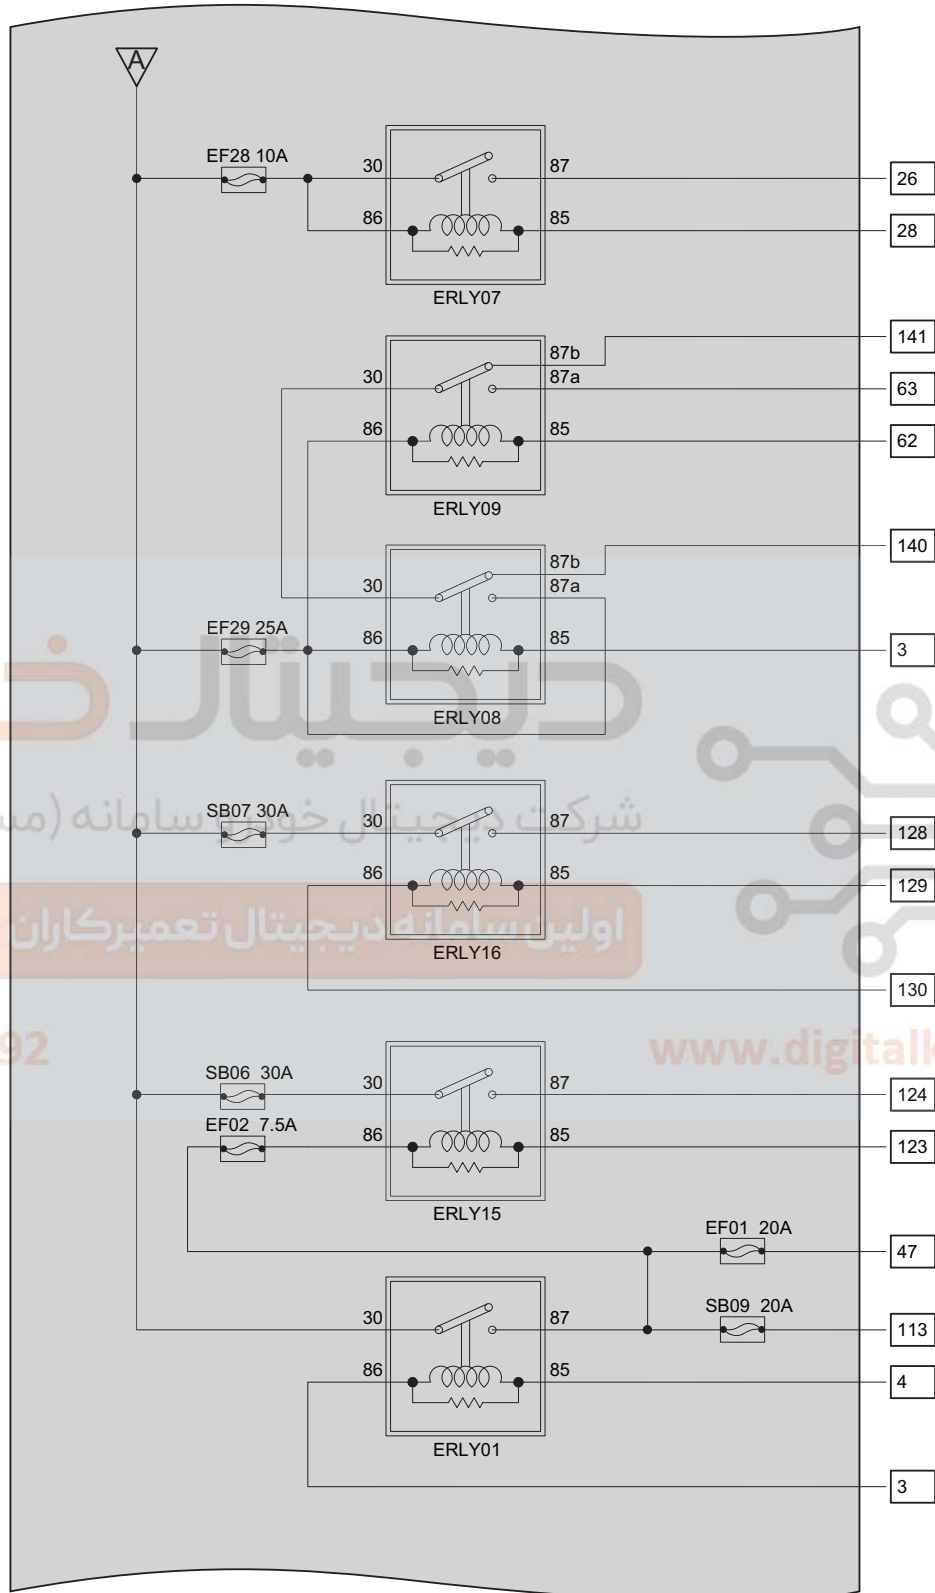

06


دیجیتال خودرو
 شرکت دیجیتال خودرو سامانه (مسئولیت محدود)
 اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

021 62 99 92 92

www.digitalkhodro.com

EA13T060063


Circuit Diagram (Page 4 of 4)

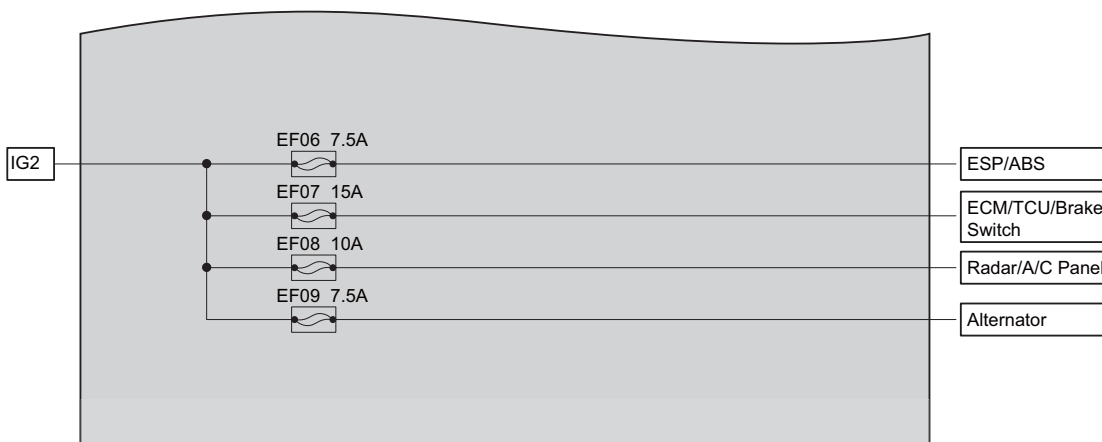

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

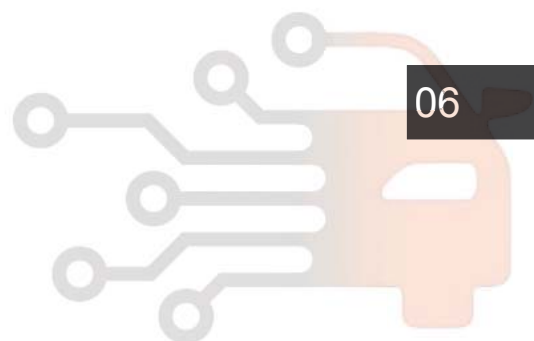

021 62 99 92 92

www.digitalkhodro.com

EA13T060064