


SD876-1



Power Outside Mirror System (2)


SD876-2

RHD

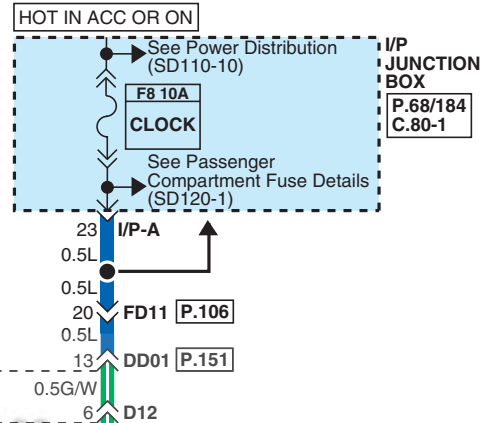

TABLE

CLASS	DIF	VL(8)	HL(9)	VR(12)	HR(11)	C(10)	ACC+(6)	E(5)	B+(4)	M1(2)	M2(3)
LEFT	UP										
	DOWN										
	OFF										
	LEFT										
RIGHT	UP										
	DOWN										
	OFF										
	LEFT										
FOLDING											
UNFOLDING											

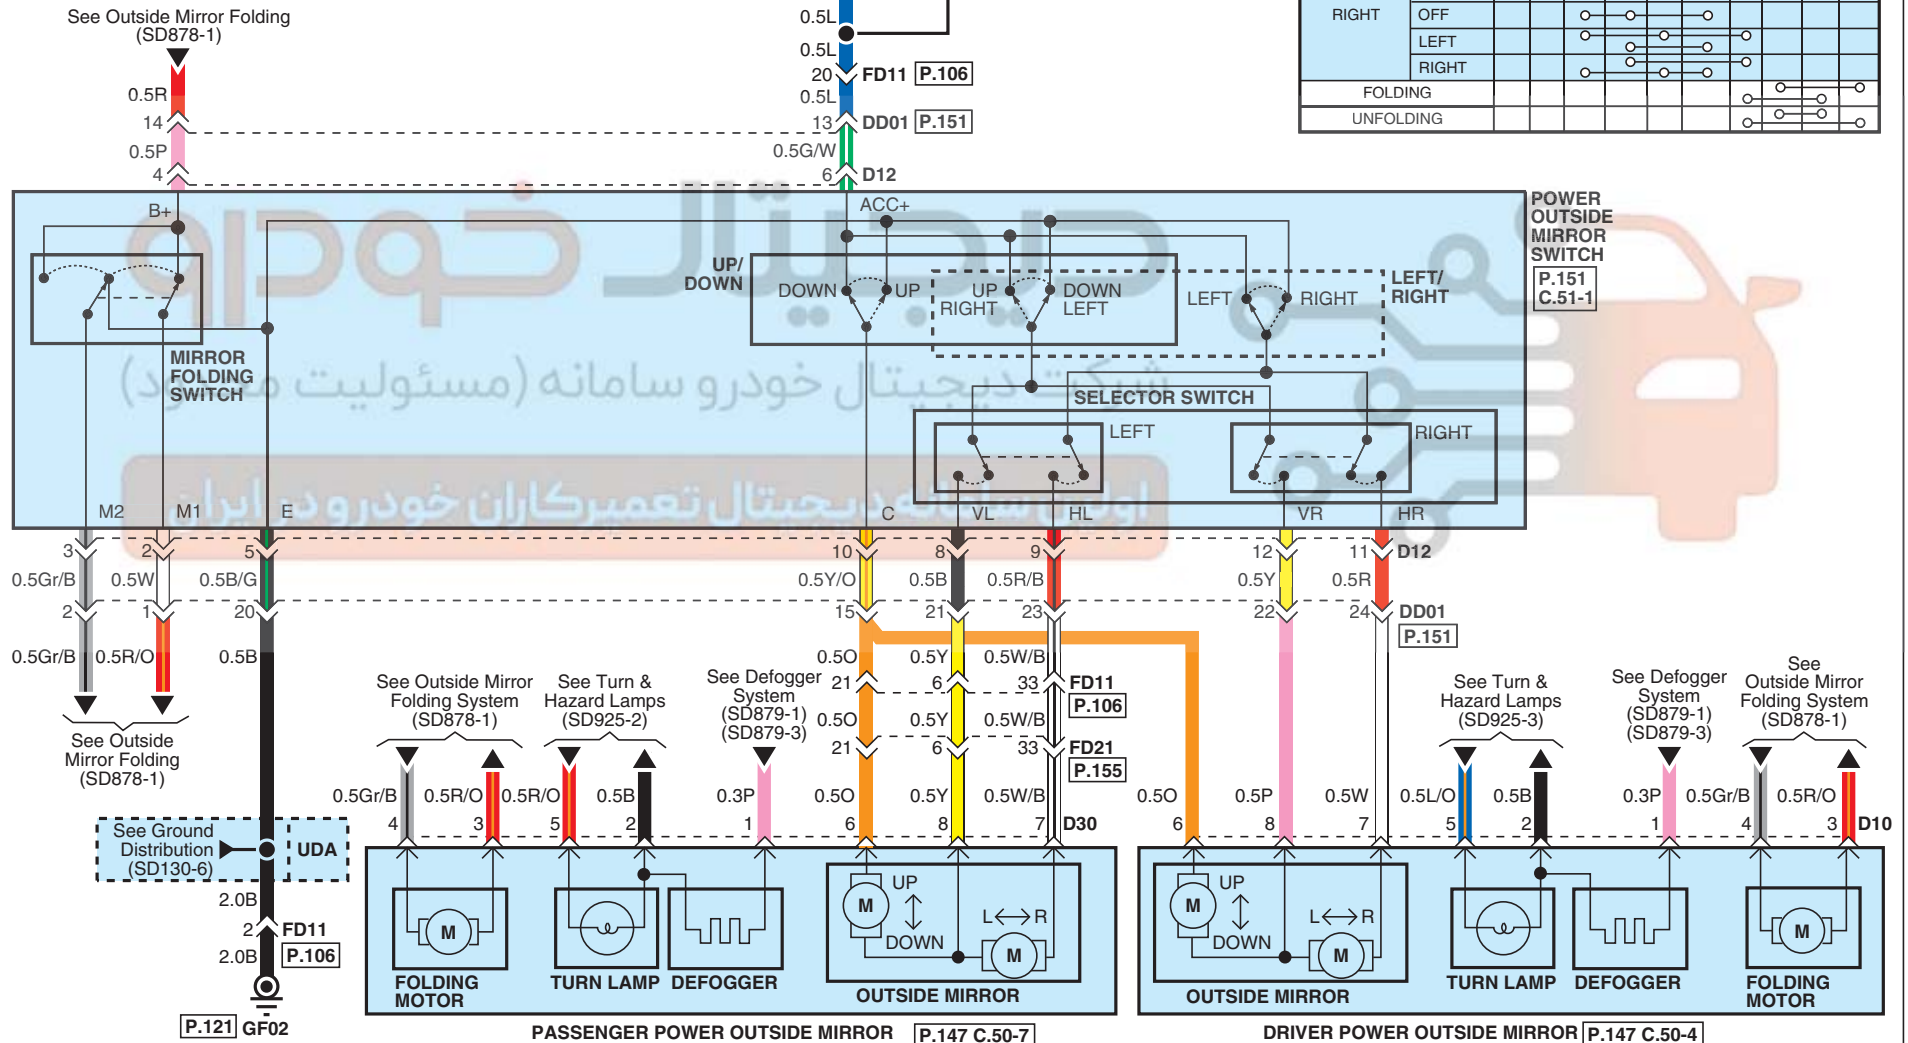

Power Outside Mirror System

Service Tips (1)

Circuit Description


When in an ignition switch ACC position or higher, the angle of the side view mirrors can be adjusted using the mirror switch.

To adjust a mirror, move the lever of the selector switch to R (right) or L (left) and press the Left/Right or Up/Down switch. When the Up/Down switch is pressed, the Left/Right switch is interfaced while the Up/Down switch is interfaced when the Left/Right switch is pressed.


Move the selector switch to the neutral position after the mirror operation so that it will not malfunction.

• Power Outside Mirror Internal Switch Interface Direction


1) Mirror Switch Up

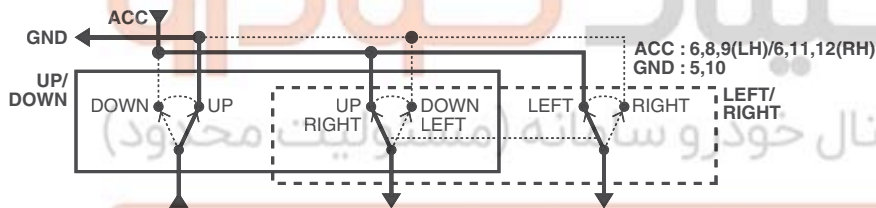


2) Mirror Switch Down

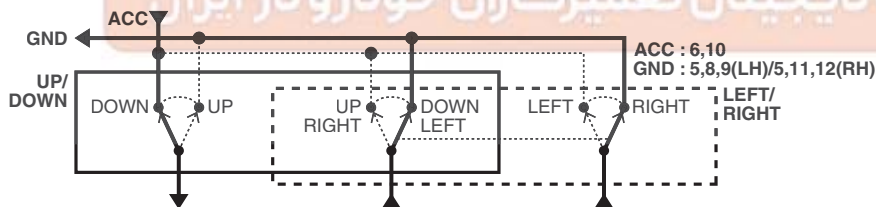

3) Mirror Switch Left

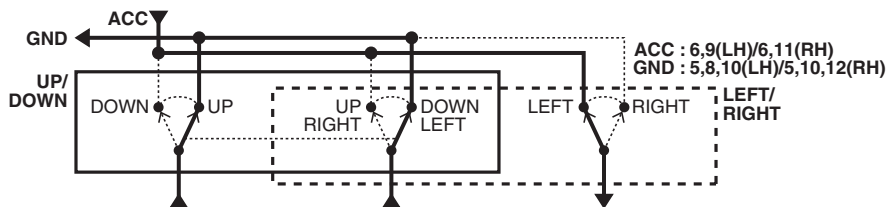

4) Mirror Switch Right

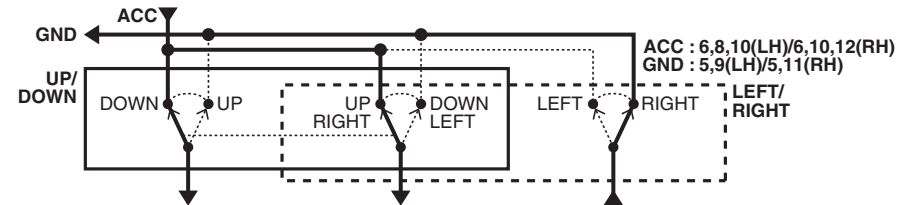

• Power Outside Mirror Inspection

Check if the power outside mirror operates normally as shown in the table below.

	Direction	8	7	6	B+	GND
LH	Up	○	○	○	○	○
	Down	○	○	○	○	○
	OFF	○	○	○	○	○
	Right	○	○	○	○	○
	Left	○	○	○	○	○
RH	Up	○	○	○	○	○
	Down	○	○	○	○	○
	OFF	○	○	○	○	○
	Right	○	○	○	○	○
	Left	○	○	○	○	○

Power Outside Mirror System

Service Tips (2)

MEMO

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

