




4. ECU (ENGINE CONTROL UNIT - GSL G32) 1490









1) IGN COIL, INJECTOR, PEDAL MODULE, THROTTLE SENSOR

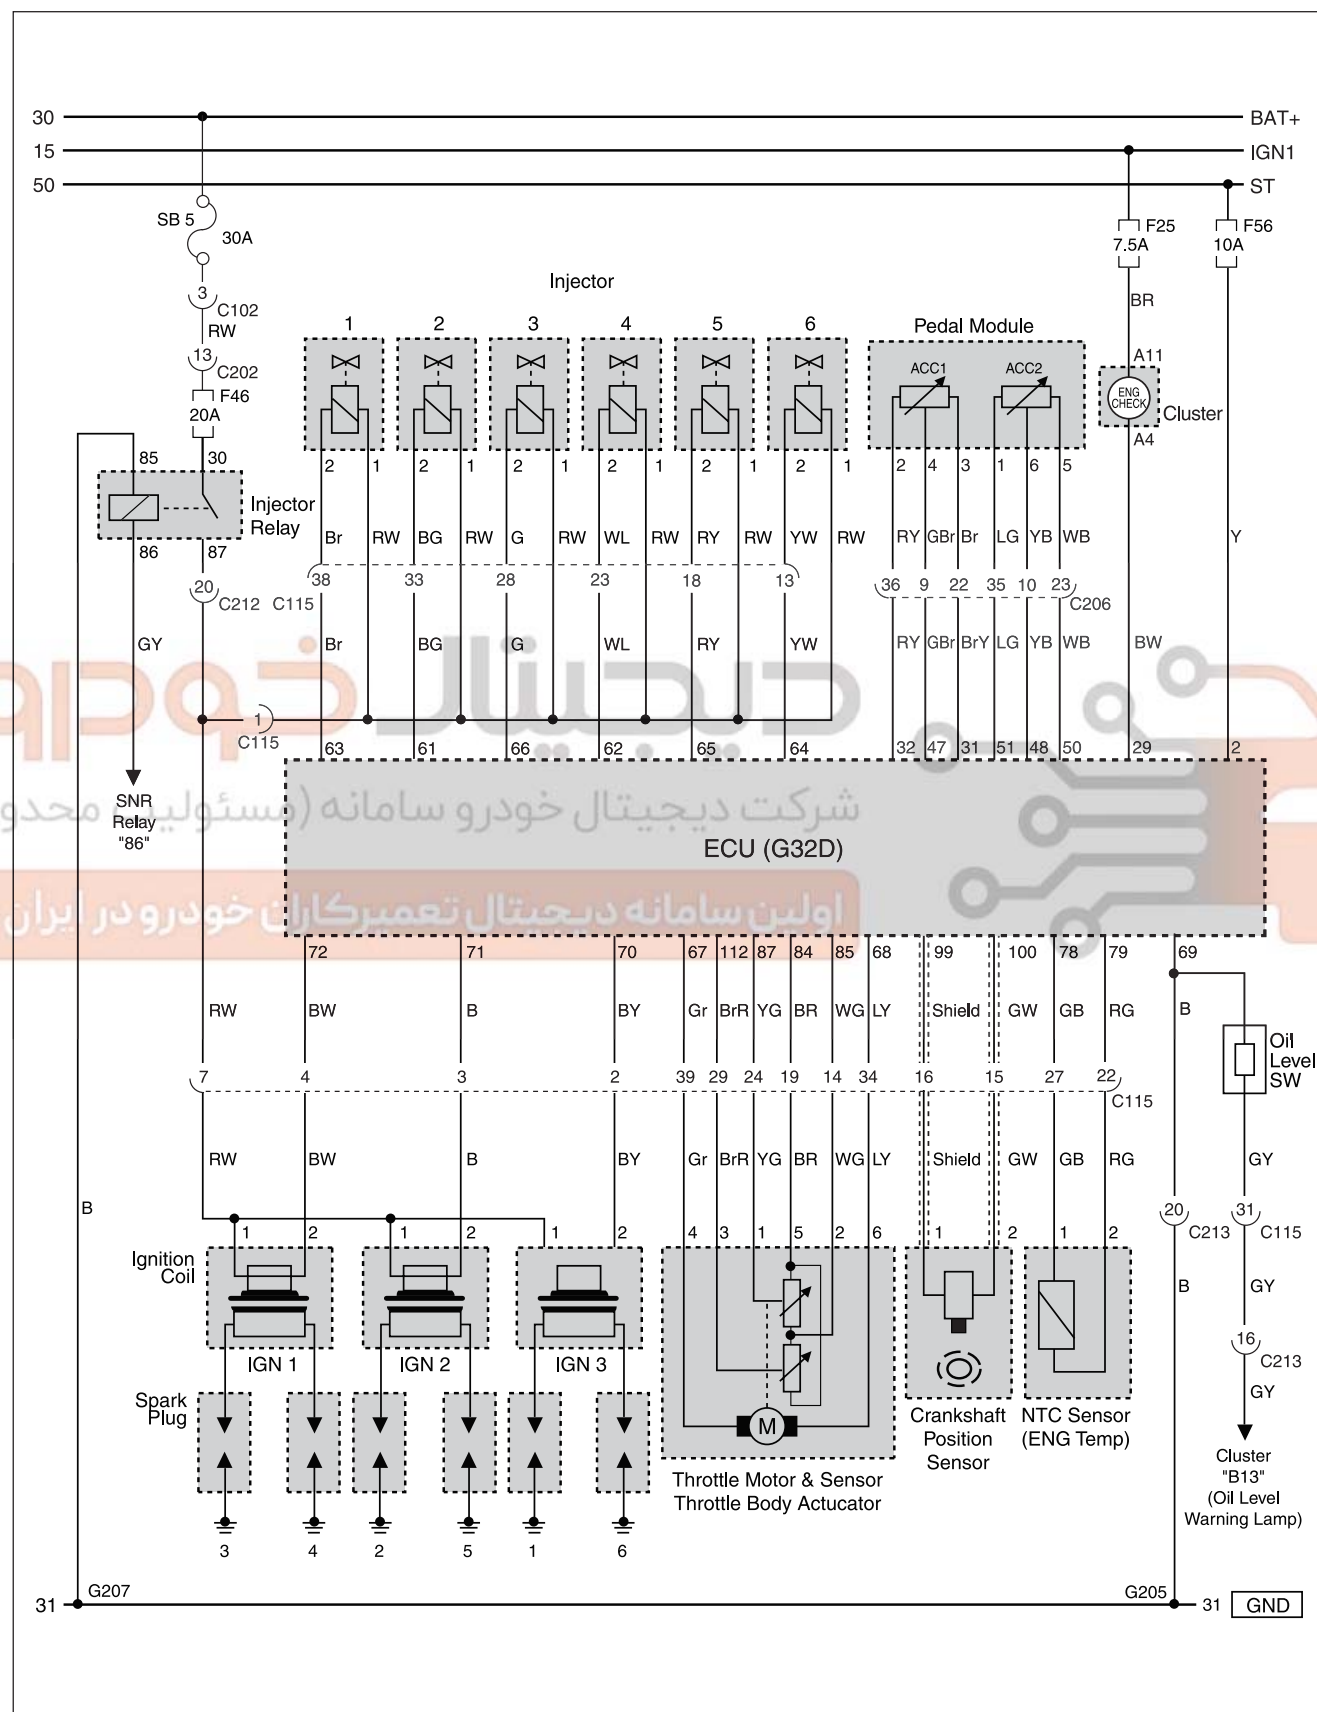

A. CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G205	W/H Main	RH Eng ECU	ECU
G207	W/H Main	Inner the Passengaar Cowl Side PNL	

 B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

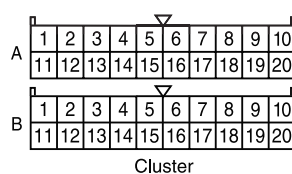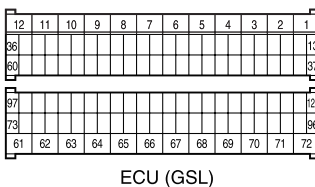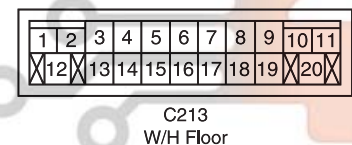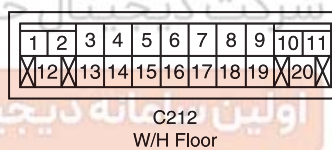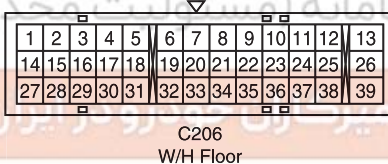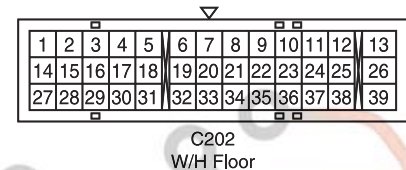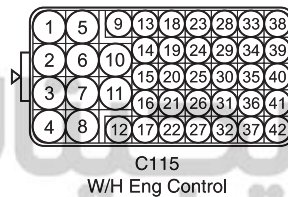




2) O₂ SENSOR, CPS, KNOCK SENSOR, HFM SENSOR, CANISTER PURGE VALVE

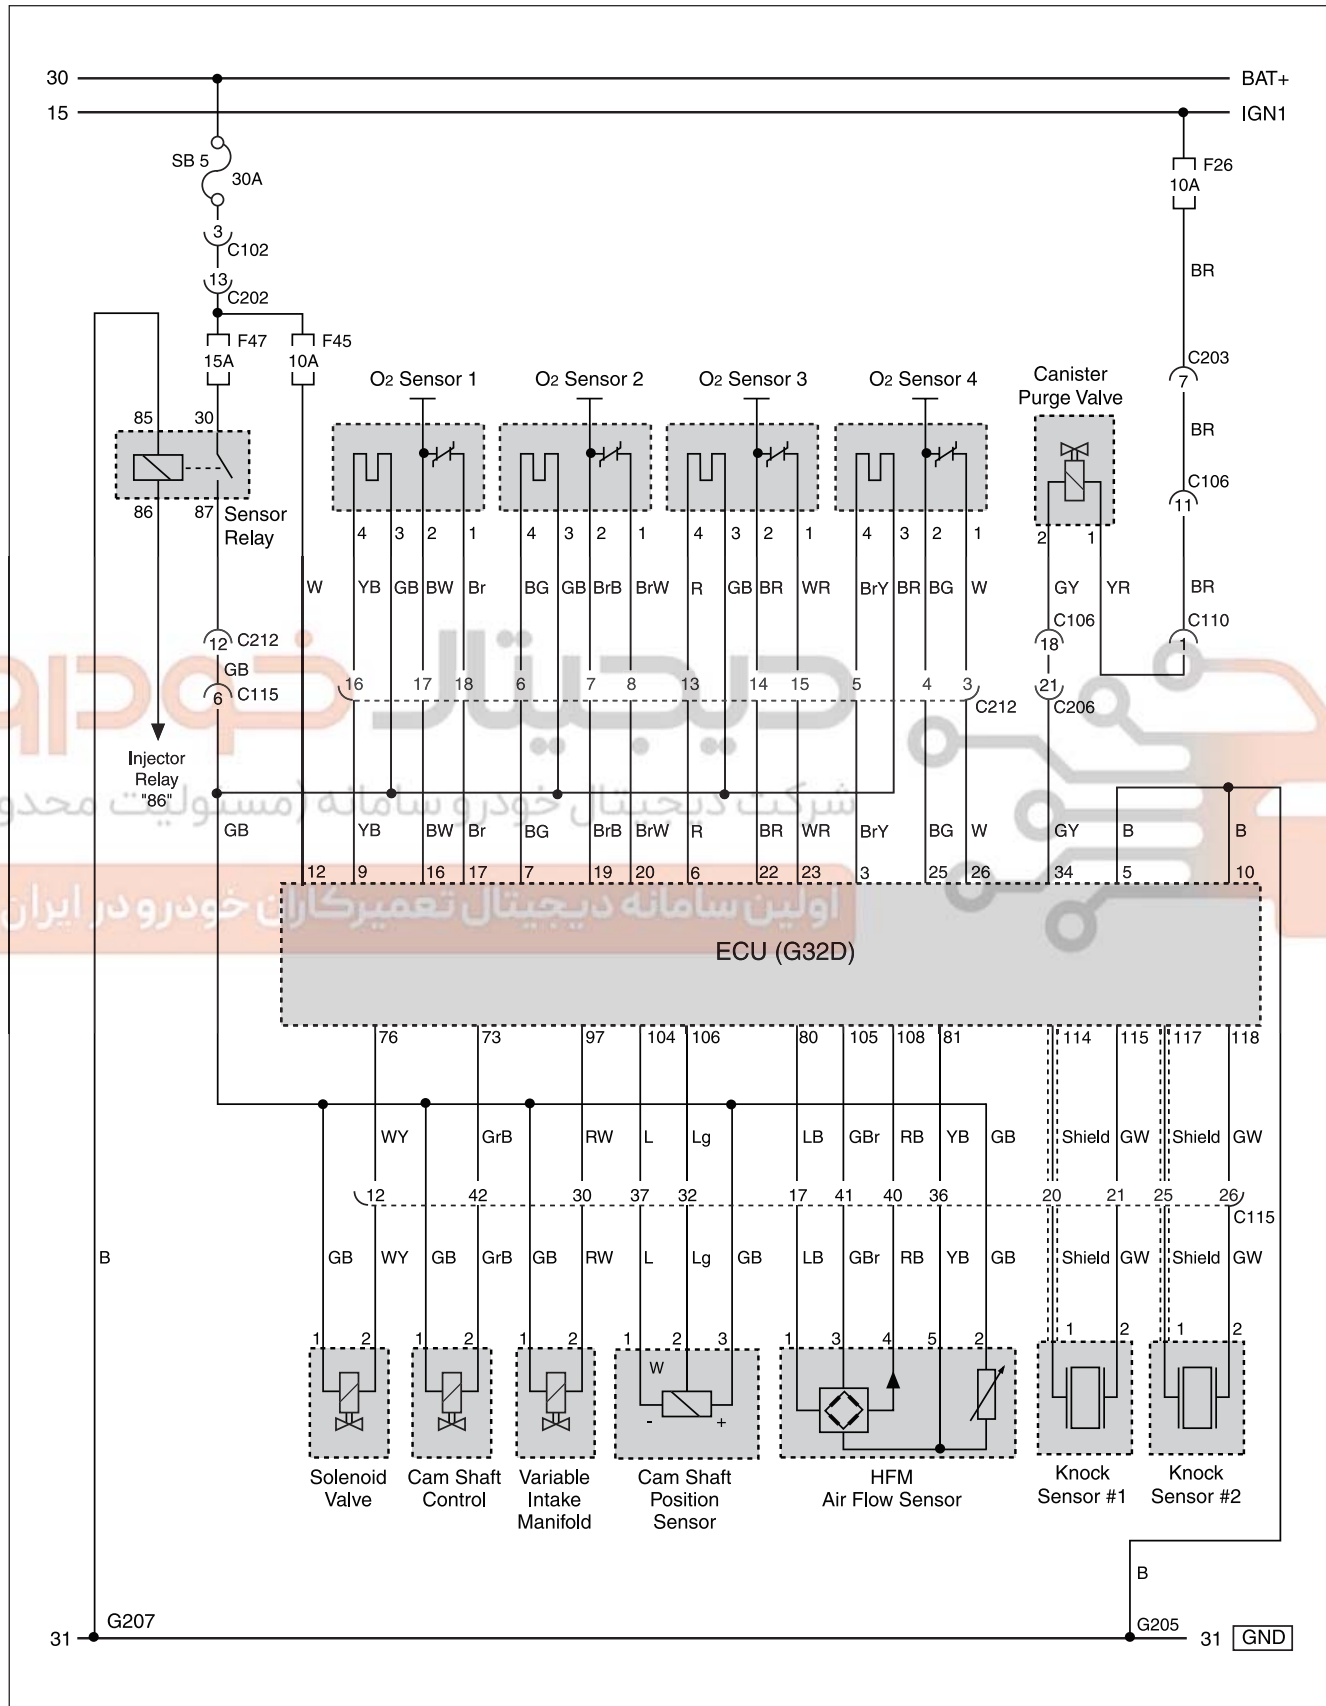

A. CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G205	W/H Main	RH Eng ECU	ECU
G207	W/H Main	Inner the Passengaar Cowl Side PNL	

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

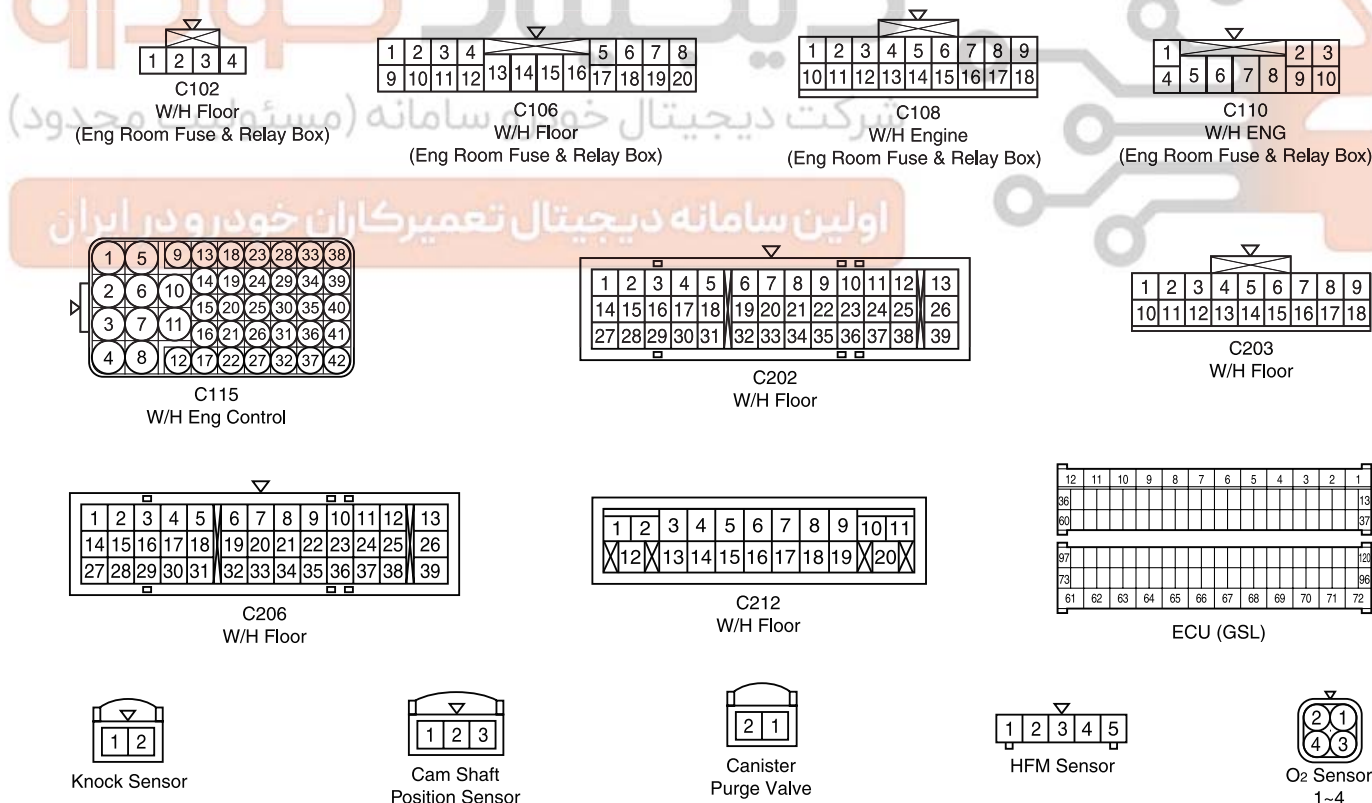




3) S/AIR PUMP, STOP LAMP, CRUISE CONTROL SW, FUEL PUMP, IMMOBILIZER

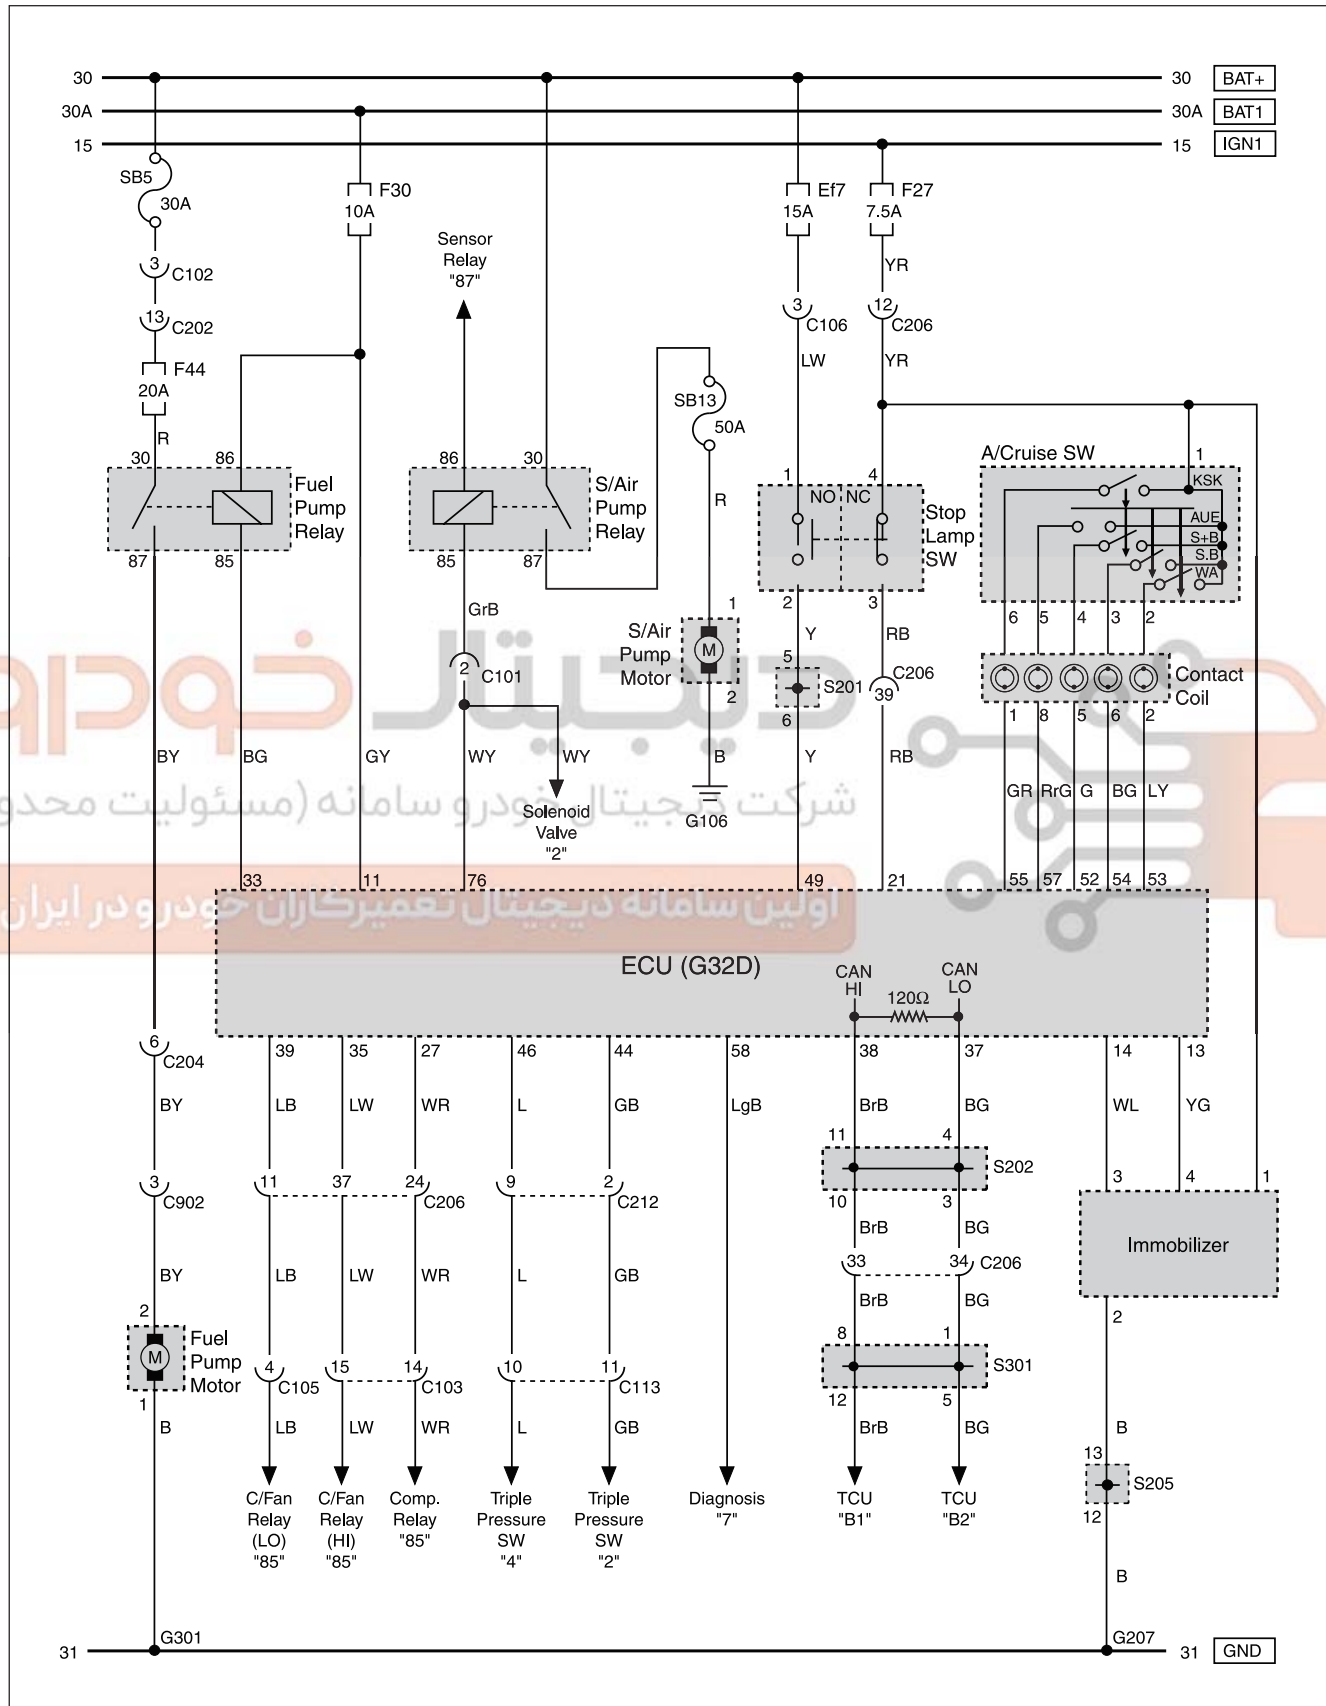


A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C105 (10Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C204 (6Pin, Colorless)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C902 (4Pin, Black)	W/H Floor - W/H Fuel Sender	Upper the T/M	
G106	W/H Eng Room	RH Fender PNL (Beside C113)	GSL
G207	W/H Main	Inner the Passengaar Cowl Side PNL	
G301	W/H Floor	Under the Driver Seat	
S201 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	
S202 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	CAN
S205 (14Pin, Black)	W/H Main	Upper the PTC Protector	GND
S301 (14Pin, Black)	W/H Main	Beside Driver Seat W/H Protector	CAN

 
B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



 
C101
W/H Floor
(Eng Room Fuse & Relay Box)



 
C102
W/H Floor
(Eng Room Fuse & Relay Box)



 
C103
W/H Floor
(Eng Room Fuse & Relay Box)



 
C105
W/H Floor
(Eng Room Fuse & Relay Box)



C106
W/H Floor
(Eng Room Fuse & Relay Box)

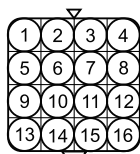

C113
W/H Floor

 


C202
W/H Floor




C204
W/H Floor



Tripple
Pressure SW

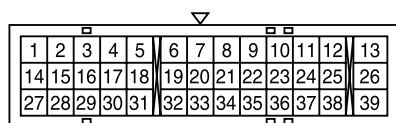


C206
W/H Floor

 

C212
W/H Floor



 
C902
W/H Fuel
Sensor




Diagnosis




Stop Lamp
SW

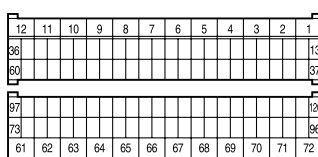

ECU (GSL)

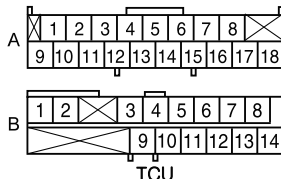


TCU

 


A/Cruise SW



 Fuel Pump
Motor



Immobilizer (GSL)

 

S/Air Pump Motor