

FUSE & RELAY INFORMATION


FUSE & RELAY INFORMATION (3)

SD100-3

E/R JUNCTION BOX

< FRONT >

< REAR >

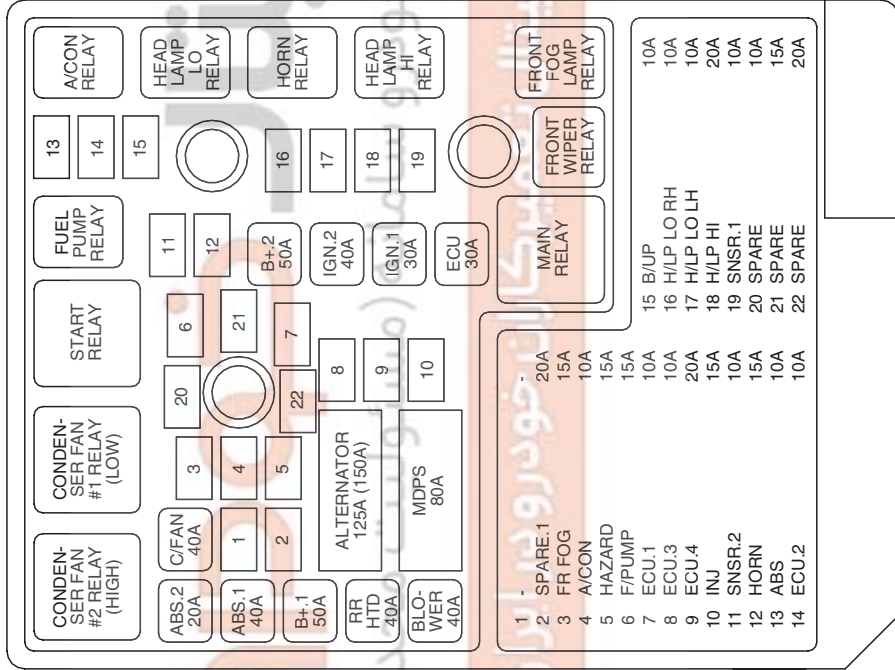

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (4)

SD100-4

CIRCUIT

Description	(A)	Circuit Protected
ALTERNATOR	125A(GSL) 150A(DSL)	Generator, Fusible Link Box (D4FB/D4EA)
MDPS	80A	EPS Control Module
ABS.2	20A	ESP Control Module, ABS Control Module, Multipurpose Check Connector
ABS.1	40A	ESP Control Module, ABS Control Module, Multipurpose Check Connector
B+.1	50A	I/P Junction Box (Tail Lamp Relay, Power Window Relay, DRL Fuse, RR Fog Fuse, Safety P/WDW LH Fuse, Safety P/WDW RH Fuse)
RR HTD	40A	I/P Junction Box (Rear Defogger Relay)
BLOWER	40A	Blower Relay
C/FAN	40A	Condenser Fan #1 Relay (Low), Condenser Fan #2 Relay (High)
B+.2	50A	I/P Junction Box (Audio Fuse, Room LP Fuse, Deicer Fuse, T/GATE Fuse, Stop Fuse, DR Lock Fuse, RR P/OUTLET Fuse)
IGN.2	40A	Ignition Switch, Start Relay
IGN.1	30A	Ignition Switch
ECU	30A	Main Relay, PCM/ECM
FR FOG	15A	Front Fog Lamp Relay
A/CON	10A	A/Con Relay
HAZARD	15A	Hazard Switch, ICM Relay Box (Hazard Relay)
F/PUMP	15A	Fuel Pump Relay
ECU.1	10A	ECM (G4FC), PCM (G4FC), Generator (D4EA), TCM (D4FB)
ECU.3	10A	ECM (D4FB/D4EA)
ECU.4	20A	ECM (D4FB/D4EA)
INJ	15A	A/Con Relay, Fuel Pump Relay, Injector #1, 2, 3, 4 (G4FC/G4GC), PCM (G4FC/G4GC), Oil Control Valve (G4FC/G4GC), ECM (G4FC/G4GC), Purge Control Solenoid Valve (G4GC), VGT Actuator (D4FB/D4EA), Fusible Link Box (D4FB/D4EA), Throttle Flap Actuator (D4FB), EGR Control Actuator (D4FB/D4EA), Immobilizer Module (D4FB), Air Heater Relay (D4FB), Electrical Throttle Actuator (D4FB/D4EA), Camshaft Position Sensor (D4FB/D4EA), Idle Speed Control Actuator (G4FC/G4GC), Pulse Generator 'A', 'B' (G4FC/G4GC/D4FB), Air Flow Sensor (D4FB/D4EA), TCM (D4FB), PCM (G4FC/G4GC), Stop Lamp Switch (G4FC/G4GC), Fuel Filter Warning Switch (D4FB/D4EA), ECM (D4FB/D4EA), Vehicle Speed Sensor
SNRSR.2	10A	Horn Relay, ICM Relay Box (Burglar Alarm Horn Relay)
HORN	15A	ESP Control Module, ABS Control Module, Yaw Rate Sensor, Multipurpose Check Connector
ABS	10A	Condenser (G4FC), Ignition Coil #1, 2, 3, 4 (G4FC), PCM (G4GC)
ECU.2	10A	Back-up Lamp Switch, Multifunction Switch, Cruise Control Module, Transaxle Range Switch
B/UP	10A	Head Lamp RH, Head Lamp Leveling Actuator RH
H/LP LO RH	10A	Head Lamp LH, Head Lamp Leveling Actuator LH, Head Lamp Leveling Switch, Instrument Cluster
H/LP LO LH	10A	Head Lamp Hi Relay
H/LP HI	20A	Immobilizer Module (G4FC/G4GC), Oxygen Sensor (G4FC/G4GC), PCM (G4FC), Camshaft Position Sensor (G4FC/G4GC), Purge Control Solenoid Valve (G4FC), Crankshaft Position Sensor (G4GC), Stop Lamp Switch (D4FB/D4EA), Lambda Sensor (D4FB/D4EA), Immobilizer Module (D4EA)
SNRSR.1	10A	

※ USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATIONS

FUSE & RELAY INFORMATIONS (5)

SD100-5

FUSIBLE LINK BOX

D4FB/D4EA

