

Body (Interior and Exterior)

BUMPER

FRONT BUMPER

SEAT

REAR SEAT BELT

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران




BD -2

BODY (INTERIOR AND EXTERIOR)

BUMPER

FRONT BUMPER

COMPONENTS E6A3DA4F

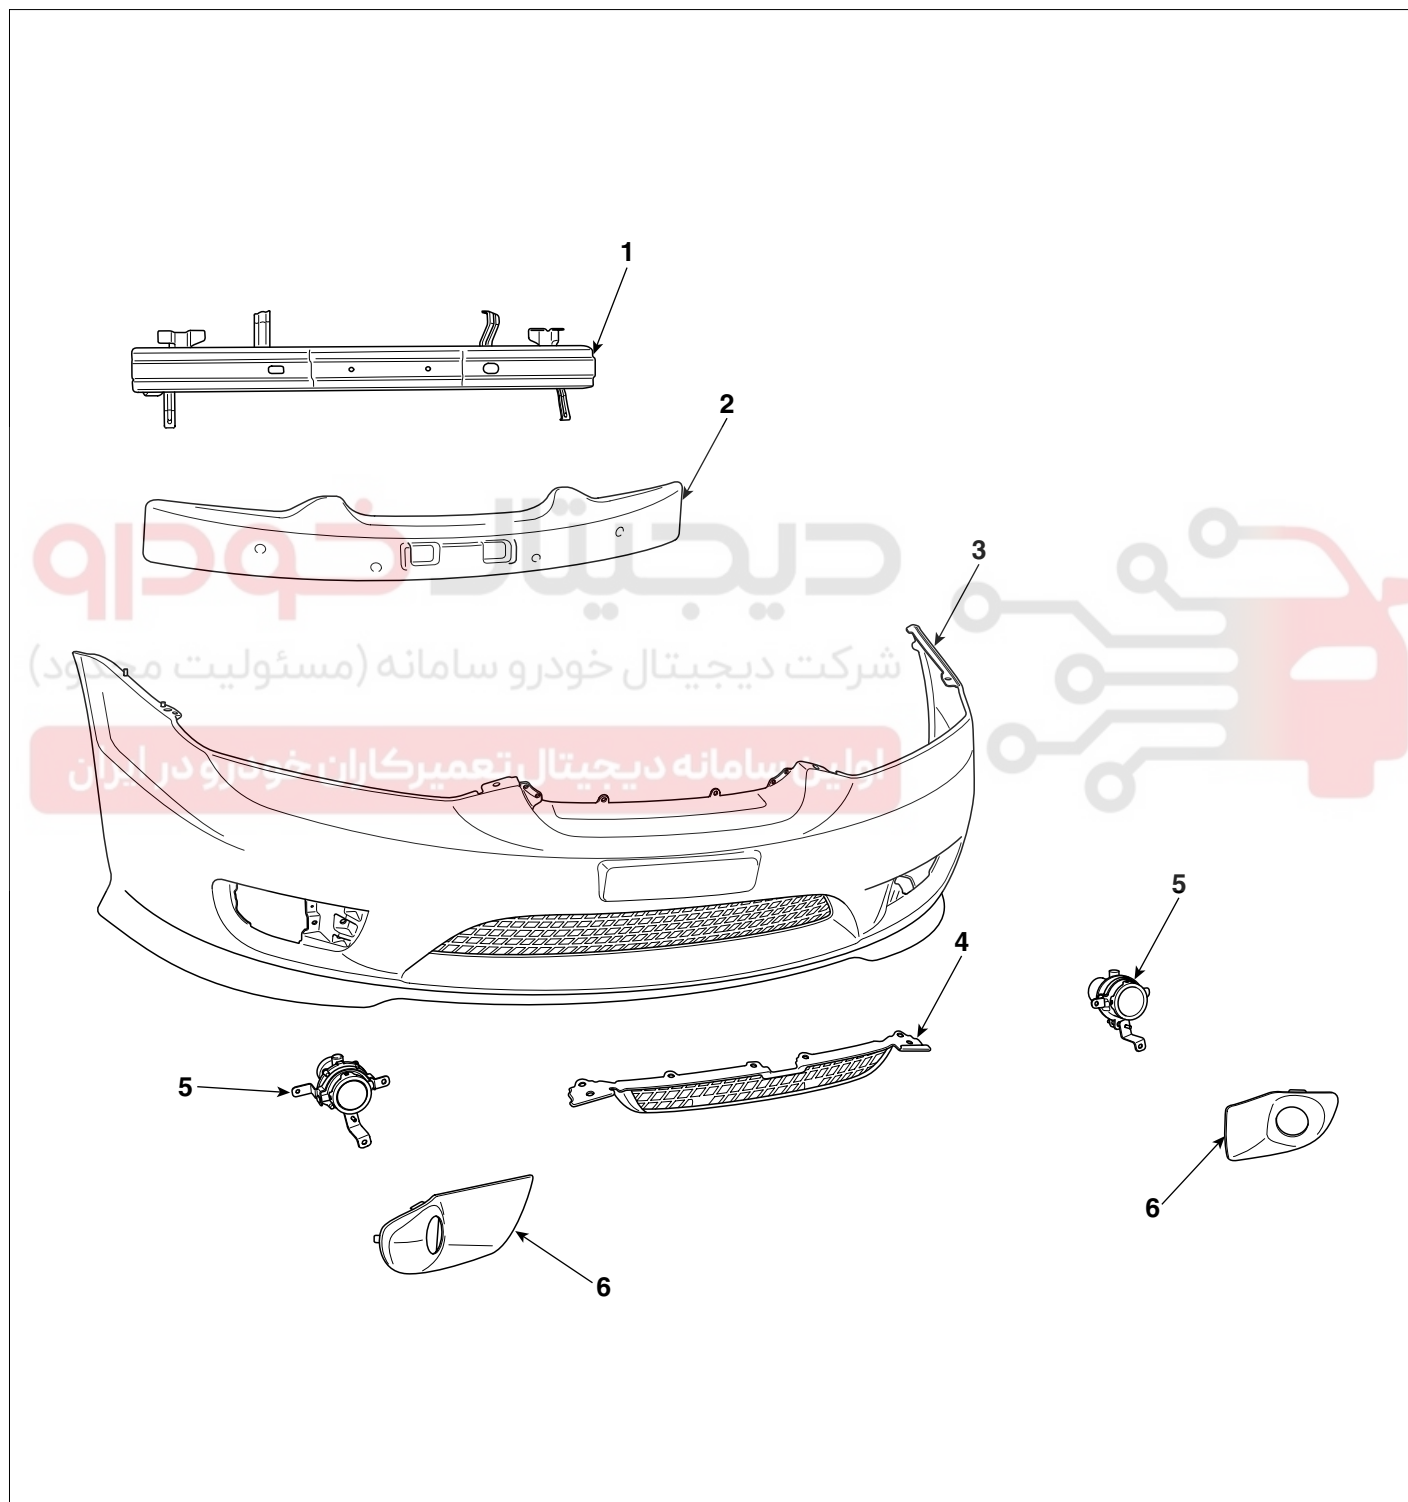

- 1. Front bumper rail
- 2. Front bumper energy absorber foam
- 3. Front bumper cover

- 4. Front bumper upper mesh
- 5. Fog lamp
- 6. Fog lamp cover

LSOE029A

BUMPER

BD -3

REPLACEMENT EC5744BC


 
 
FRONT BUMPER COVER REPLACEMENT

1. Remove the front bumper cover (A).

Fastener Locations

▶ : Screw, 3


▷ : Clip, 7

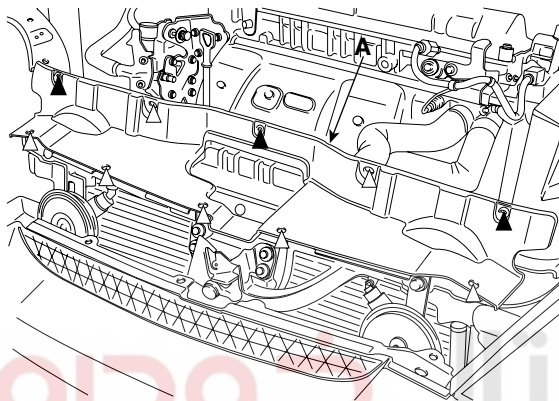

LSOE029B


2. After loosening the mounting bolt, remove the head-lamp (A).

▶ : Bolt Location, 3

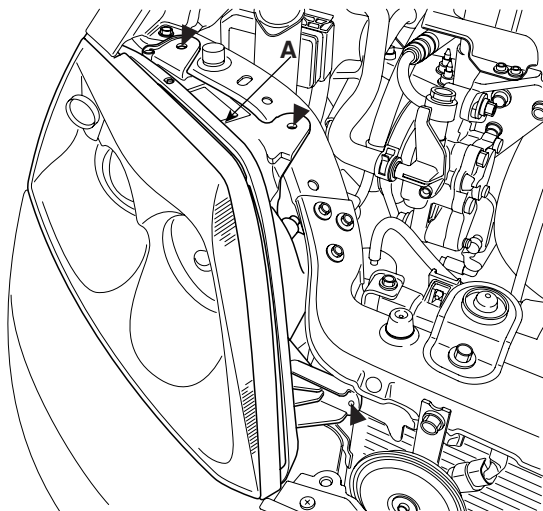

LSOE029C

3. Disconnect the fog lamp connector (A).

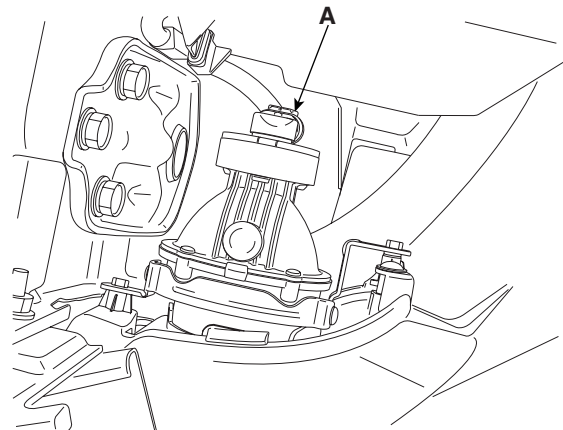

LSOE029D


4. Remove the front bumper cover (A).

Fastener Locations

▷ : Clip, 14

○ : Screw, 2

▶ : Screw, 2

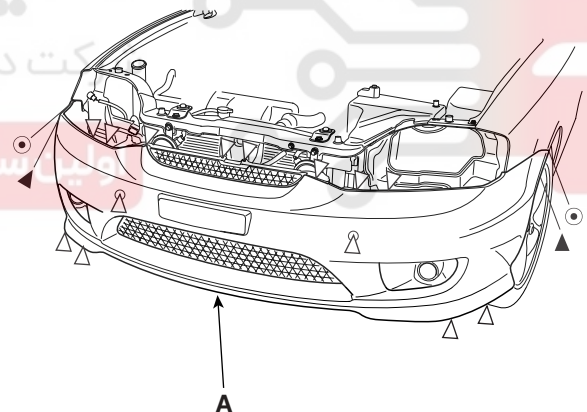

LSOE029E

5. Installation is the reverse of removal.


BD -4

BODY (INTERIOR AND EXTERIOR)

FOG LAMP REPLACEMENT

1. Remove the front bumper cover (See page BD-3).
2. After loosening the mounting screw, remove the fog lamp (A).

▷ : Screw Locations, 3

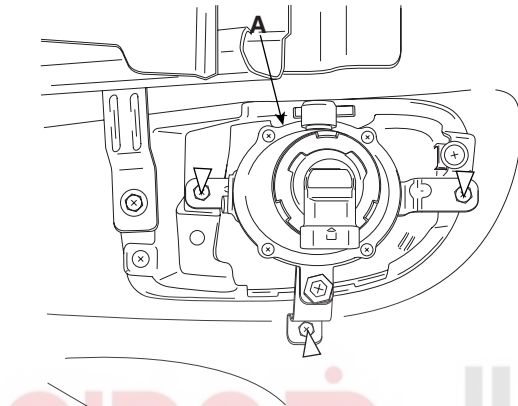

LSOE029F


3. Installation is the reverse of removal.

FRONT BUMPER RAIL REPLACEMENT

1. Remove the front bumper cover (See page BD-3).
2. Loosening the front bumper rail mounting bolt, nut.
3. Remove the front bumper rail (A).

Fastener Locations

▷ : Bolt, 2 ▶ : Nut, 4

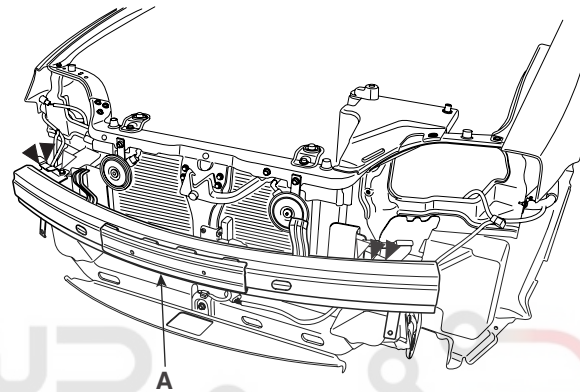

LSOE029G

4. Installation is the reverse of removal.

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران


SEAT

BD -5

SEAT

REAR SEAT BELT

COMPONENTS E9A8C2C9

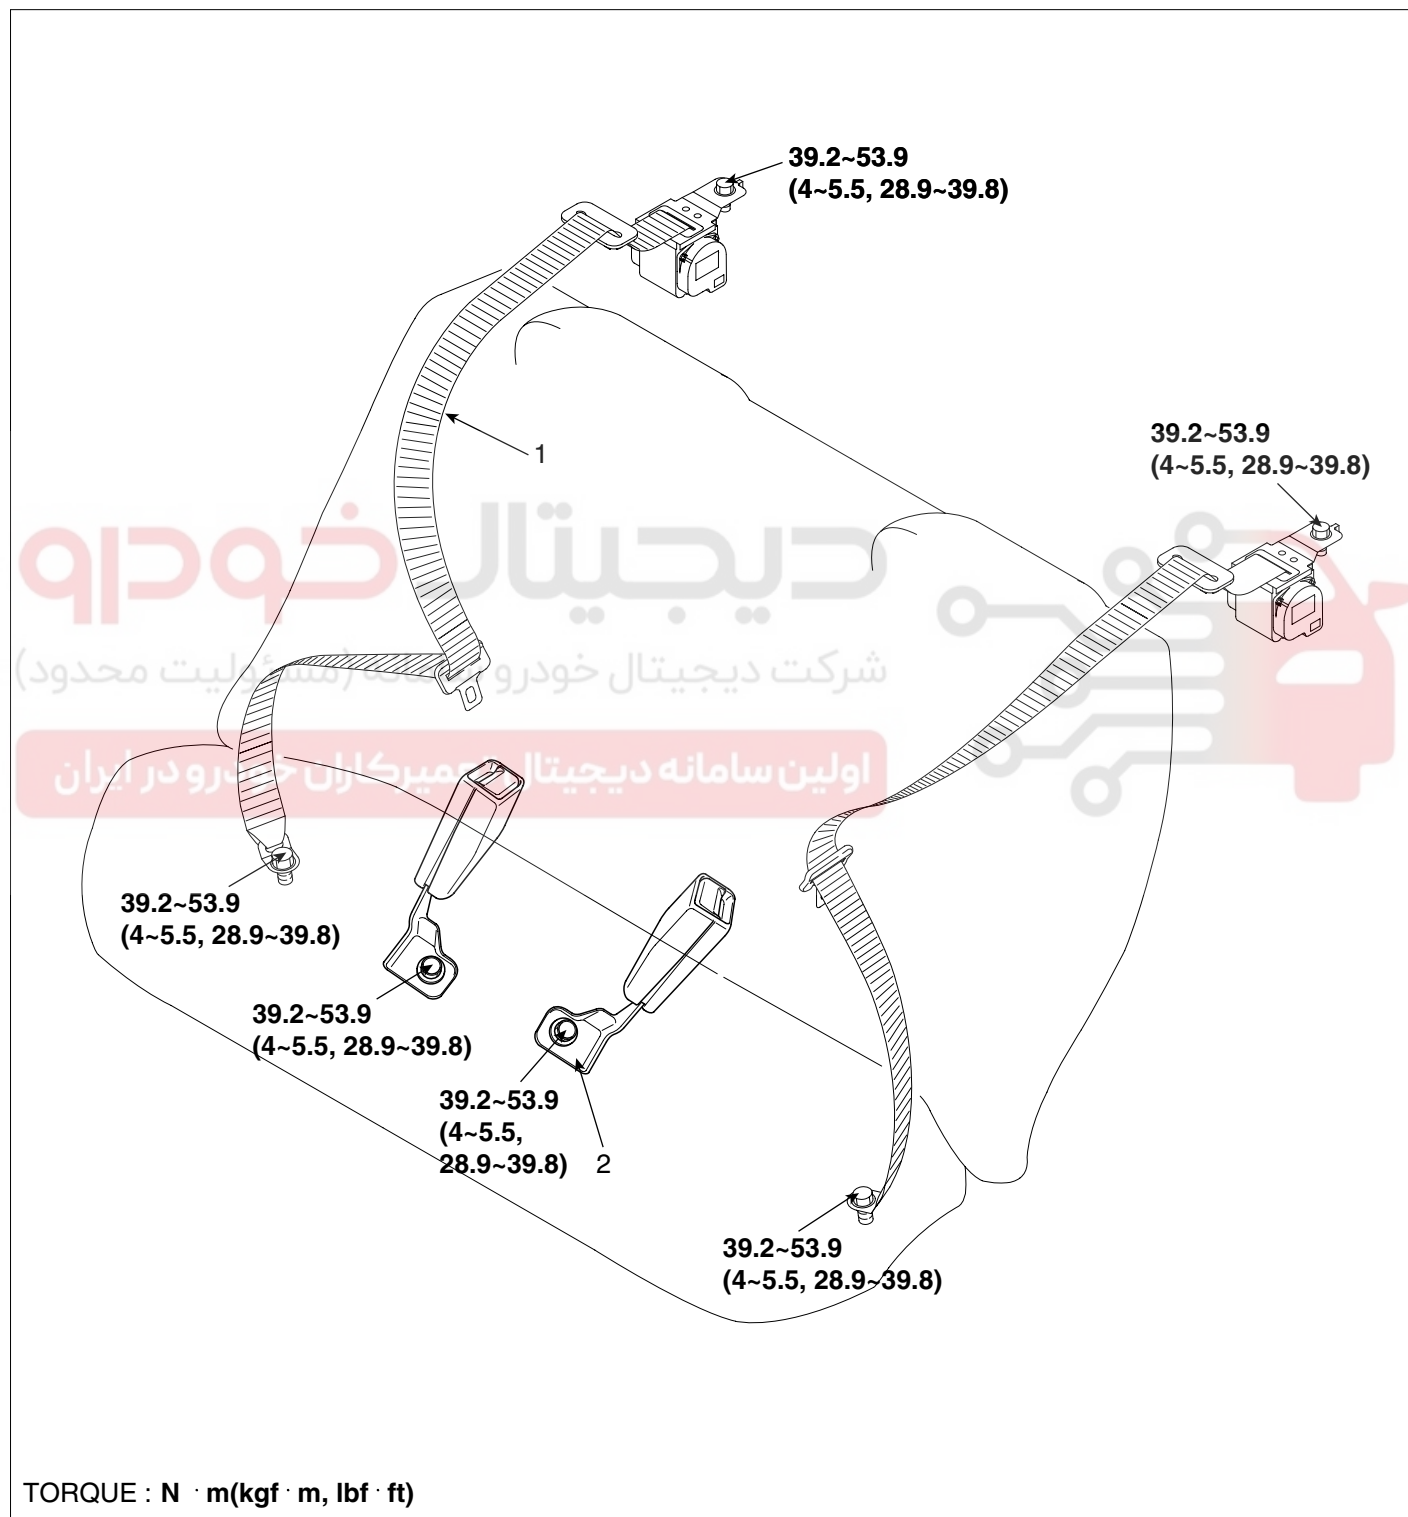

1. Rear seat belt

2. Rear seat buckle

LSOE035A

BD -6

BODY (INTERIOR AND EXTERIOR)

REPLACEMENT


E495C845

REAR SEAT BELT REPLACEMENT

1. After loosening the rear seat back mounting bolt, remove the rear seat back (A).

► : Bolt Location, 4

34.3 ~ 44.1 N•m
(3.5 ~ 4.5 kgf•m
25.3 ~ 32.5 lbf•ft)

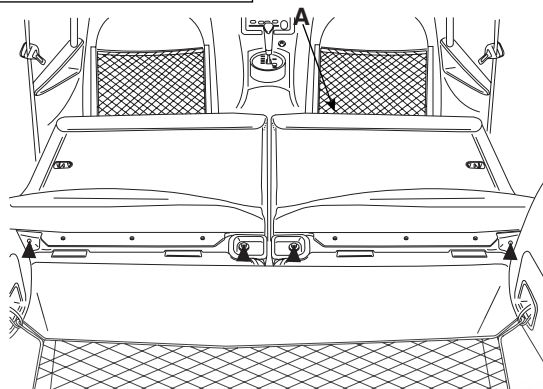


LSOE035B

2. After loosening the rear seat cushion mounting bolt, remove the rear seat (A).

► : Bolt Location

34.3 ~ 44.1 N•m
(3.5 ~ 4.5 kgf•m
25.3 ~ 32.5 lbf•ft)

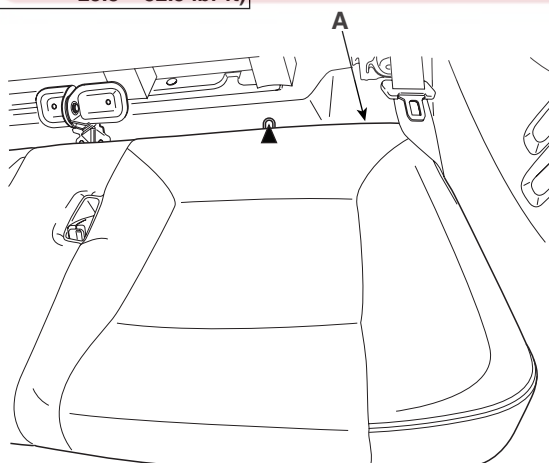


LSOE035C

3. Remove the trim (A).

Fastener Locations

► : Bolt


▷ : Clip

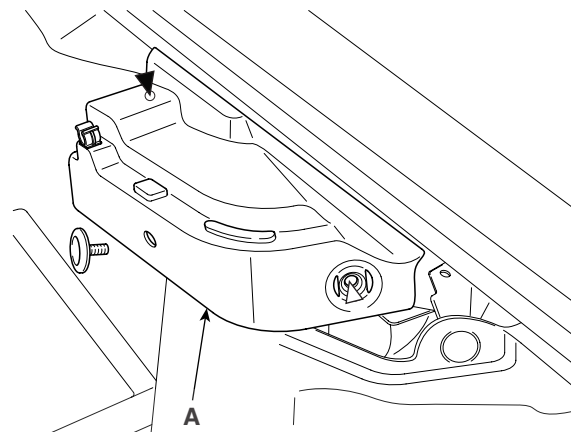

LSOE035D

4. Loosening the retractor (A) mounting bolt.

5. After loosening the lower anchor (B) mounting bolt, remove seat belt (C).

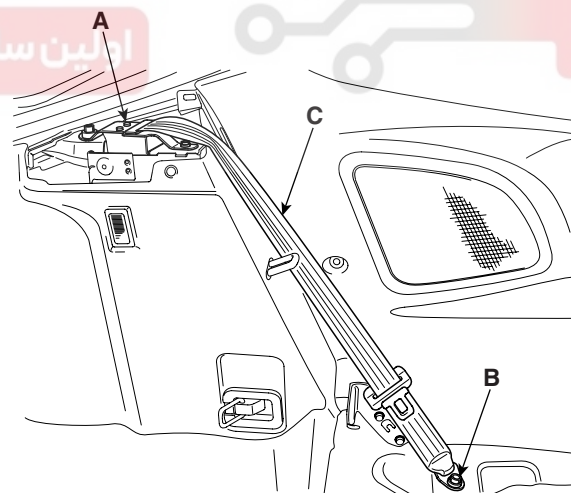



LSOE035E

6. Installation is the reverse of removal.

SEAT**BD -7****REAR SEAT BELT BUCKLE REPLACEMENT**

1. Remove the rear seat (See page BD-6).
2. Remove the seat buckle (A).

 ► : Bolt location, 2

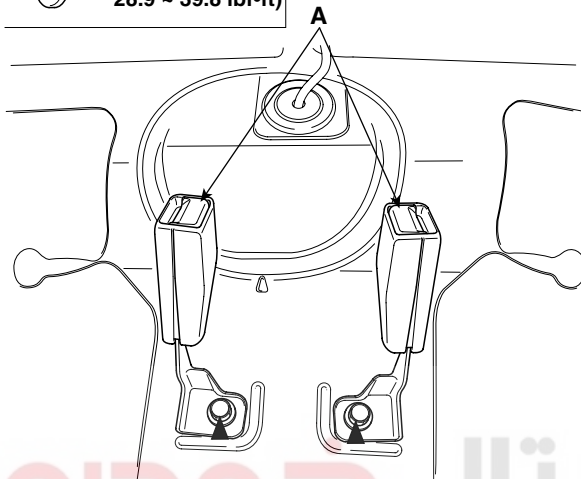

3. Installation is the reverse of removal.

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

