



Head Lamps

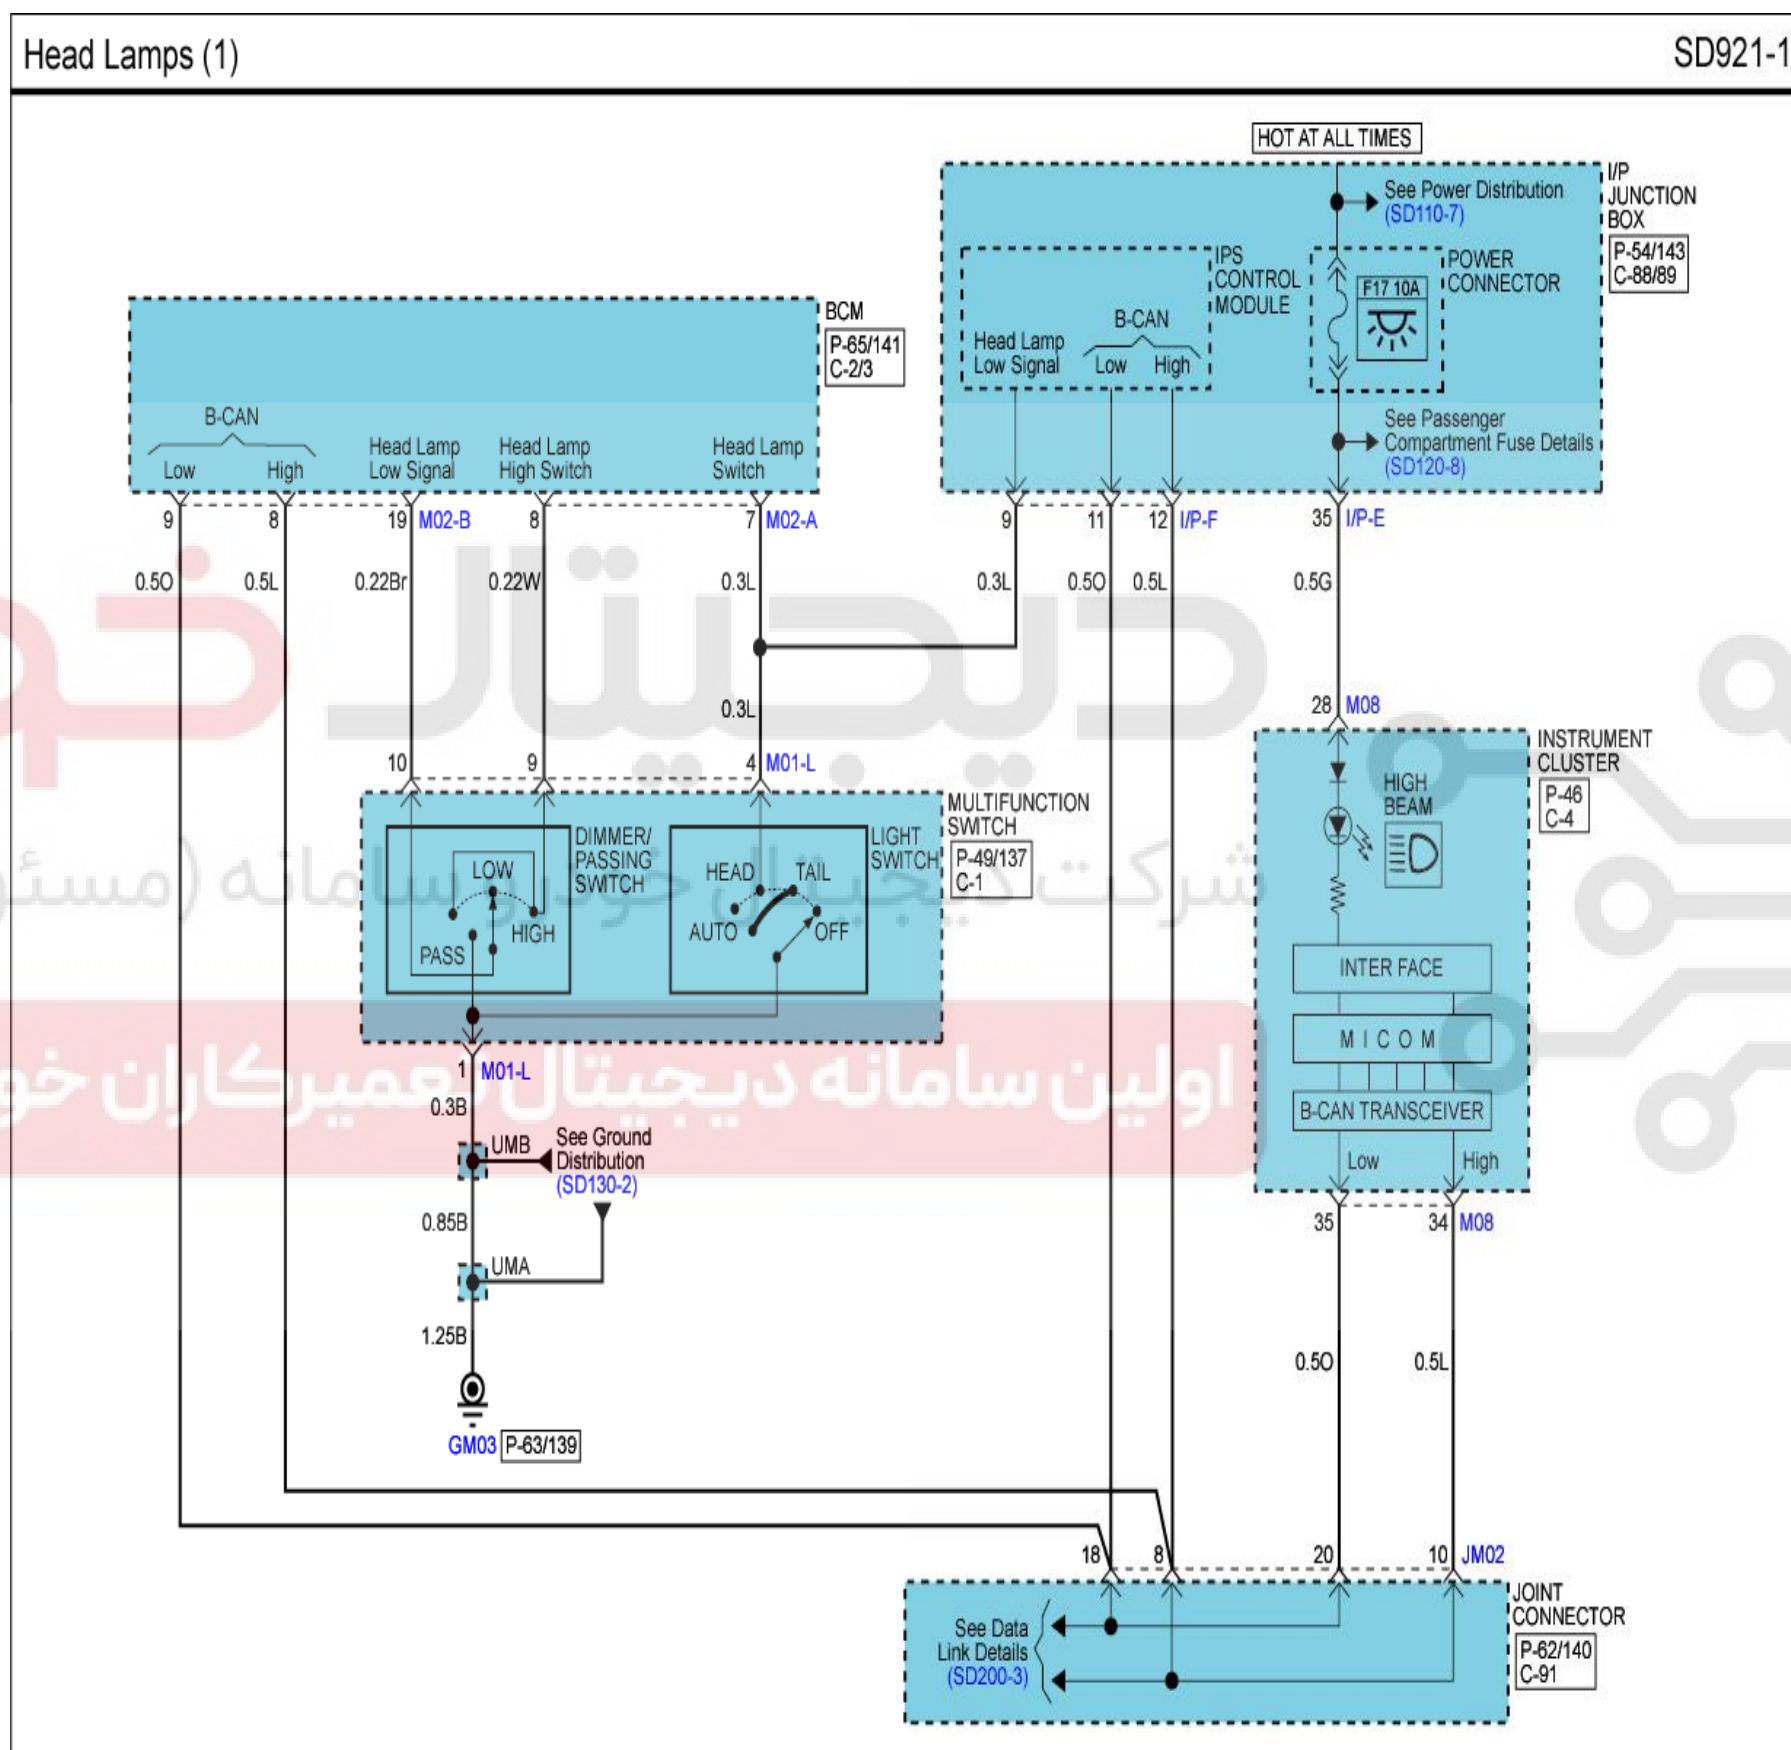


Head Lamps

Head Lamps (2)


SD921-2

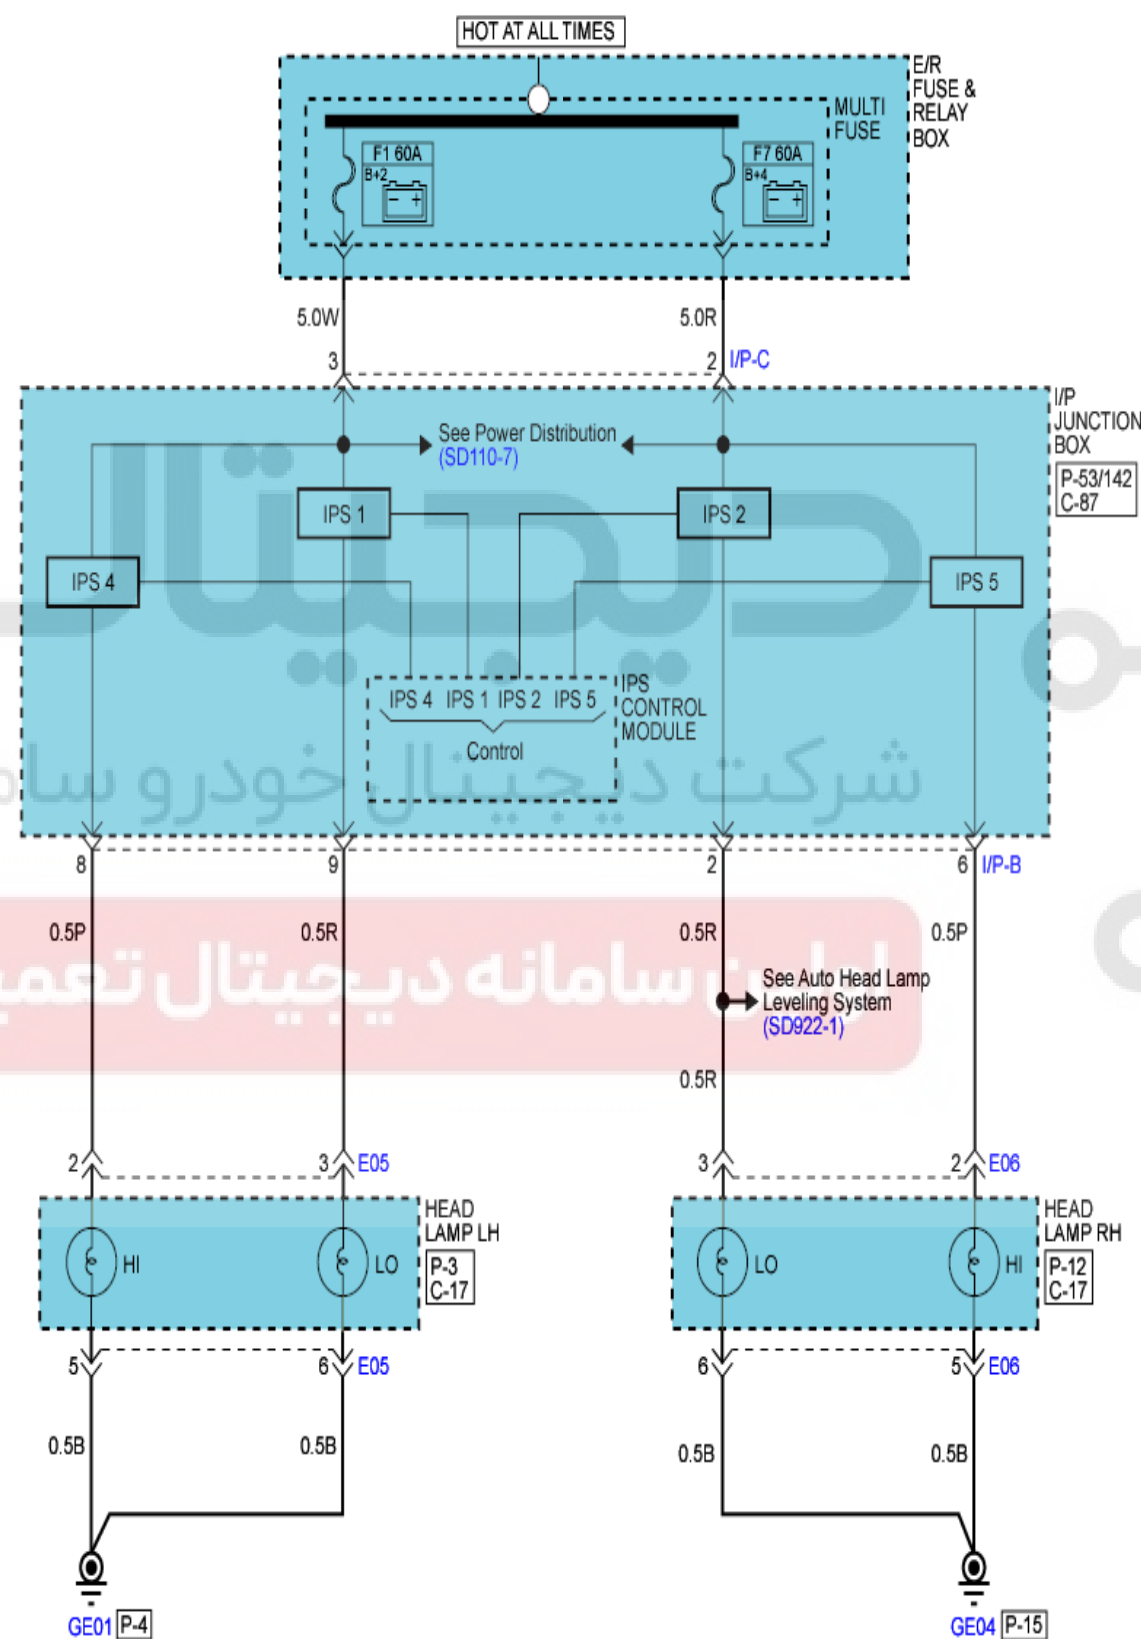

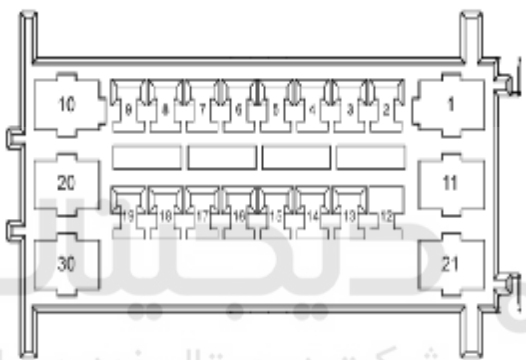

Connector	Component	Component2	Harness
I/P-B I/P Junction Box - 30 Female / Black (AMP_C9250LIF_30F_B) 			
1. —	—	17. L/O	IPS Control Module :
2. R	IPS 2 : Head Lamp RH, Auto Head Lamp Leveling Device Module	18. O	Burglar Alarm Horn Relay IPS 7 (Head Lamp LH)
3. —	—	19. —	—
4. O	IPS 3 : Front Fog Lamp RH	20. —	—
5. O	IPS 3 : Front Fog Lamp LH	21. W	F26 25A : E/R Fuse & Relay Box - RLY. 11, RLY. 12, Wiper Motor
6. P	IPS 5 : Head Lamp RH	22. P	E/R Fuse & Relay Box - RLY. 7
7. —	—	23. O	Foot Parking Brake Switch
8. P	IPS 4 : Head Lamp LH	24. O	F21 7.5A : E/R Fuse & Relay Box - RLY. 14
9. R	IPS 1 : Head Lamp LH	25. R/O	IPS 9 : Head Lamp RH, Side Repeater Lamp RH
10. —	—	26. L/O	IPS 9 : Head Lamp LH, Side Repeater Lamp LH
11. P	F31 20A : E/R Fuse & Relay Box (ON/START input)	27. G	IPS Control Module : Hood Switch
12. Br	C-CAN Low	28. Y	IPS 6 : Head Lamp RH
13. W	C-CAN High	28. L	Brake Fluid Level Sensor
14. WB	IPS Control Module : E/R Fuse & Relay Box - RLY. 7	30. —	—
15. B	IPS Control Module : E/R Fuse & Relay Box - RLY. 2		
16. —	—		

15. Right Side of Engine Room

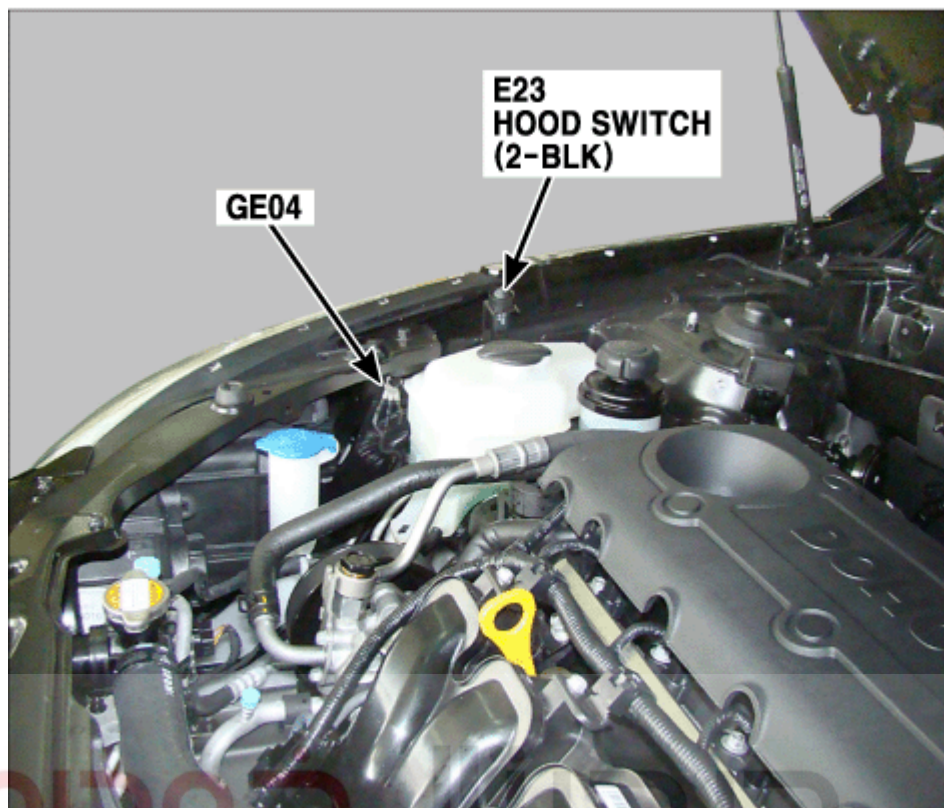

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران



63. Upper Left of Dash Panel



شرکت دیجیتال خودرو (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران






Connector	Component	Component2	Harness	Harness2
-----------	-----------	------------	---------	----------

M02-A BCM

- 24 Female / Gray (KET_040III_24F_Gr)

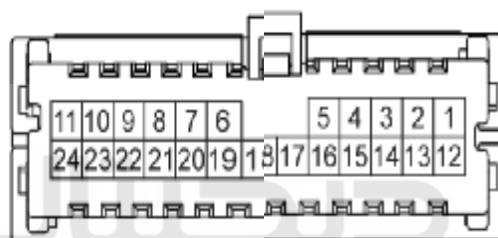


1. L	I/P Junction Box - F17 10A	15. -	
2. Br	I/P Junction Box - F30 7.5A	16. P	[A/T - E/R Fuse & Relay Box (RLY.8)
3. O	I/P Junction Box - F25 7.5A		M/T - Back-up Lamp Switch
4. -		17. Br	Washer Motor,
5. Y	Multifunction Switch (Mist)		Multifunction Switch (Washer)
6. O	SRS Control Module (Crash Output)	18. Gr	Multifunction Switch (Wiper (INT.))
7. L	Multifunction Switch (Head Lamp)	19. -	-
8. W	Multifunction Switch (Dimmer/Passing)	20. O	Multifunction Switch (Wiper (INT. Time))
9. -	-	21. W	Door Warning Switch
10. -	-	22. P	Multifunction Switch (Light (Tail)),
11. -	-		Tail Lamp Switch
12. -	-	23. G/B	Sport Mode Switch ('P' Position)
13. B	I/P Junction Box - F19 10A	24. B	Ground (GM03)
14. -	-		



Connector	Component	Component2	Harness	Harness2
-----------	-----------	------------	---------	----------

I/P-F I/P Junction Box

- 24 Female / White (AMP_025_24F_W)

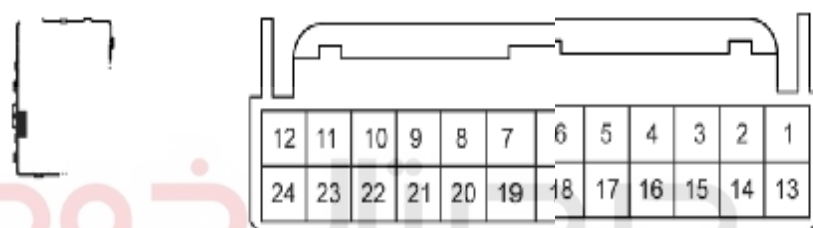

1. —	—	12. L	IPS Control Module : B-CAN (High)
2. —	—	13. Gr	F34 7.5A :
3. —	—		E/R Fuse & Relay Box - RLY. 6
4. —	—	14. Br	F38 7.5A :
5. R	IPS Control Module : Hazard Switch		Instrument Cluster (Air Bag IND.)
6. R/O	IPS Control Module :	15. —	—
	Turn Signal Lamp Switch (RH)	16. O	F25 7.5A : BCM
7. L/O	IPS Control Module :	17. —	—
	Turn Signal Lamp Switch (LH)	18. —	—
8. Br	IPS Control Module :	19. —	—
	Burglar Alarm Relay	20. —	—
9. L	IPS Control Module :	21. —	—
	BCM, Head Lamp Switch	22. —	—
10. —	—	23. —	—
11. O	IPS Control Module : B-CAN (Low)	24. —	—