


Fuse & Relay

Engine Compartment Fuse and Relay Box

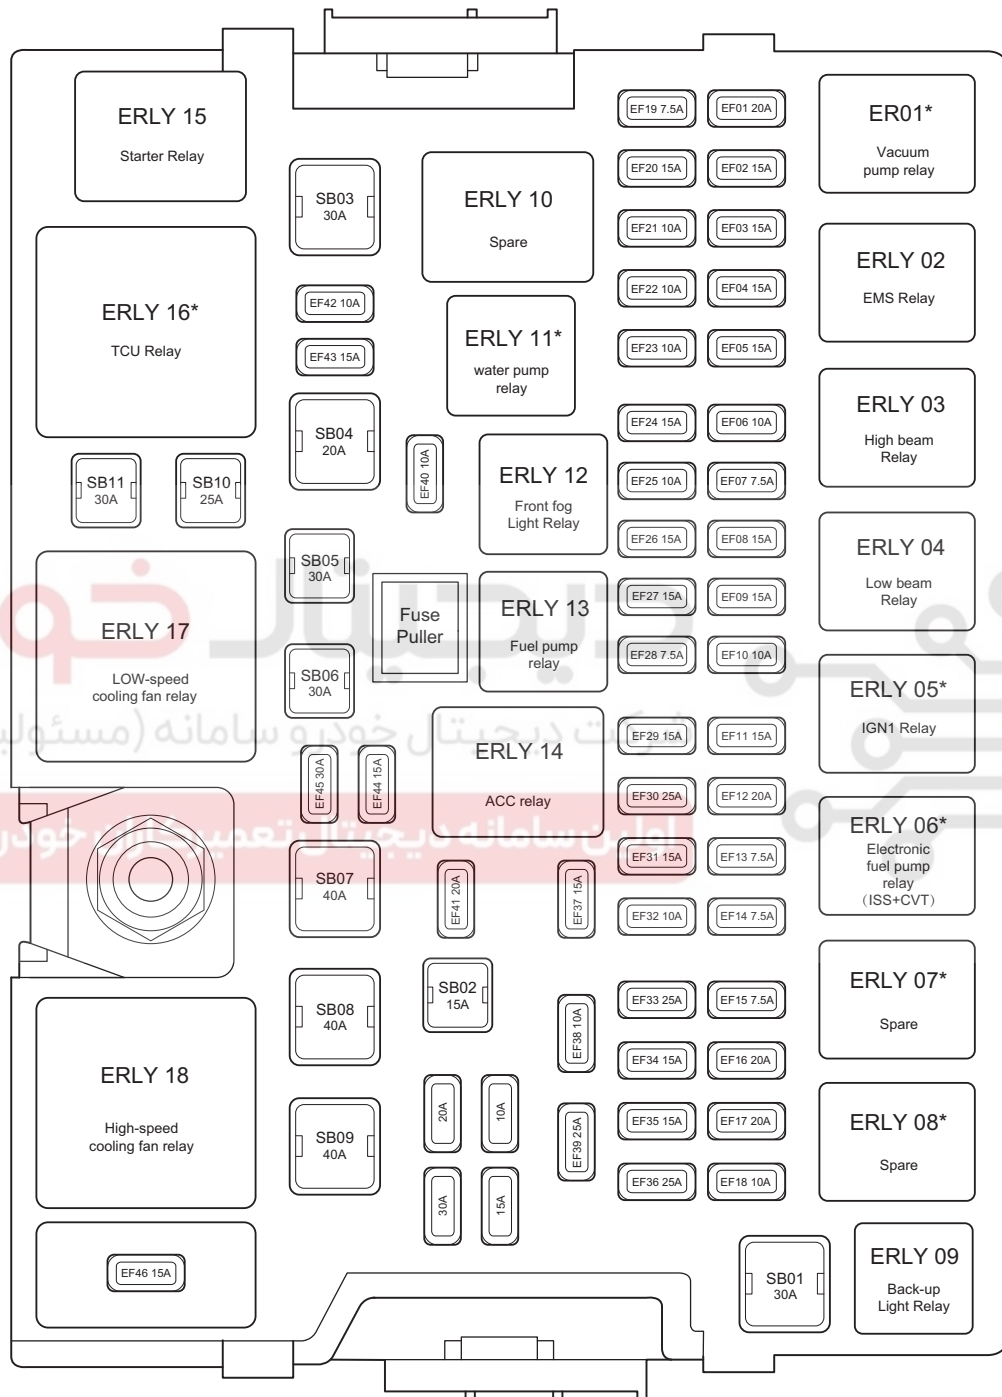

No.	Description	No.	Description	No.	Description
EF01	Vacuum Pump*	EF21	Reserve	EF41	Seat Heating*
EF02	Oxygen Sensor	EF22	Water Pump*	EF42	Air Conditioning Compressor
EF03	Ignition Coil 3#	EF23	POD & PPD & EAC*	EF43	Reserve*
EF04	ECU Solenoid Valve	EF24	Horn	EF44	BCM 4
EF05	PPD & HVH	EF25	Left Headlight High Beam*	EF45	Sunroof*
EF06	Reserve	EF26	Right Headlight Low Beam	EF46	Marine Insurance
EF07	Right Headlight High Beam	EF27	Front Fog Light	EF51	-
EF08	Left Headlight Low Beam	EF28	ESP & ABS & ACM*	SB01	Reserve
EF09	Reserve*	EF29	Fuel Pump	SB02	ACC
EF10	ECU & Fan Controller with Hybrid System	EF30	BCM 6	SB03	Starter/Drive Chain
EF11	PEPS*	EF31	IGN 1*	SB04	TCU/DCT
EF12	LT & PTC Water Pump*	EF32	Brake Switch & PEPS & DCT 30+	SB05	BCM 2
EF13	ECU & TCU Brake Switch 15+ & Reversing Sensor & IPU with Hybrid System	EF33	ACM*	SB06	BCM 1
EF14	Inner Rear View Mirror & A/C Pressure Switch & Reversing Radar	EF34	BCM 5	SB07	ESP/ABS
EF15	PEPS & 4WD*	EF35	BCM 3	SB08	EPB*
EF16	Electronic Oil Pump*	EF36	Reserve*	SB09	ACM/EPB*
EF17	Reserve*	EF37	Spare Power 2	SB10	ESP/ABS
EF18	Back-up Light	EF38	ECU & TCU 30+	SB11	Seat Adjustment SEAT*
EF19	Alternator Excitation	EF39	Wiper		
EF20	Injector	EF40	4WD & IPU		