




2. I/P - LH FUSE & RELAY BOX 8410

1) I/P - LH FUSE & RELAY BOX

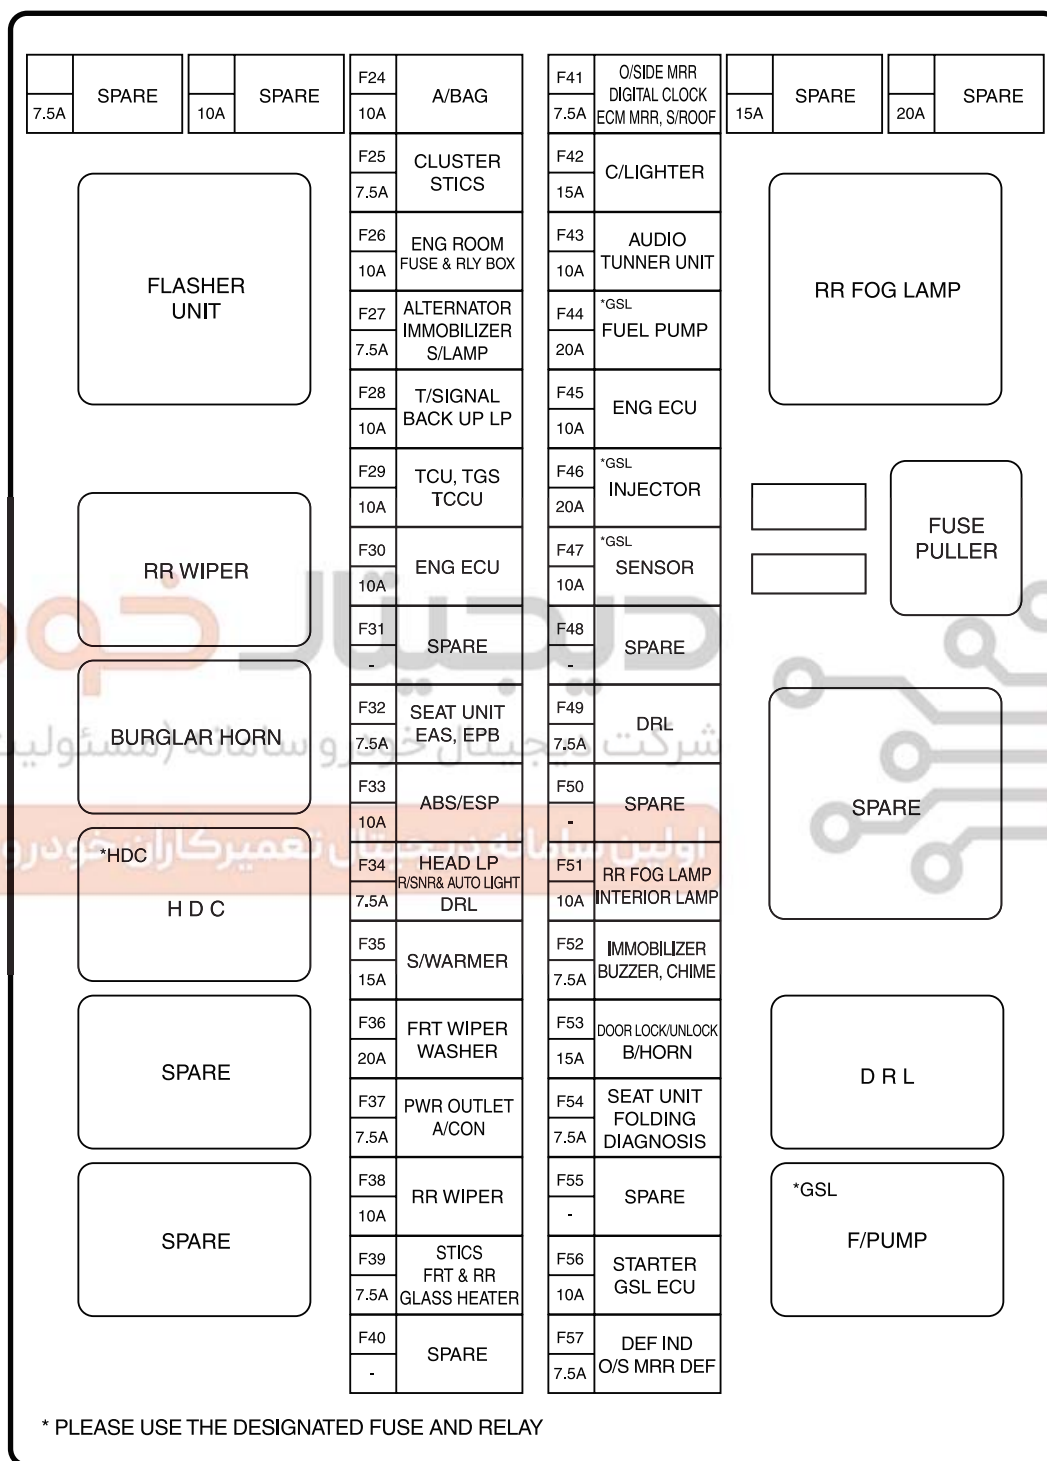

01

02


03

04

05



2) POWER SUPPLY

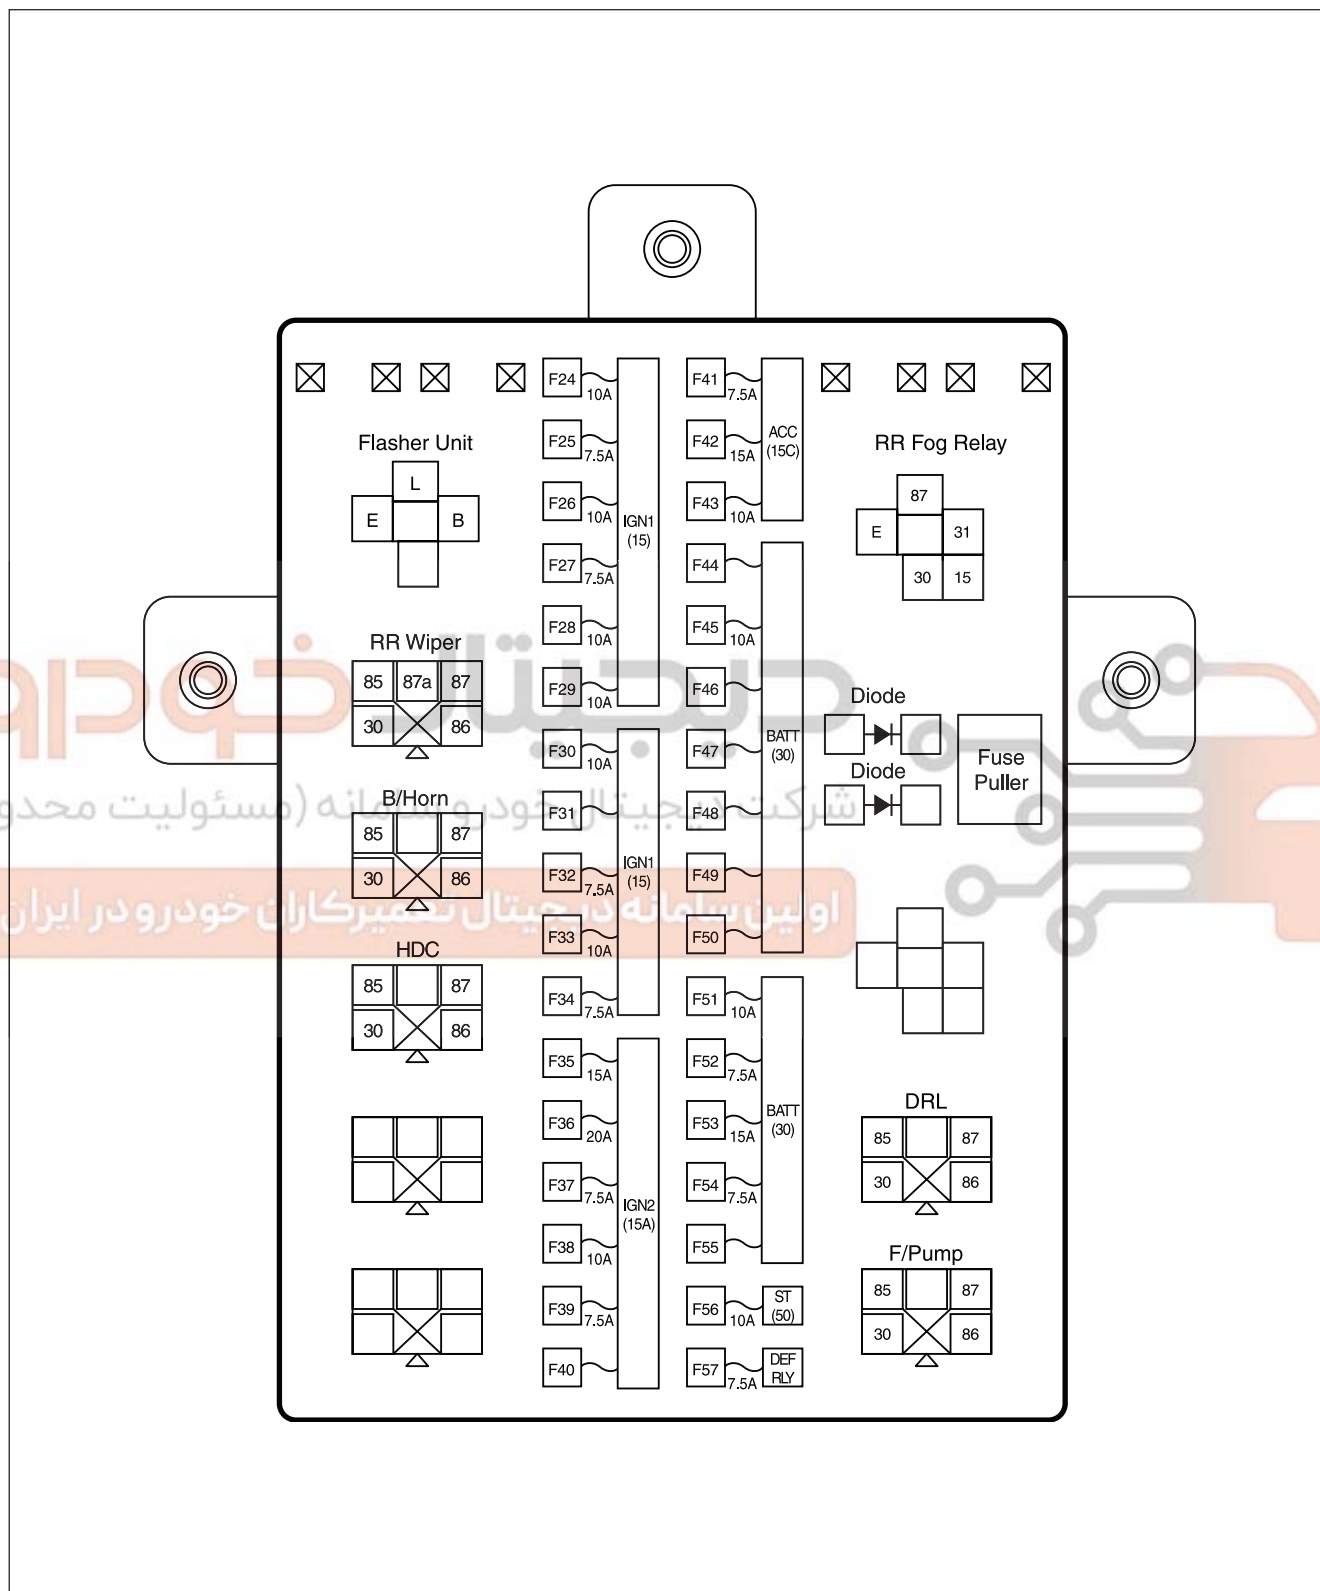



3. I/P - RH FUSE & RELAY BOX 8410

1) I/P - RH FUSE & RELAY BOX

