


# Speedometer

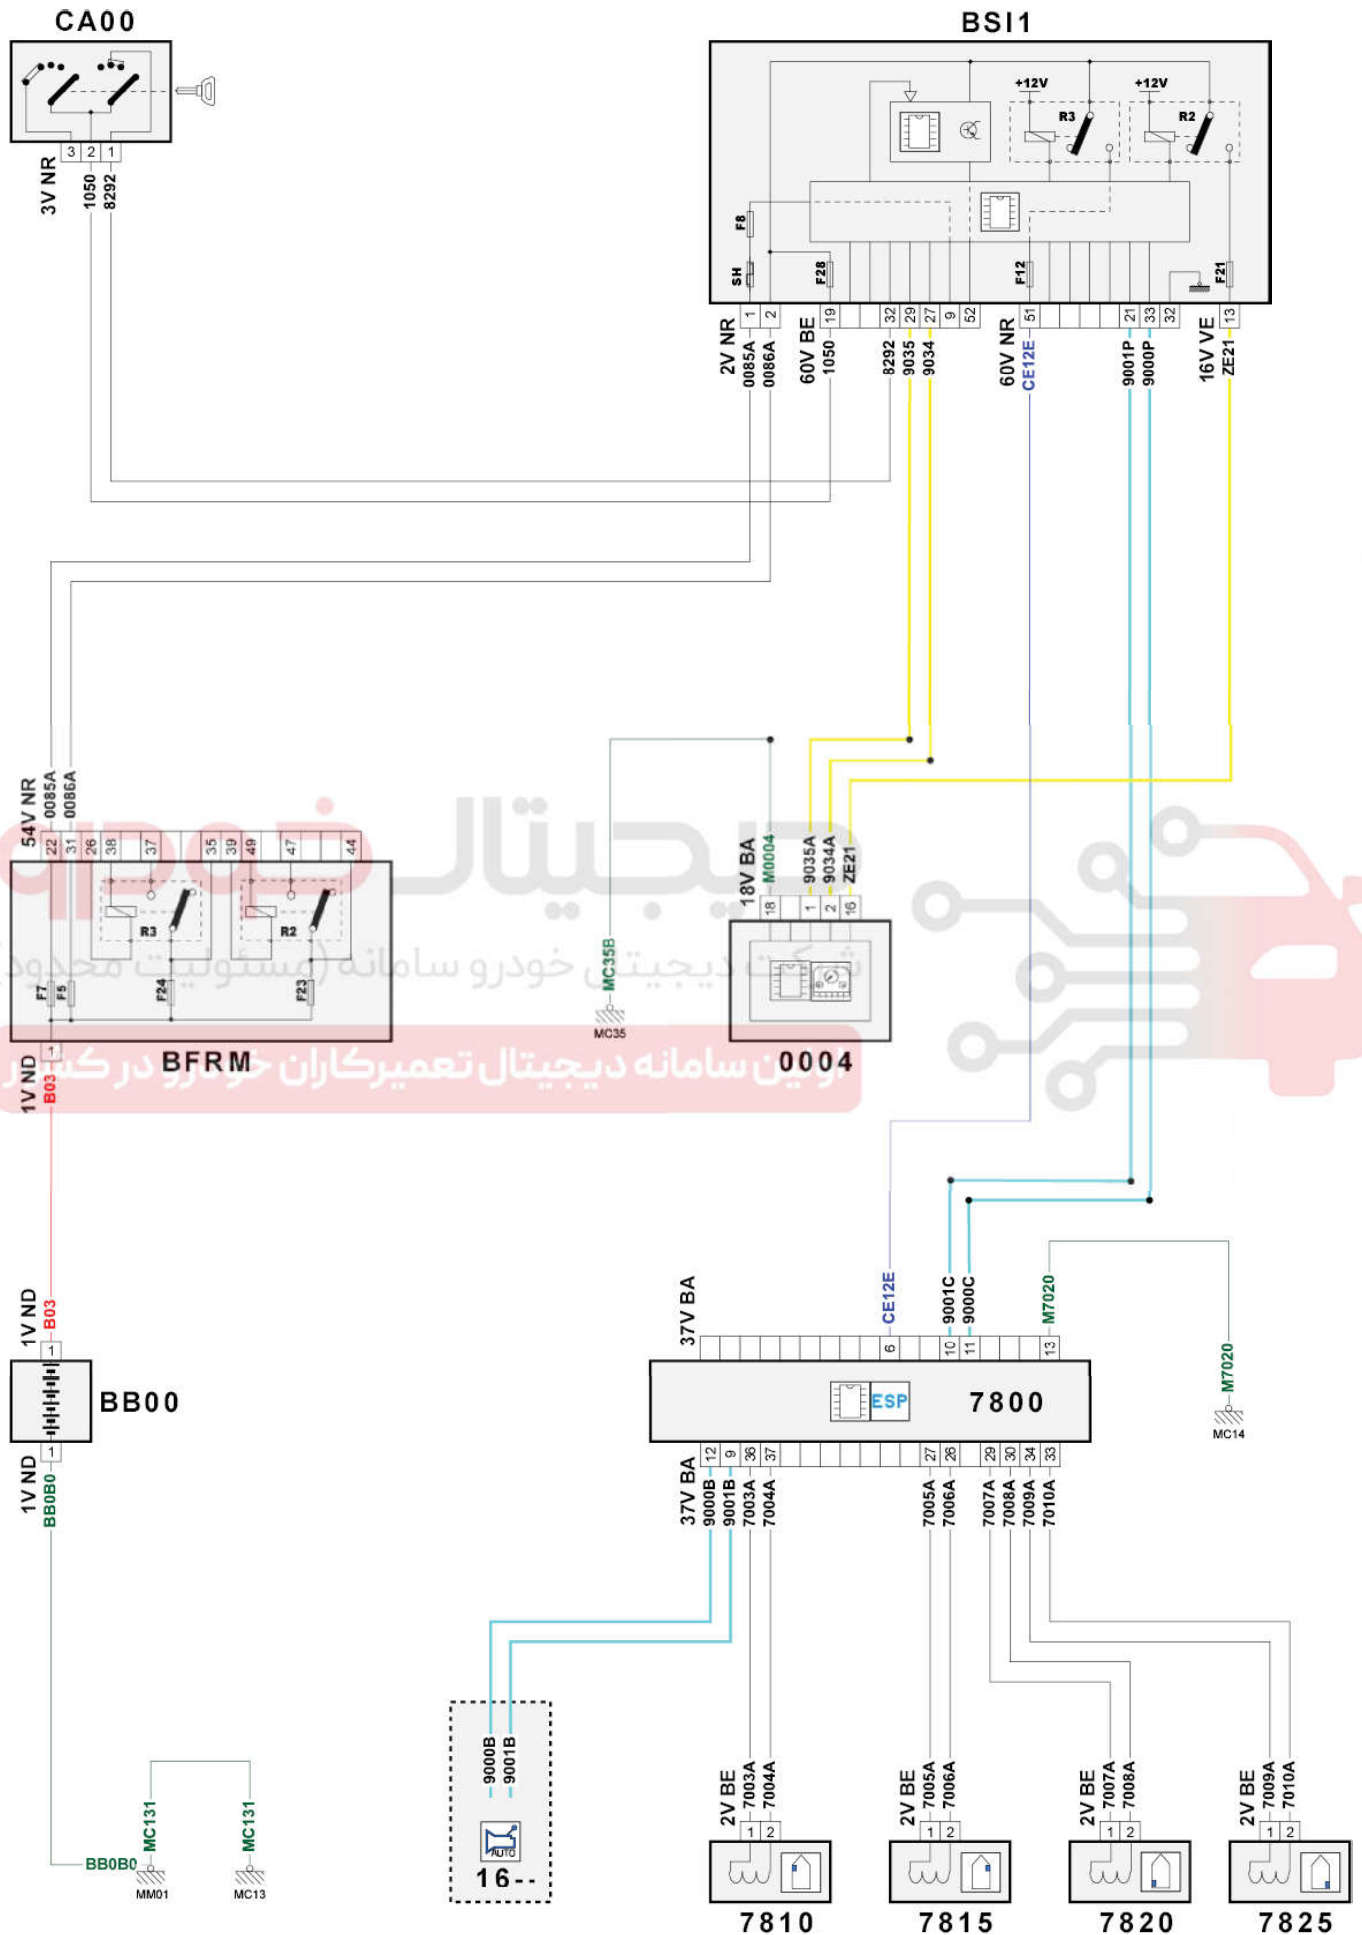

D3CZHINR

## Speedometer

| item code | description | information  |
|-----------|-------------|--|
| 0004      | null        | / instrument panel                                 |
| 1660      | null        | piloted manual gearbox ECU                         |
| 7800      | null        | calculateur controle de stabilite                  |
| 7810      | null        | front left wheel speed sensor                      |
| 7815      | null        | front right wheel speed sensor                     |
| 7820      | null        | rear left wheel speed sensor                       |
| 7825      | null        | rear right wheel speed sensor                      |
| BB00      | null        | ancillaries battery                                |
| BFRM      | null        | engine fuse and relay box                          |
| BSI1      | null        | built-in systems interface                         |
| CA00      | null        | ignition switch                                    |
| E900A     | null        | crimp one information (or equipotential 276A) wire |
| E900B     | null        | crimp one information (or equipotential 900B) wire |
| E901A     | null        | crimp one information (or equipotential 901A) wire |
| E901B     | null        | crimp one information (or equipotential 901B) wire |
| E934      | null        | crimp one information (or equipotential 934) wire  |
| E935      | null        | crimp one information (or equipotential 935) wire  |
| EM35B     | null        | crimp earth (earth point number 35B)               |
| MC13      | null        | body earth point number 13                         |
| MC14A     | null        | body earth point number 14                         |
| MC35      | null        | body earth point number 35                         |
| MM01      | null        | engine earth point number 01                       |

# دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در کشور

