


Fuse & Relay Information (1)

I/P JUNCTION BOX

SD100-1

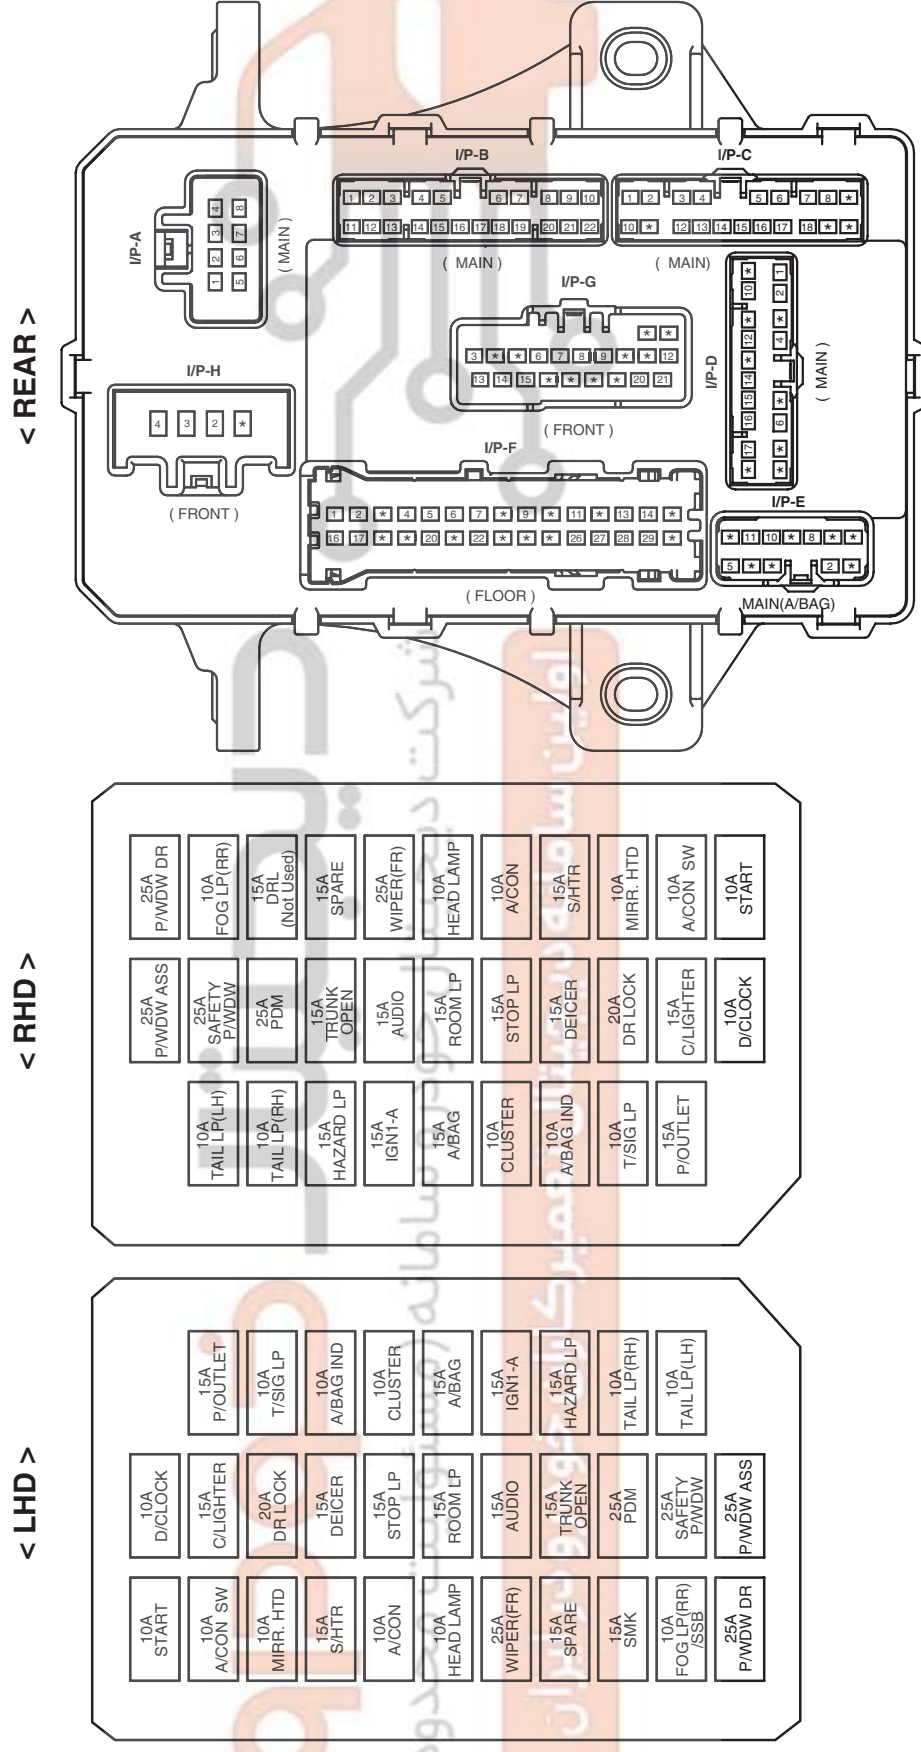

✘ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (2)

SD100-2

CIRCUIT

FUSE	(A)	Circuit Protected
START	10A	Transaxle Range Switch, Ignition Lock Switch
A/CON SW	10A	A/C Control Module(Auto)
MIRR. HTD	10A	Driver/ Passenger Power Outside Mirror (Defogger), A/C Control Module (Rear Defogger SW), ECM, PCM
S/HTR	15A	Front Seat Warmer LH/RH
A/CON	10A	E/R Fuse & Relay Box (Blower Relay), BCM, Incar Temperature Sensor(Auto), Sunroof Control Module PDM, A/C Control Module
HEAD LAMP	10A	E/R Fuse & Relay Box (H/LP (HI/LO) Relay)
WIPER(FR)	25A	Multifunction Switch (Wiper & Washer SW), E/R Fuse & Relay Box (Wiper Relay), Front Wiper Motor
SMK	15A	Smart Key Control Module, PDM
FOG LP(RR)/SSB	10A	Start Stop Button Switch, FOB Holder, ICM Relay Box(Rear Fog Relay)
P/PDW DR	25A	Safety/ Power Window Main Switch, Rear Power Window Switch LH, Safety Power Window Module
D/CLOCK	10A	Audio, BCM, Smart Key Control Module, PDM, Clock, Power Outside Mirror Switch
C/LIGHTER	15A	Cigarette Lighter
DR LOCK	20A	Sunroof Control Module, ICM Relay Box(Door Lock/Unlock Relay)
DEICER	15A	ICM Relay Box(Front Deicer Relay)
STOP LP	15A	Stop Lamp Switch, Sport Mode Switch
POWER CONNECTOR	15A	Trunk Room Lamp, BCM, Clock, Instrument Cluster, Data Link Connector, A/C Control Module, Rear Parking Assist Buzzer, Ignition Key Ili. & Door Warning Switch, Room Lamp, RF Receiver, Vanity Lamp LH/RH, Map Lamp
AUDIO	15A	Audio
TRUNK OPEN	15A	Trunk Open Relay
PDM	25A	PDM
SAFETY P/PDW	25A	Safety Power Window Module
P/PDW ASS	25A	Power Window Main Switch, Passenger Power Window Switch, Rear Power Window Switch RH
P/OUTLET	15A	Safety Power Window Main Switch
T/SIG LP	10A	Power Outlet
A/BAG IND	10A	Hazard Switch
CLUSTER	10A	Instrument Cluster(IND.)
A/BAG	10A	Instrument Cluster (IND.), BCM, Electro Chromic Mirror, Rheostat, Steering Angle Sensor
IGN 1-A	15A	SRS Control Module
HAZARD LP	15A	PDM, Smart Key Control Module
TAIL LP(RH)	10A	ICM Relay Box (Hazard Relay), Hazard Switch
		Rear Combination Lamp (In/Out) RH, Head Lamp RH, Shunt Connector, Passenger Power Window Switch
		License Lamp RH(4DR), Illuminations
TAIL LP(LH)	10A	Head Lamp LH, Rear Combination Lamp (In/Out) LH, Power Window Main Switch, Safety Power Window Main Switch License Lamp(2DR), License Lamp LH(4DR)

※ USE THE DESIGNATED FUSE ONLY