




16. SEAT WARMER

8510

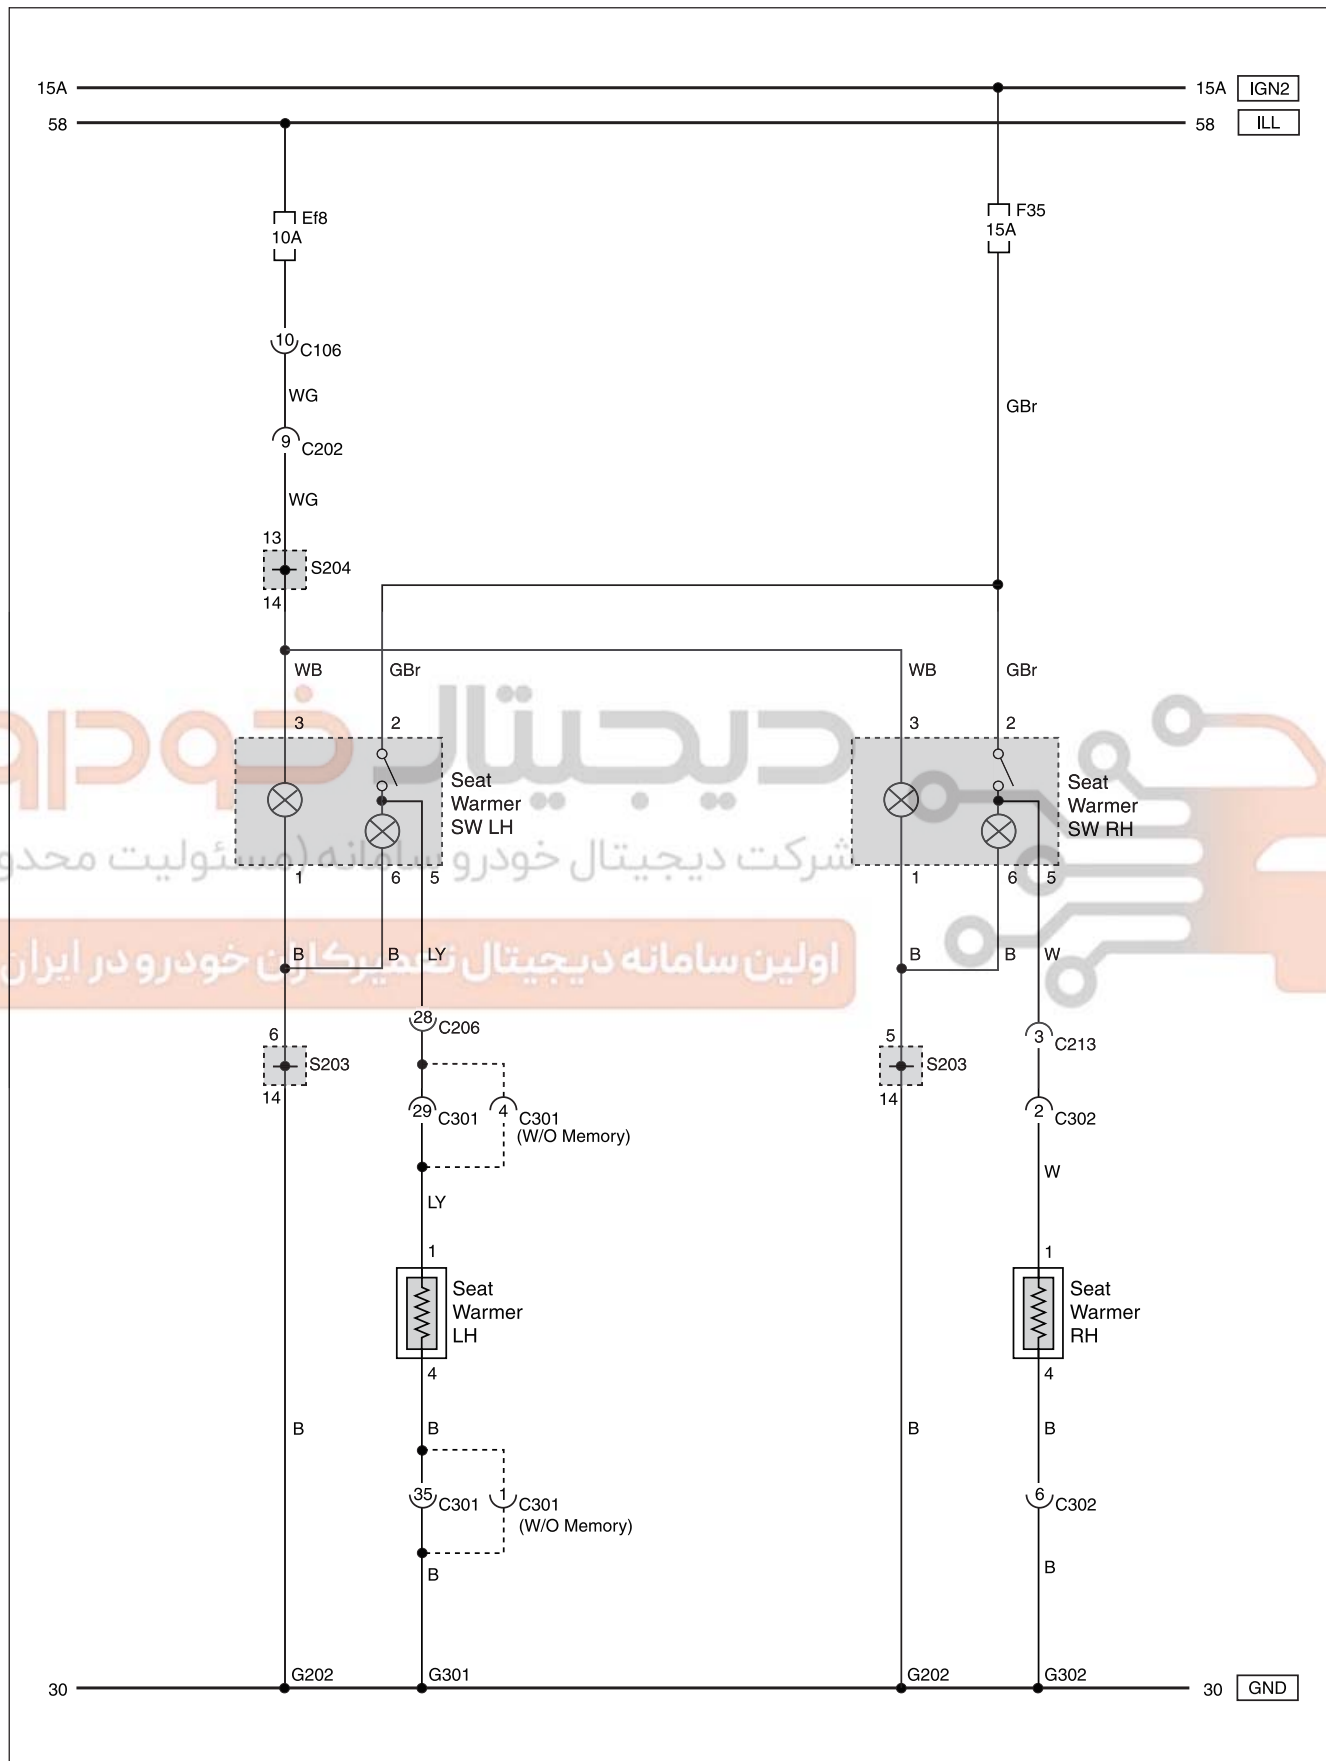


A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C301 (39Pin, Black)	W/H Floor - W/H Driver Seat	Under the Driver Seat	W/Memory
C301 (4Pin, White)	W/H Floor - W/H Driver Seat	Under the Driver Seat	W/O Memory
C302 (6Pin, White)	W/H Floor - W/H Passenger Seat	Under the Passenger Seat	
G202	W/H Main	Under the Driver "A" Pillar	
G301	W/H Floor	Under the Driver Seat	
G302	W/H Floor	Under the Passenger Seat	
S203 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND
S204 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	ILL


B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



 
C106
W/H Floor
(Eng Room Fuse & Relay Box)




C202
W/H Floor

 


C206
W/H Floor

 


C213
W/H Floor

 


C301
W/H Driver Seat
(W/ Memory)

 


C301
W/H Driver Seat
(W/O Memory)

 

C302
W/H Passenger

 

Seat Warmer

 

Seat Warmer
SW