


Defogger System (1)

SD879-1

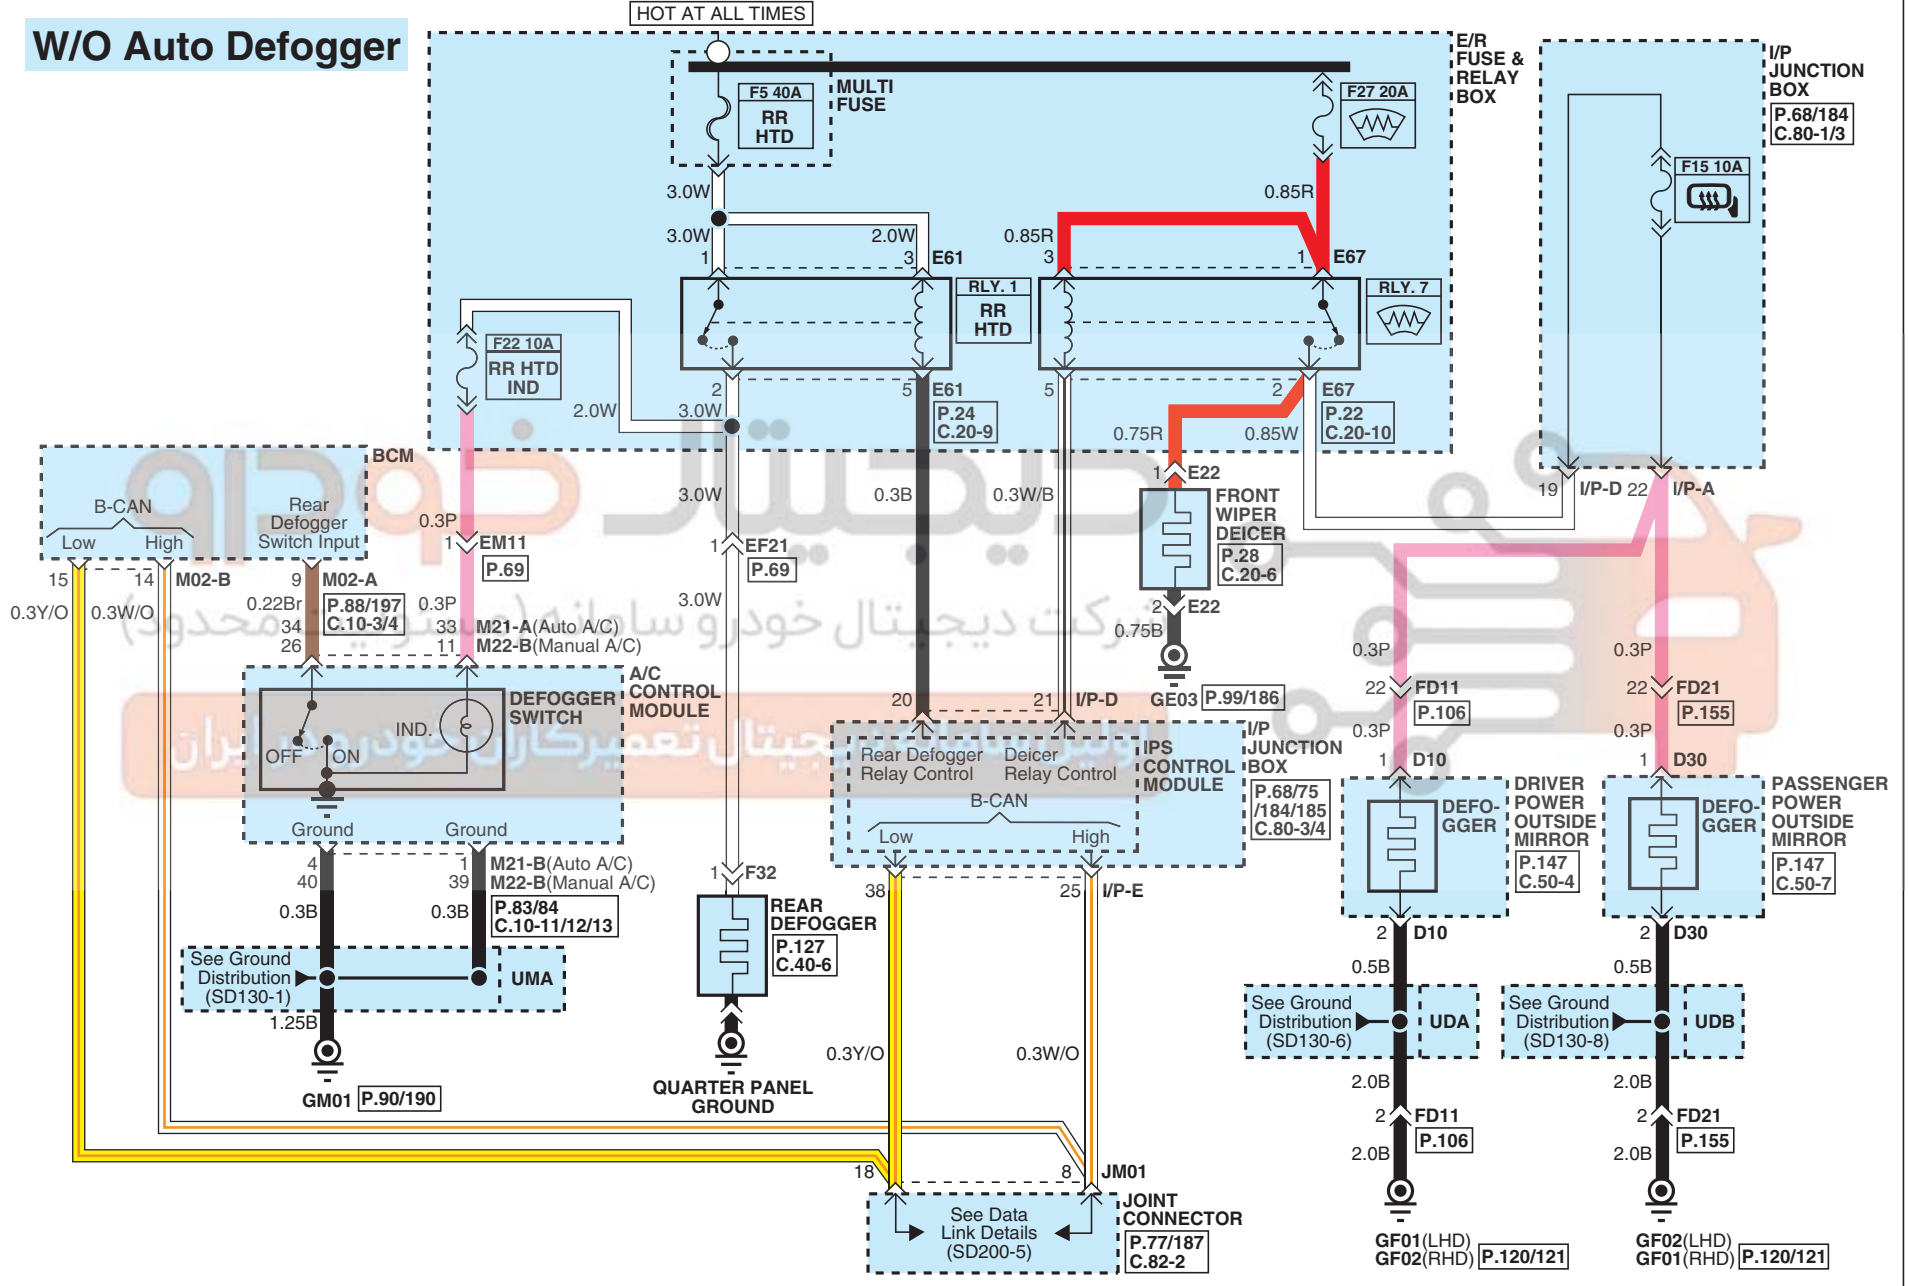

SD879-2

The diagram illustrates the I/P Junction Box with three main power distribution sections, each with a specific fuse and associated documentation references.

- HOT IN ON:** This section contains a 7.5A fuse (F11). It is associated with "See Power Distribution (SD110-10) (SD110-11)" and "See Passenger Compartment Fuse Details (SD120-2)".
- HOT AT ALL TIMES:** This section contains a 10A fuse (F37). It is associated with "See Power Distribution (SD110-10) (SD110-11)" and "See Passenger Compartment Fuse Details (SD120-7)".
- HOT IN ON OR START:** This section contains a 7.5A fuse (F22). It is associated with "See Power Distribution (SD110-10) (SD110-11)" and "See Passenger Compartment Fuse Details (SD120-4)".


The central area is labeled "POWER CONNECTOR". The entire assembly is identified as the "I/P JUNCTION BOX" with part numbers "P.75/185" and "C.80-6".



Defogger System (3)

SD879-3

With Auto Defogger (2/2)

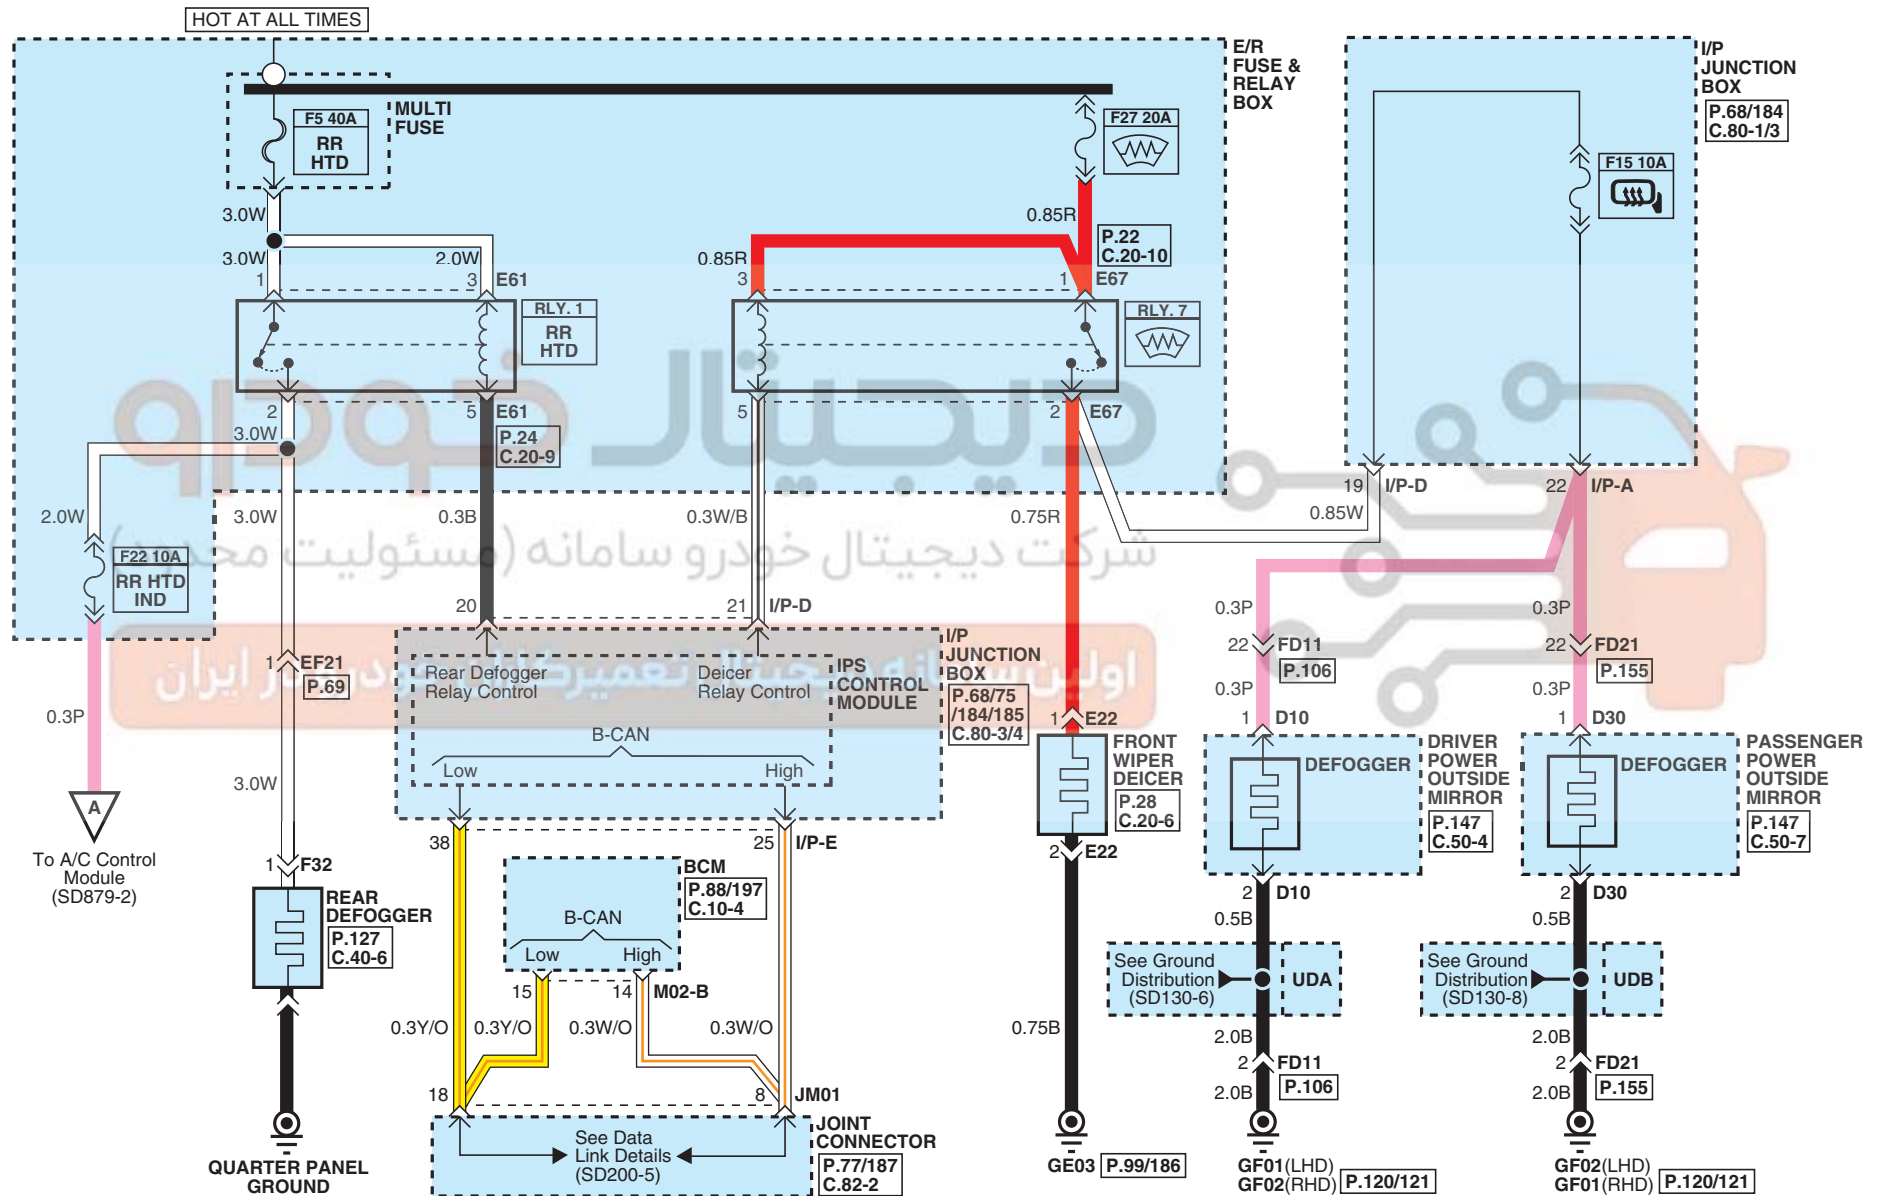

Defogger System (4)

SD879-4

MEMO

دیجیتال خودرو

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران

