
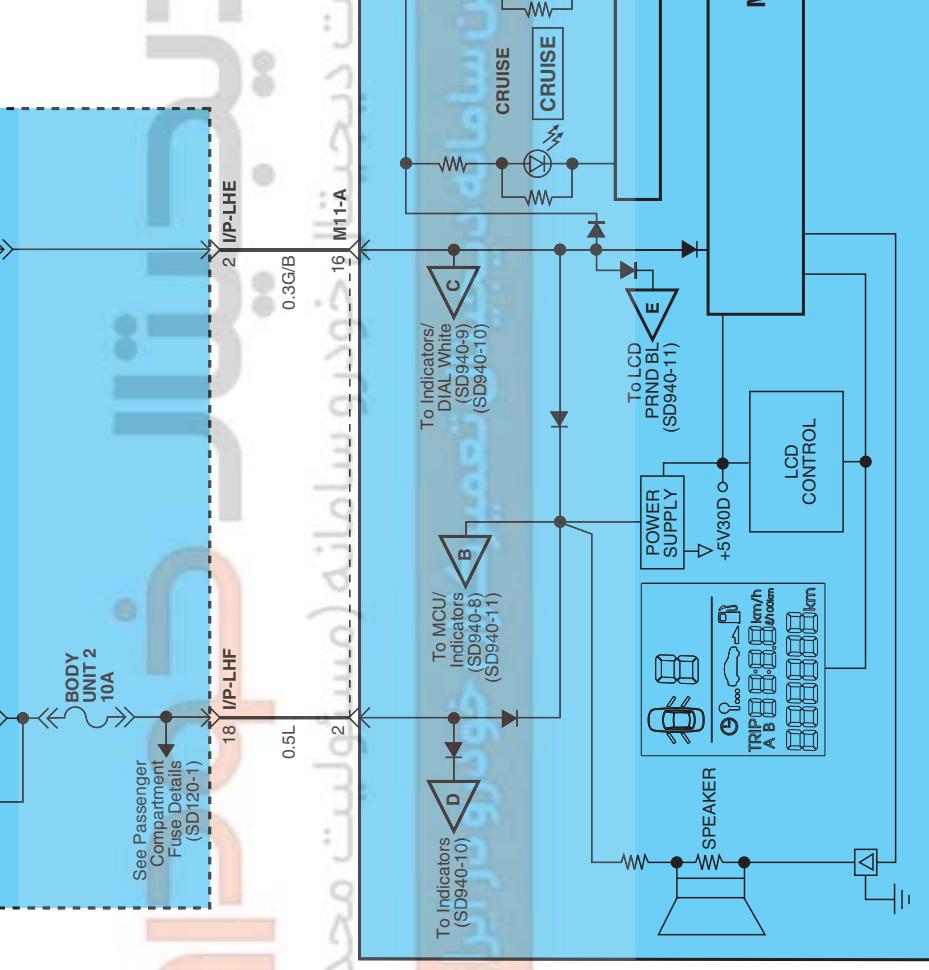


INDICATOR & GAUGES (ANALOG TYPE)

E6FD5797

Indicator & Gauges (Analog Type) (1)

SD940-7

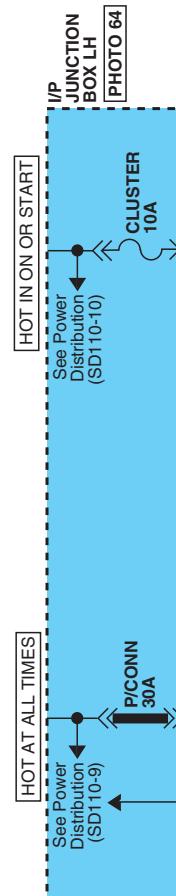

INSTRUMENT CLUSTER
PHOTO 43

To MCU/Indicators (SD940-8)(SD940-9)

A
ABS ((ABS))
ESP OFF
ESP ON

CRUISE SET
CRUISE OFF
CRUISE ON

C
To Indicators/ DIAL White (SD940-9)(SD940-10) (SD940-11)

D
To MCU/ Indicators (SD940-8)(SD940-11)

E
To LCD PRND BL (SD940-11)

MCU

POWER SUPPLY
+5V30D


LCD CONTROL

SPEAKER

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (2)


SD940-8

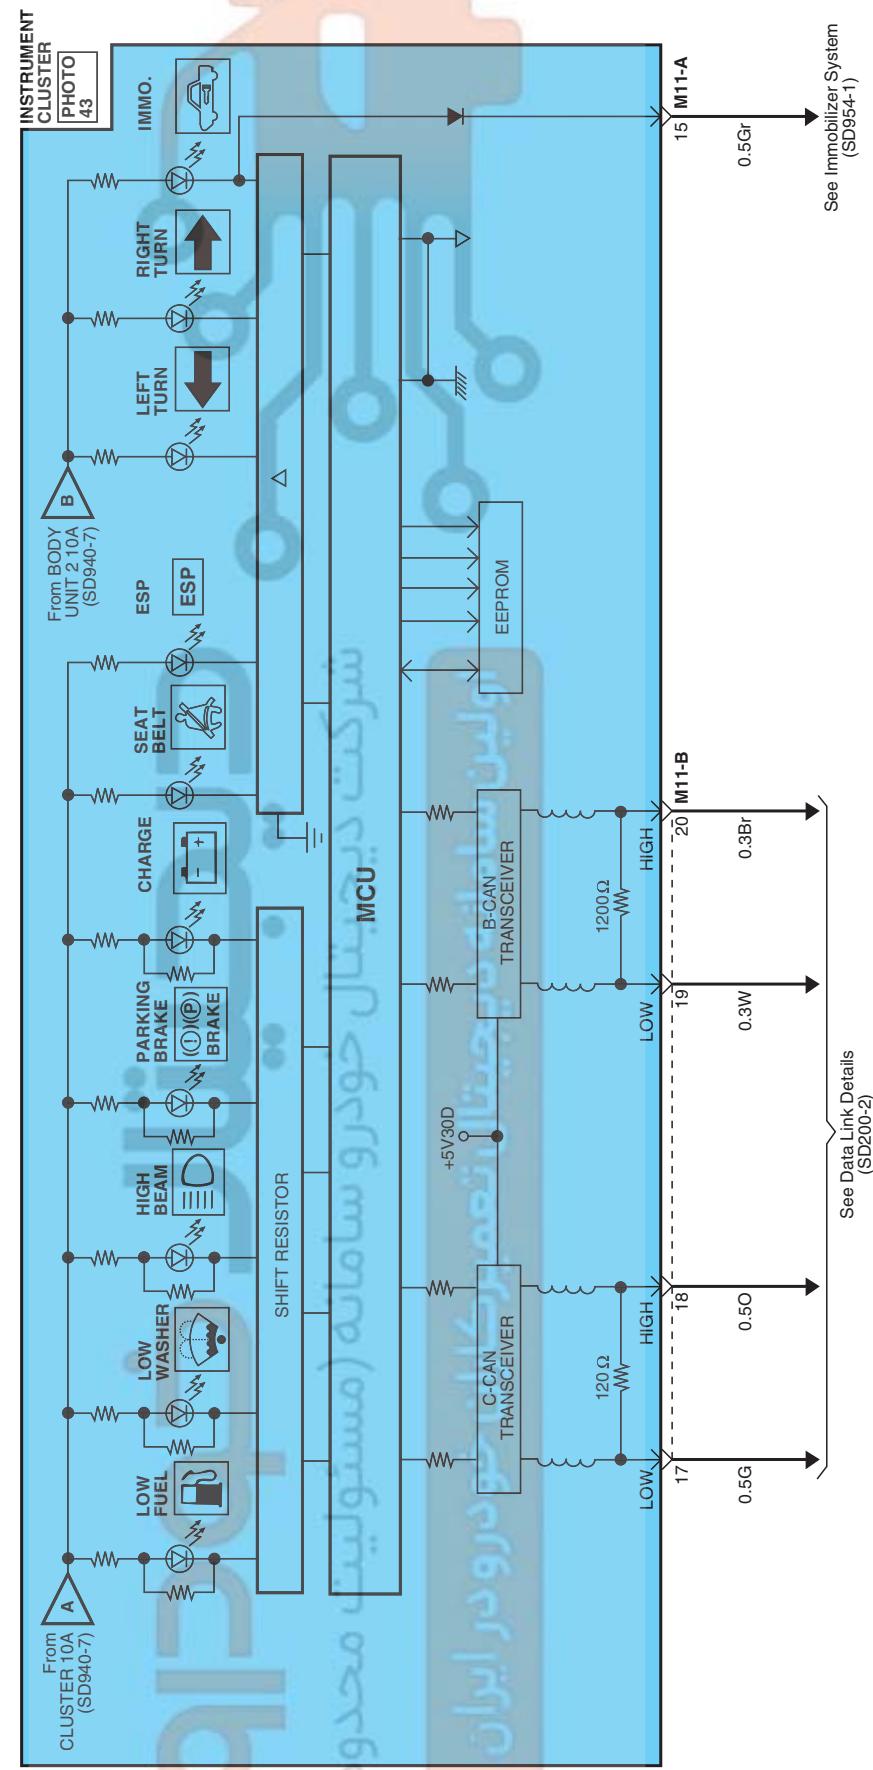

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (3)

SD940-9

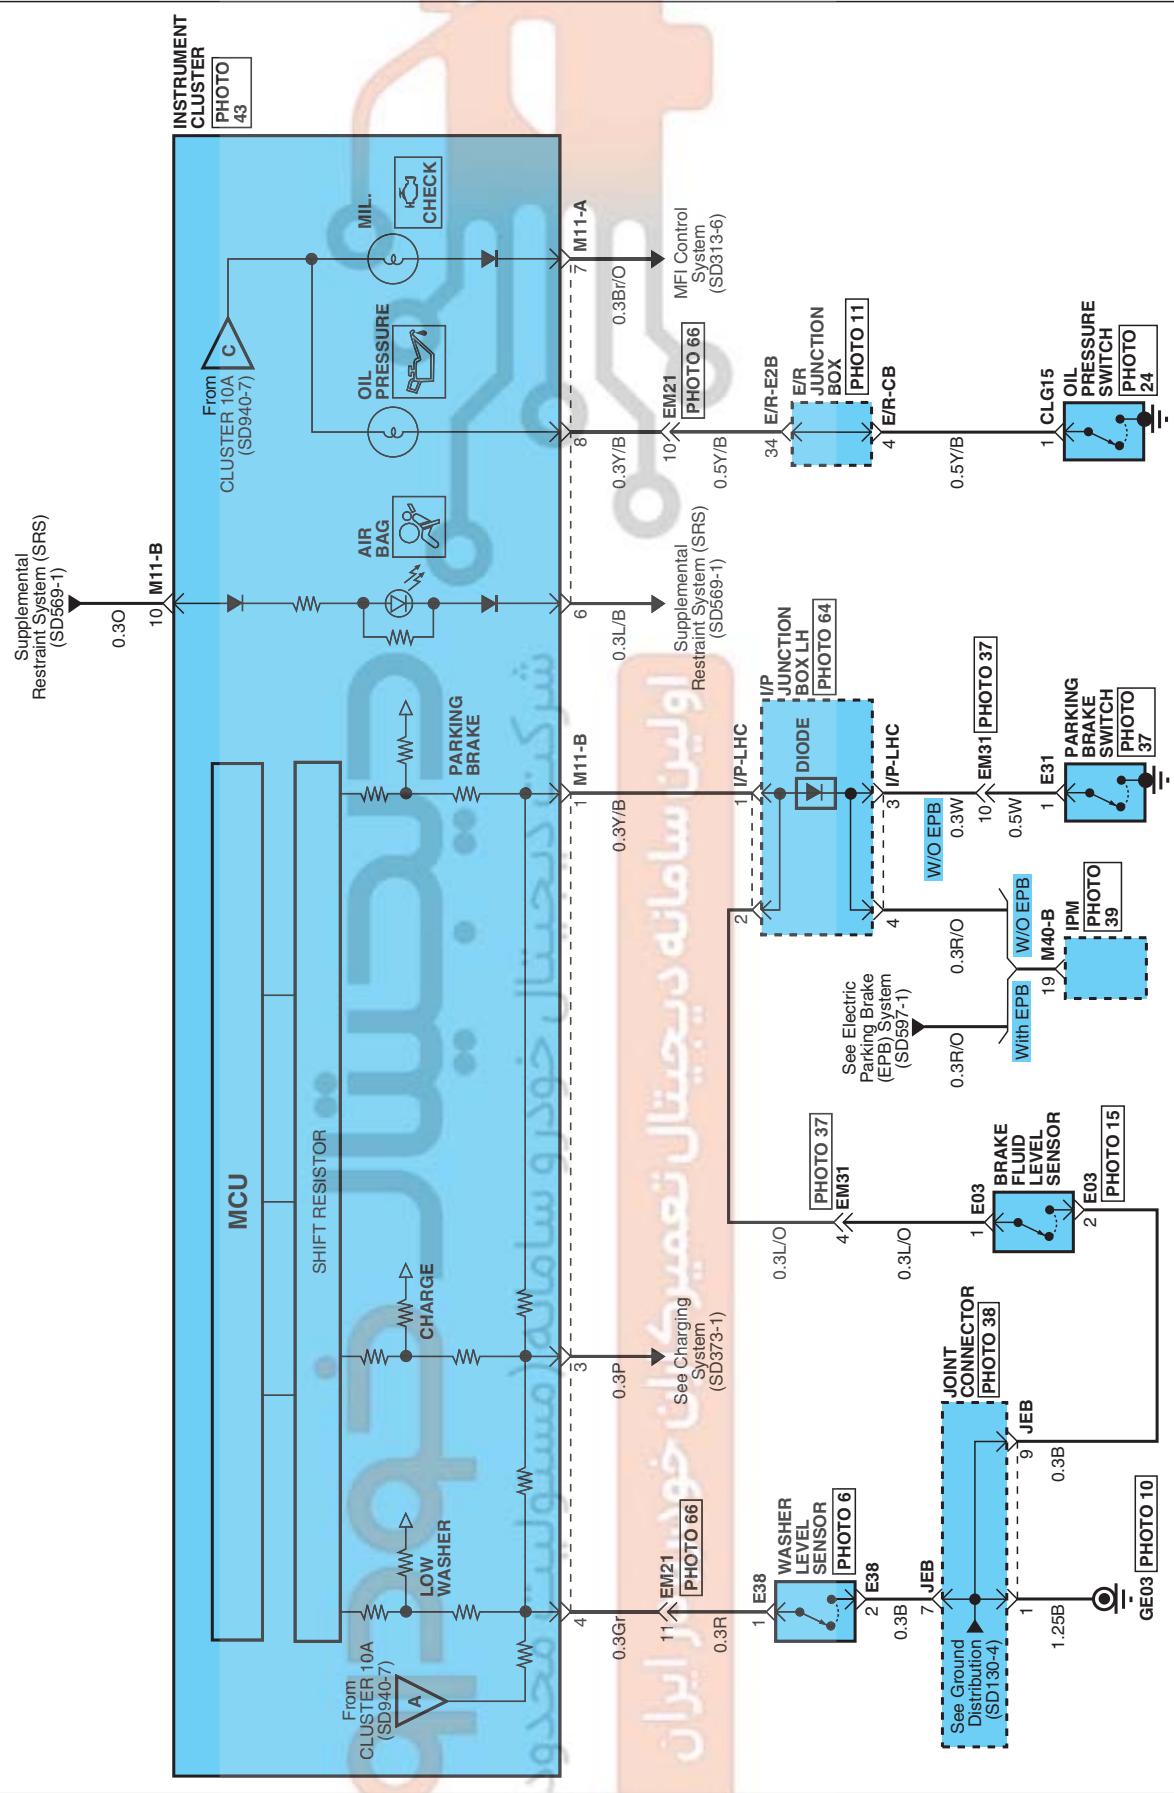


WWW.DIGITALKHODRO.COM

021 62999292

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (4)

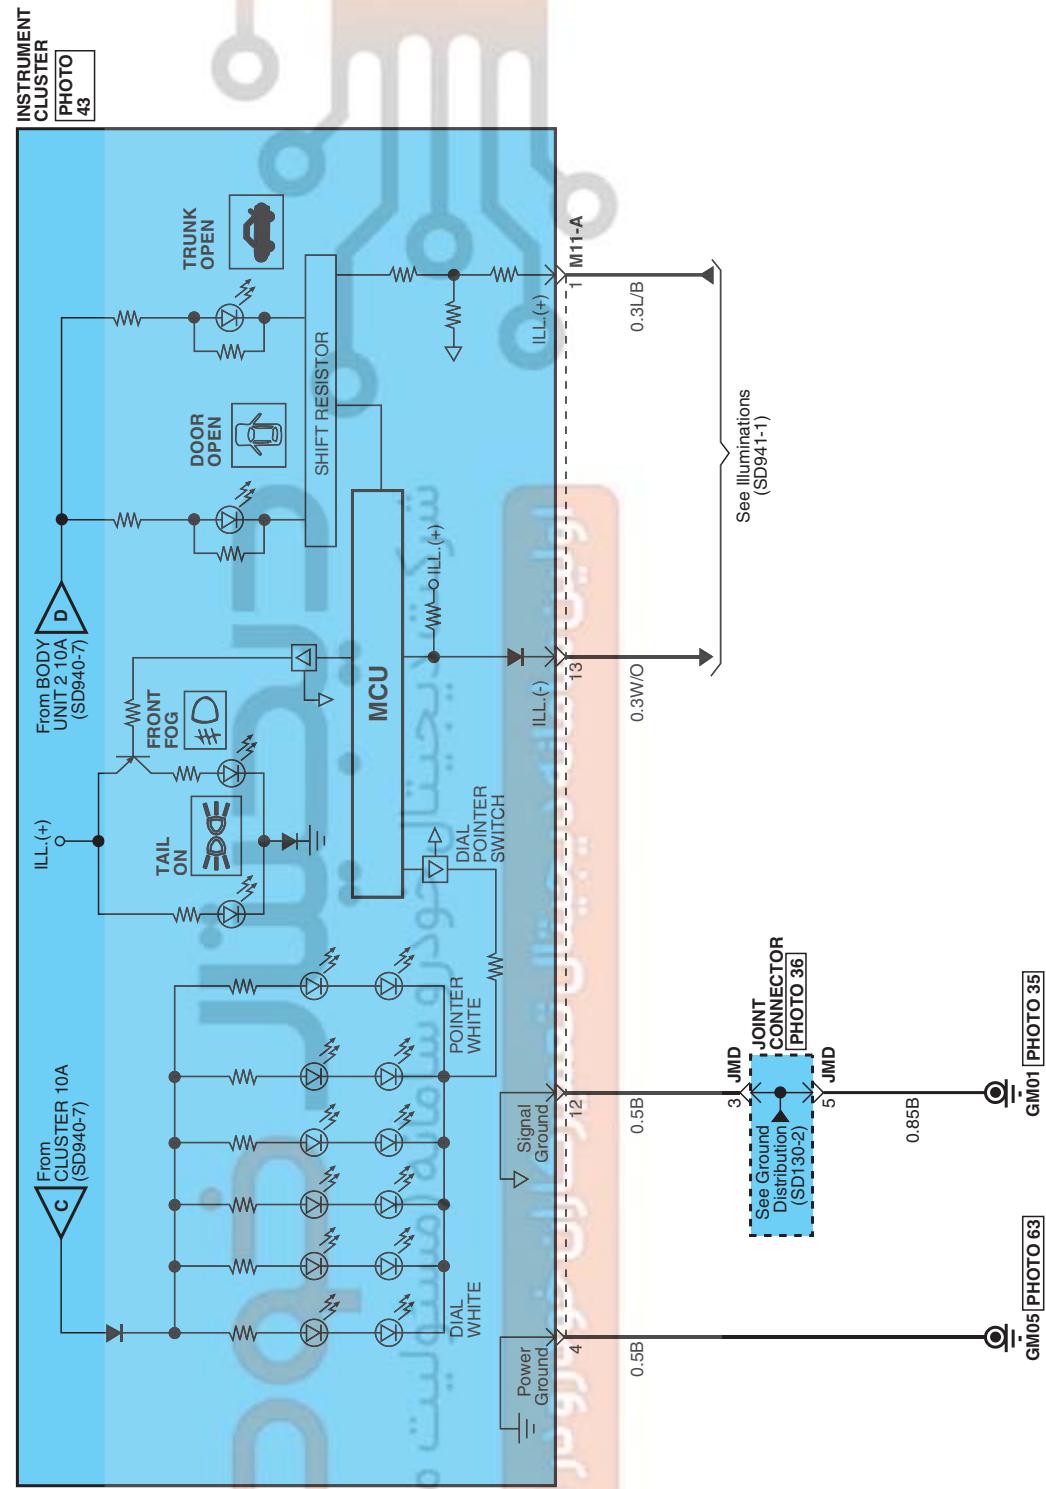


WWW.DIGITALKHODRO.COM

021 62 99 92 92
EBHSD9940JL

ERHSD9940JL
9992

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (5)

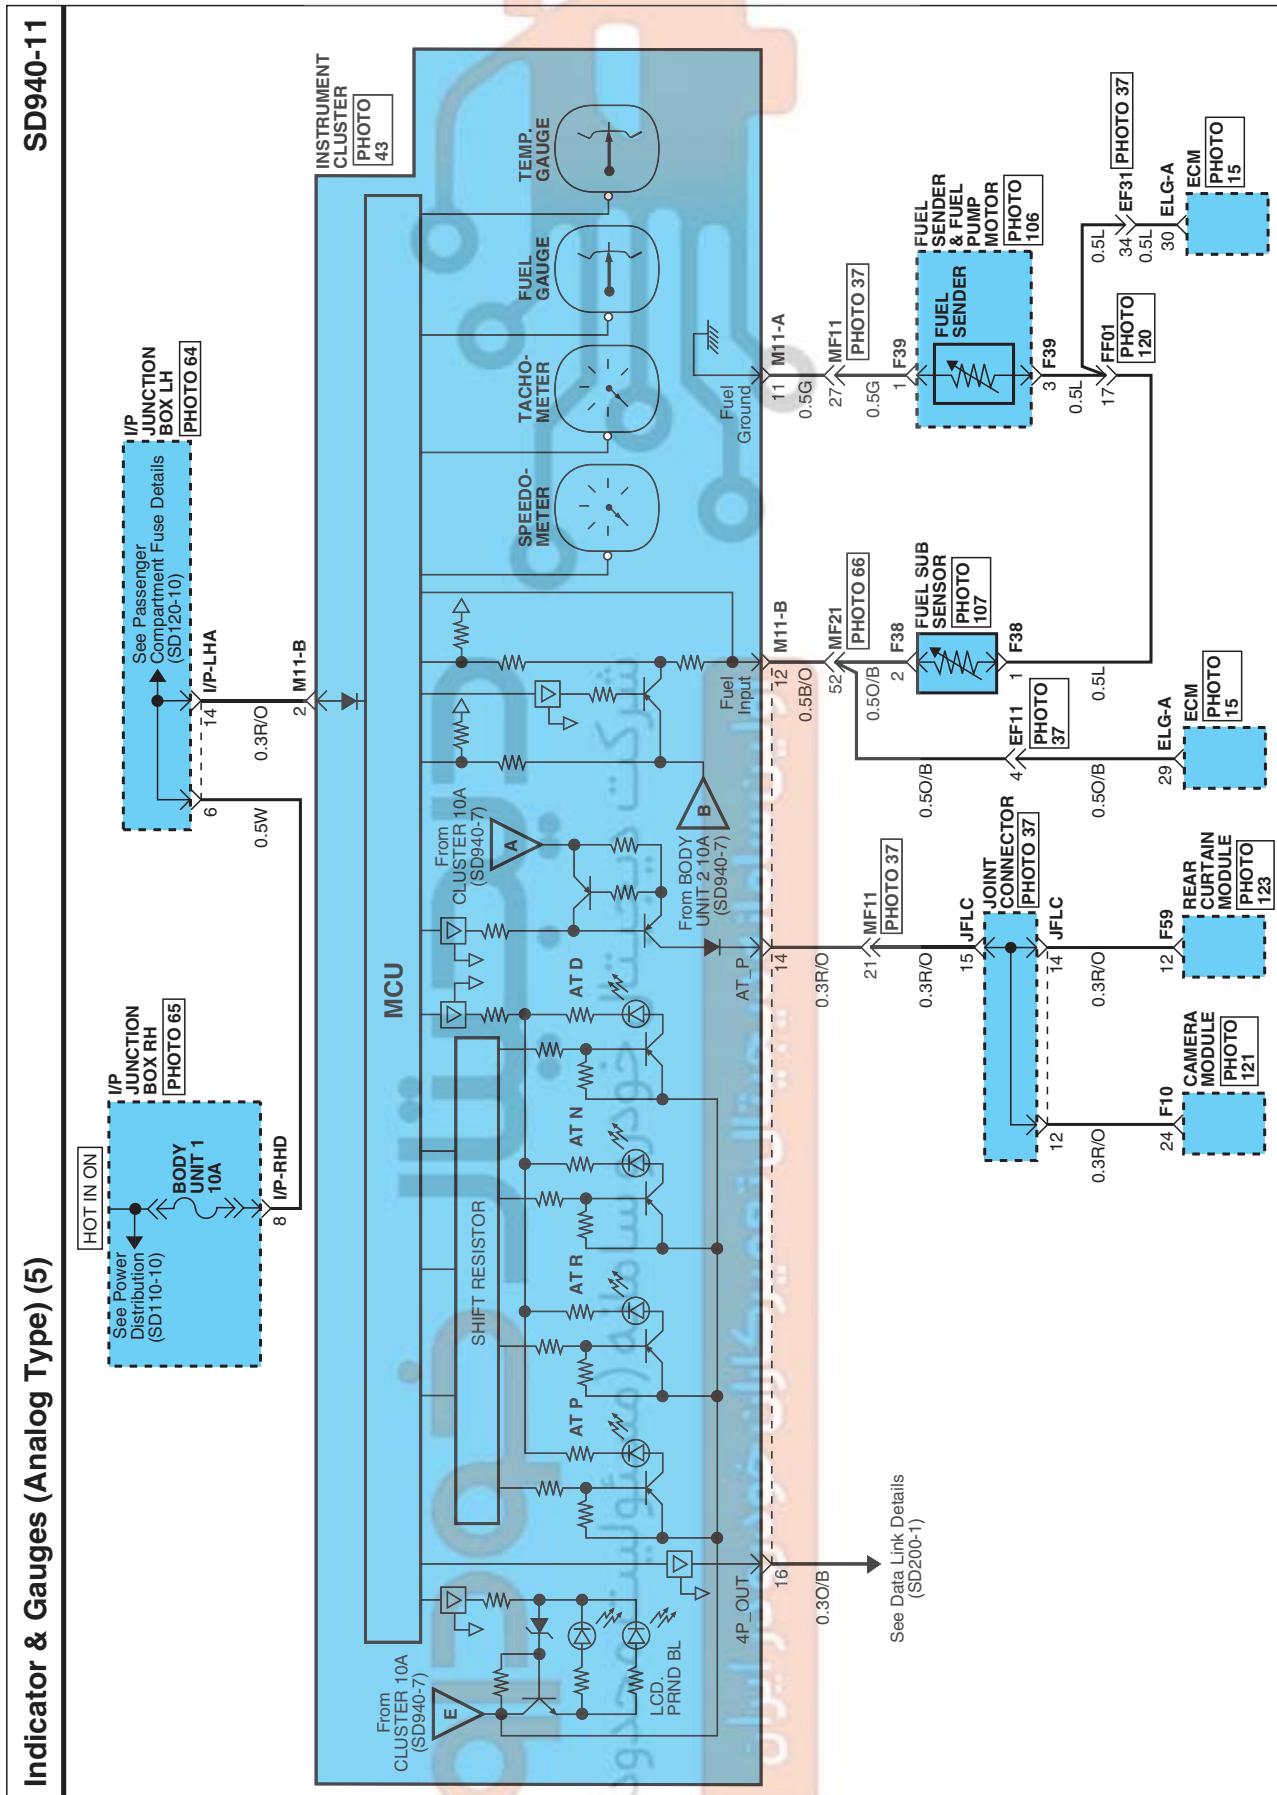


WWW.DIGITALKHODRO.COM

021 62 99 92 92 EBHSD9940KL

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (6)

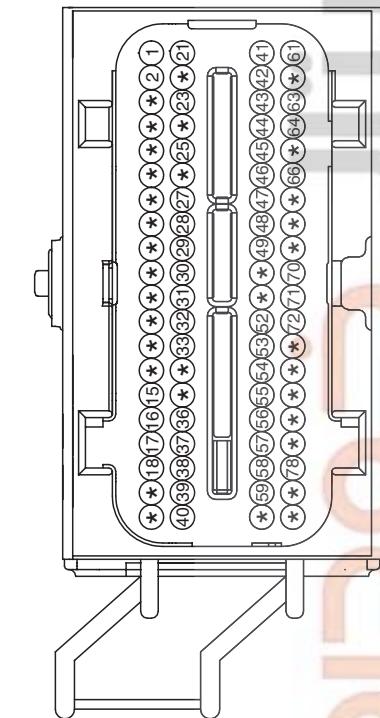

INDICATOR & GAUGES (ANALOG TYPE)

Indicator & Gauges (Analog Type) (6)		SD940-12	
ELG-A		CLG15	
E31		E38	
F38		F39	
M11-A		M11-B	
AMP_040M1_16F_B	AMP_040WP_02F_B	AMP_090WP_02F_B	AMP_090IWP_05F_Gr_2
AMP_040M1_24F_B	PKD_ECU_80F_Gr_1	AMP_250DL_01F_B	YAZ_62Z_02F_BR
KUM_NMWWP_01F_B	4039393736**33223130292827**25**23**21 **18171615**14**13**12**11**10**9**8**7 4039393736**33223130292827**25**23**21 **5958575655545352**494847461544434241 **73**727170**727170**66**64**63**61 **1110**10**9**8**7**6**5**4**3**2**1 24232221201918**151413	AMP_JPT_02F_B_S1	AMP_070_14F_W
AMP_040M1_20F_B	BLANK	BLANK	AMP_0407_26F_W_HD