


FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (3)

SD100-3

E/R JUNCTION BOX

1. USE THE DESIGNATED FUSE AND RELAY ONLY.
2. REFER TO OWNER'S MANUAL FOR FUSE AND RELAY SERVICE.
3. NON DRL FUNCTION VEHICLE USE SHUNT RELAY.
4. TO REMOVE OR INSERT FUSE, USE THE FUSE PULLER IN THE DASH FUSE BOX PANEL.
5. (): OPTION.

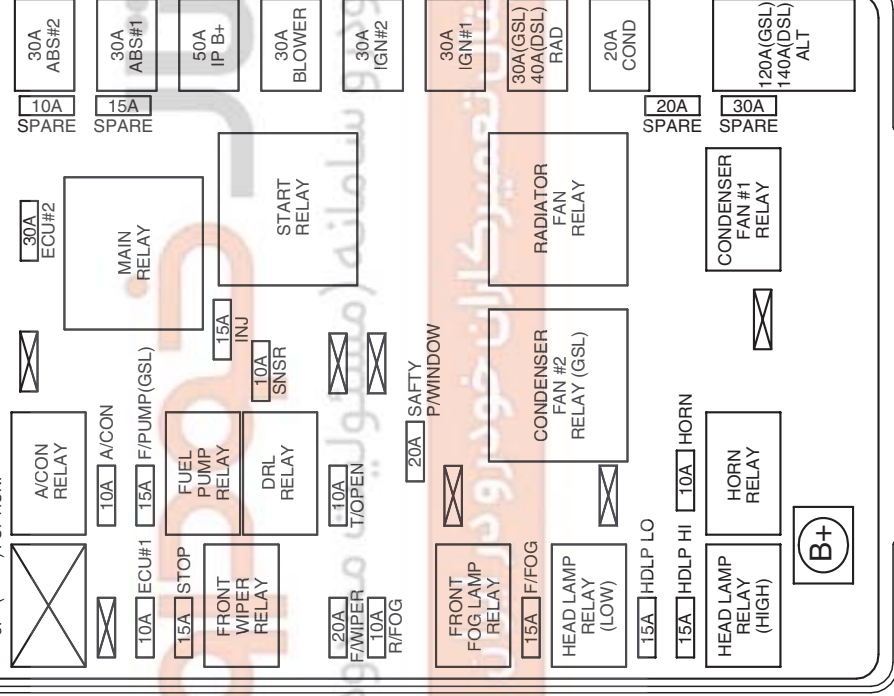

CIRCUIT

Description		(A)	Circuit Protected
FUSE	ECU #1	10A	Multipurpose Check Connector (G4FC/D4FB), TCM (D4FB)
	STOP	15A	Stop Lamp Switch
	F/WIPER	20A	Front Wiper Relay, Multifunction Switch, Front Wiper Motor
	R/FOG	10A	Rear Fog Lamp Relay
	F/FOG	15A	Front Fog Lamp Relay
	HDLP LO	15A	Head Lamp Relay (Low)
	HDLP HI	15A	Head Lamp Relay (High)
	A/CON	10A	A/Con Relay
	F/PUMP	15A	Fuel Pump Relay
	T/OPEN	10A	Trunk Lid Open Relay (4DR), DRL Relay
	SAFTY P/WINDOW	20A	Safety Power Window Module
	HORN	10A	Horn Relay
	INJ	15A	Injector #1~#4 (G4FC/G4GC), Idle Speed Actuator (G4FC/G4GC), Oil Control Valve (G4FC/G4GC), Purge Control Solenoid Valve (G4GC), EGR Actuator (D4FB), Camshaft Position Sensor (D4FB), VGT Actuator (D4FB), Stop Lamp Switch (D4FB), Diesel Box (D4FB)
	SNSR	10A	Oxygen Sensor (G4FC/G4GC), Purge Control Solenoid Valve (G4FC), Immobilizer Control Module, Camshaft Position Sensor (G4FC/G4GC), Crankshaft Position Sensor (G4GC), Lambda Sensor (D4FB), ECM
FUSIBLE LINK	ECU #2	30A	Main Relay, ECM (G4FC/G4GC), Multipurpose Check Connector (G4GC)
	ABS #2	30A	ABS Control Module
	ABS #1	30A	ABS Control Module
	IP B+	50A	I/P Junction Box
	BLOWER	30A	Blower Relay
	IGN #2	30A	Start Relay, Ignition Switch
	IGN #1	30A	Ignition Switch
	RAD	30A(GSL) 40A(DSL)	Radiator Fan Relay
	COND	20A	Condenser Fan #1 Relay
	ALT	120A(GSL) 140A(DSL)	Generator

✘ USE THE DESIGNATED FUSE ONLY


FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (4)

SD100-4

DIESEL BOX

D4FB

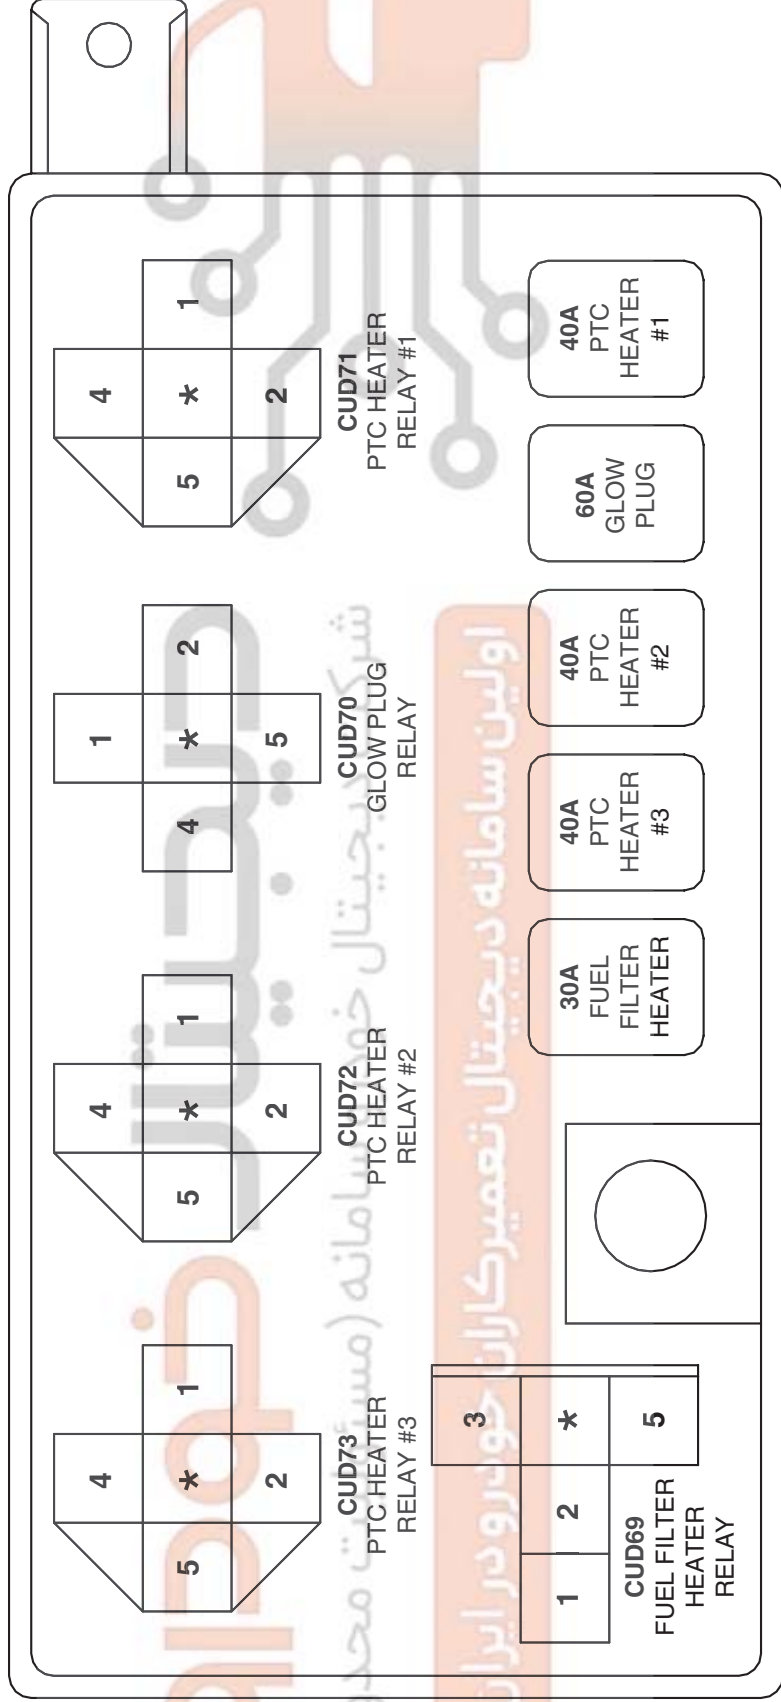

※ USE THE DESIGNATED FUSE ONLY