


Lighting System

High/Low Beam Light

Circuit Diagram (Page 1 of 2)

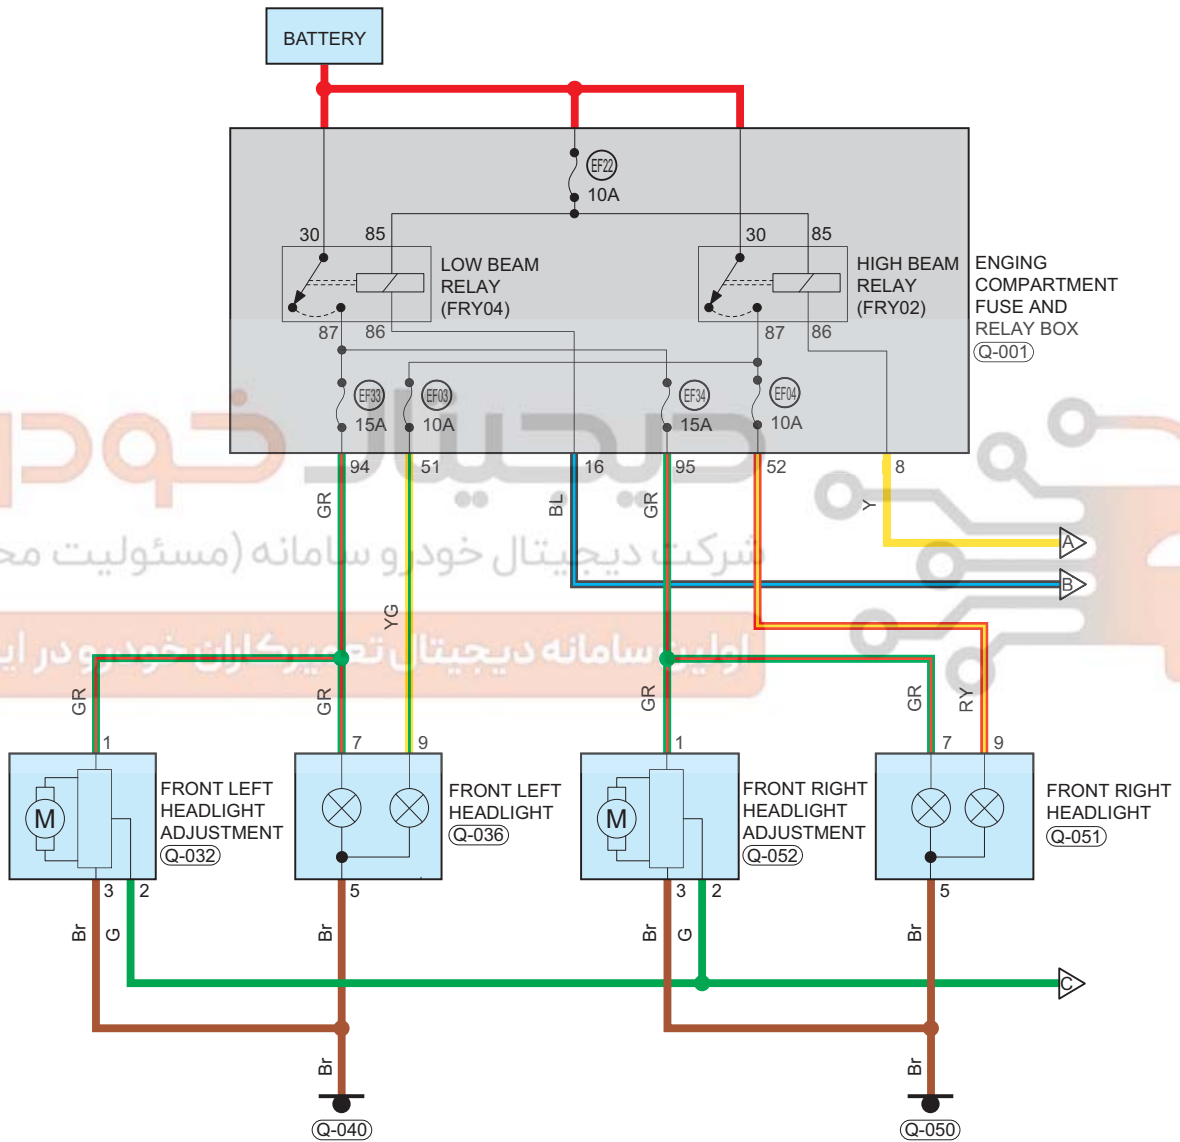

09

LIE008001

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	08-10	Q-032	08-10	Q-036	08-10
Q-052	08-10	Q-051	08-10	Q-050	08-10
Q-040	08-10				


Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF22	06-2	Engine Compartment Fuse and Relay Box
EF33	06-2	Engine Compartment Fuse and Relay Box
EF03	06-2	Engine Compartment Fuse and Relay Box
EF34	06-2	Engine Compartment Fuse and Relay Box
EF04	06-2	Engine Compartment Fuse and Relay Box
FRY04	06-2	Engine Compartment Fuse and Relay Box
FRY02	06-2	Engine Compartment Fuse and Relay Box

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
Q-001	12-17	Q-032	12-17	Q-036	12-17
Q-052	12-17	Q-051	12-17	Q-050	12-17
Q-040	12-17				

Circuit Diagram (Page 2 of 2)

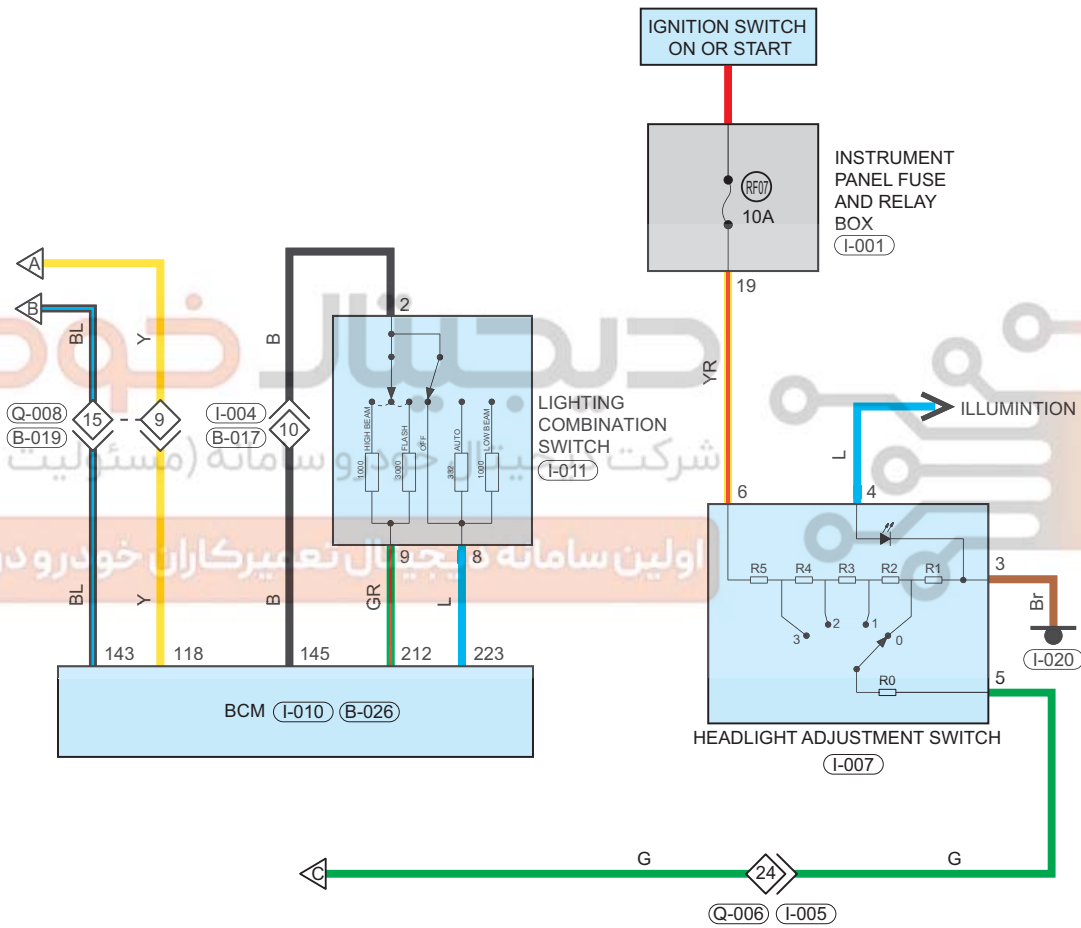

09

LIE009001