


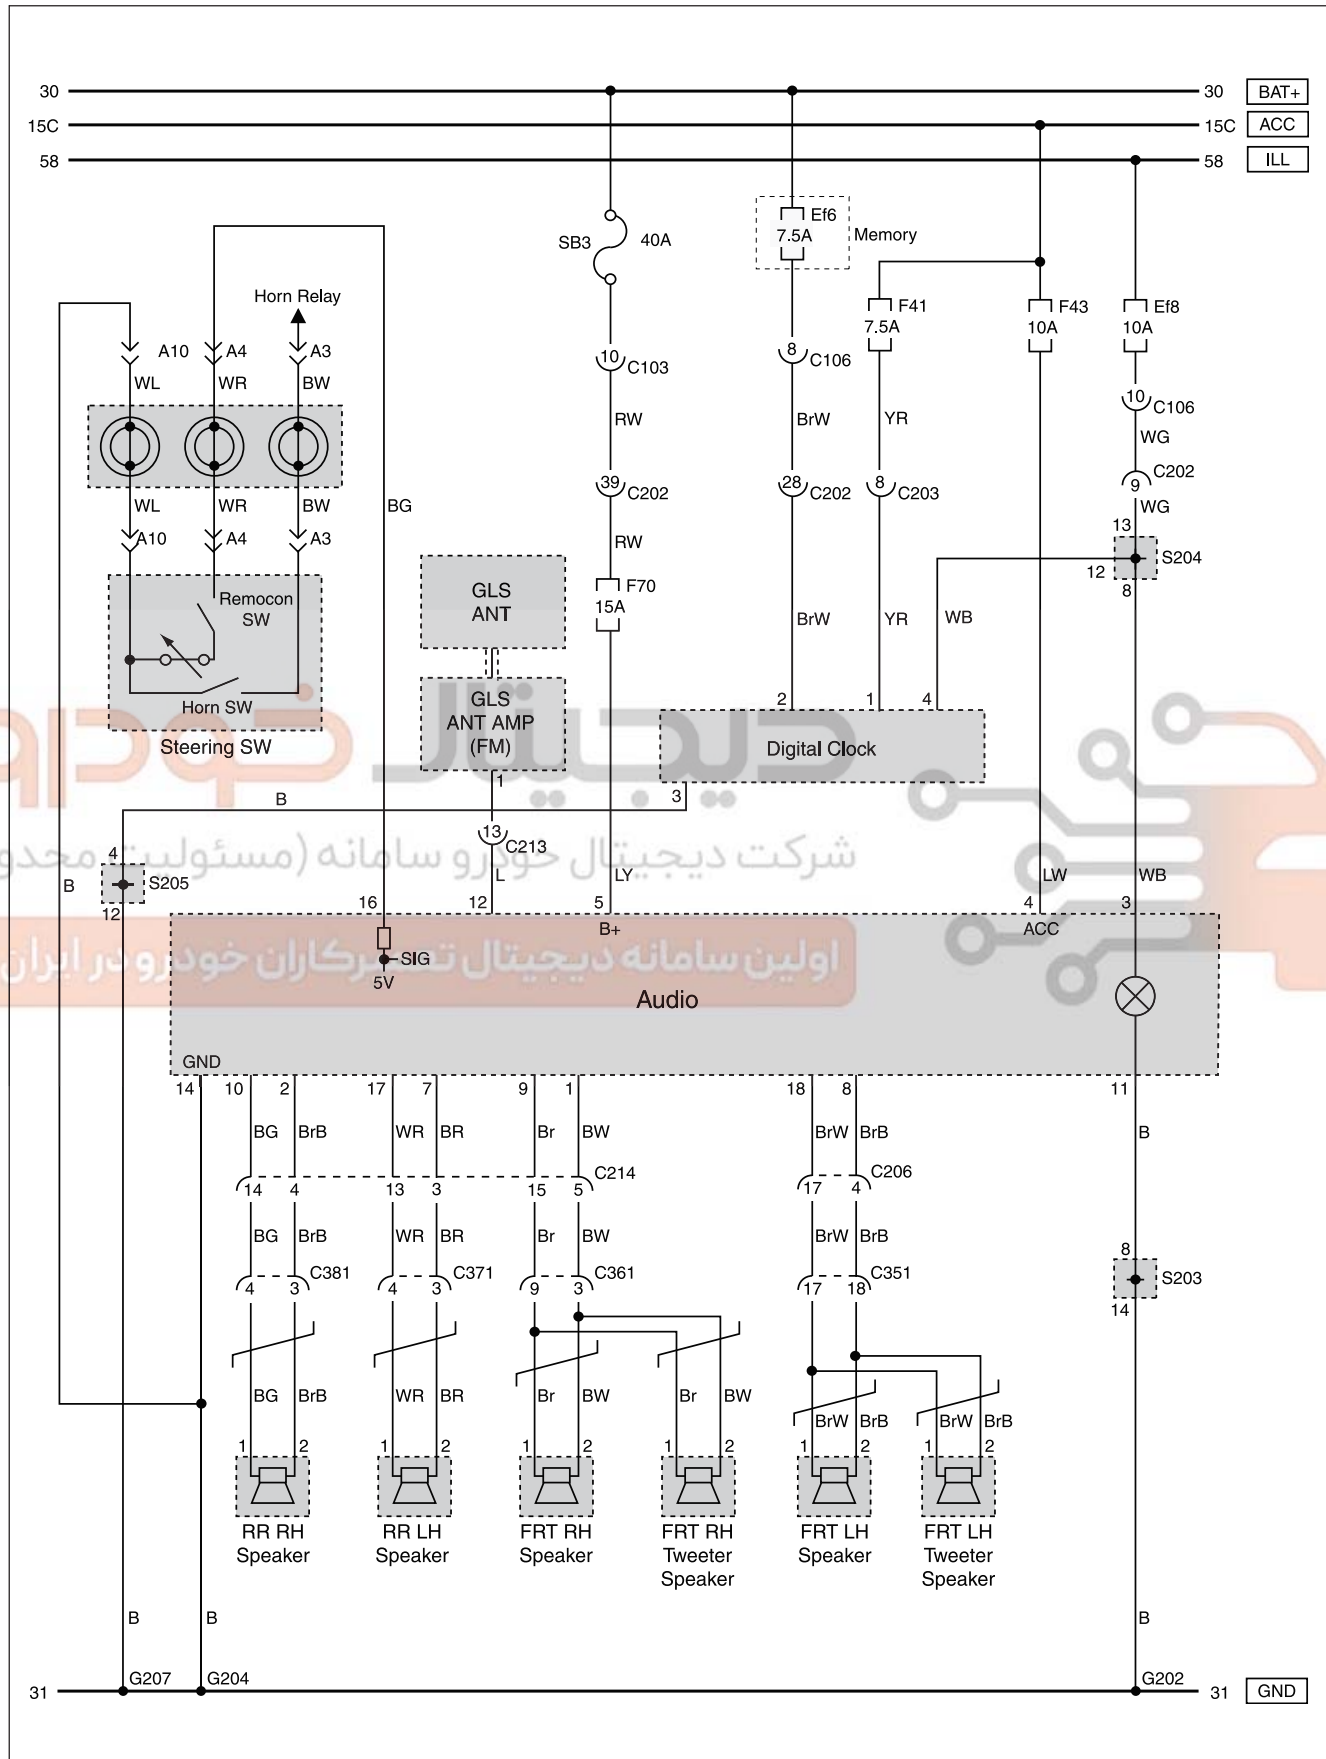

32. AUDIO & CLOCK CIRCUIT 8910



A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C214 (20Pin, Yellow)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C351 (33Pin, White)	W/H Floor - W/H Driver DR	Under the LH "A" Pillar	
C361 (33Pin, White)	W/H Floor - W/H Passenger DR	Under the RH "A" Pillar	
C371 (11Pin, White)	W/H Floor - W/H RR LH DR	Under the LH "B" Pillar	
C381 (11Pin, White)	W/H Floor - W/H RR RH DR	Under the RH "B" Pillar	
G202	W/H Main	Under the Driver "A" Pillar	
G204	W/H Main	Backside TGS Lever Unit	
G207	W/H Main	Inner the Passenger Cowl Side PNL	
S203 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND
S204 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	ILL
S205 (14Pin, Black)	W/H Main	Under the PTC Protector	GND


B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C103
W/H Floor
(Eng Room Fuse & Relay Box)




C106
W/H Floor
(Eng Room Fuse & Relay Box)

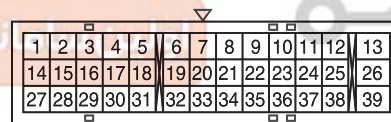


C202
W/H Floor

 


C203
W/H Floor

 


C214
W/H Floor

 


C351
W/H Driver DR

 


C361
W/H Passenger DR

 

C371
W/H RR LH DR

 


C381
W/H RR RH DR

 

Contact Coil
Connector



 GLS ANT
AMP(FM)



Audio



Speaker
(FRT/RR DR)




Tweeter
Speaker



Clock

33. A/V SYSTEM 8930


1) A/V HEAD UNIT, TUNER UNIT, DSP UNIT, DVD CHANGER, GLS ANT AMP

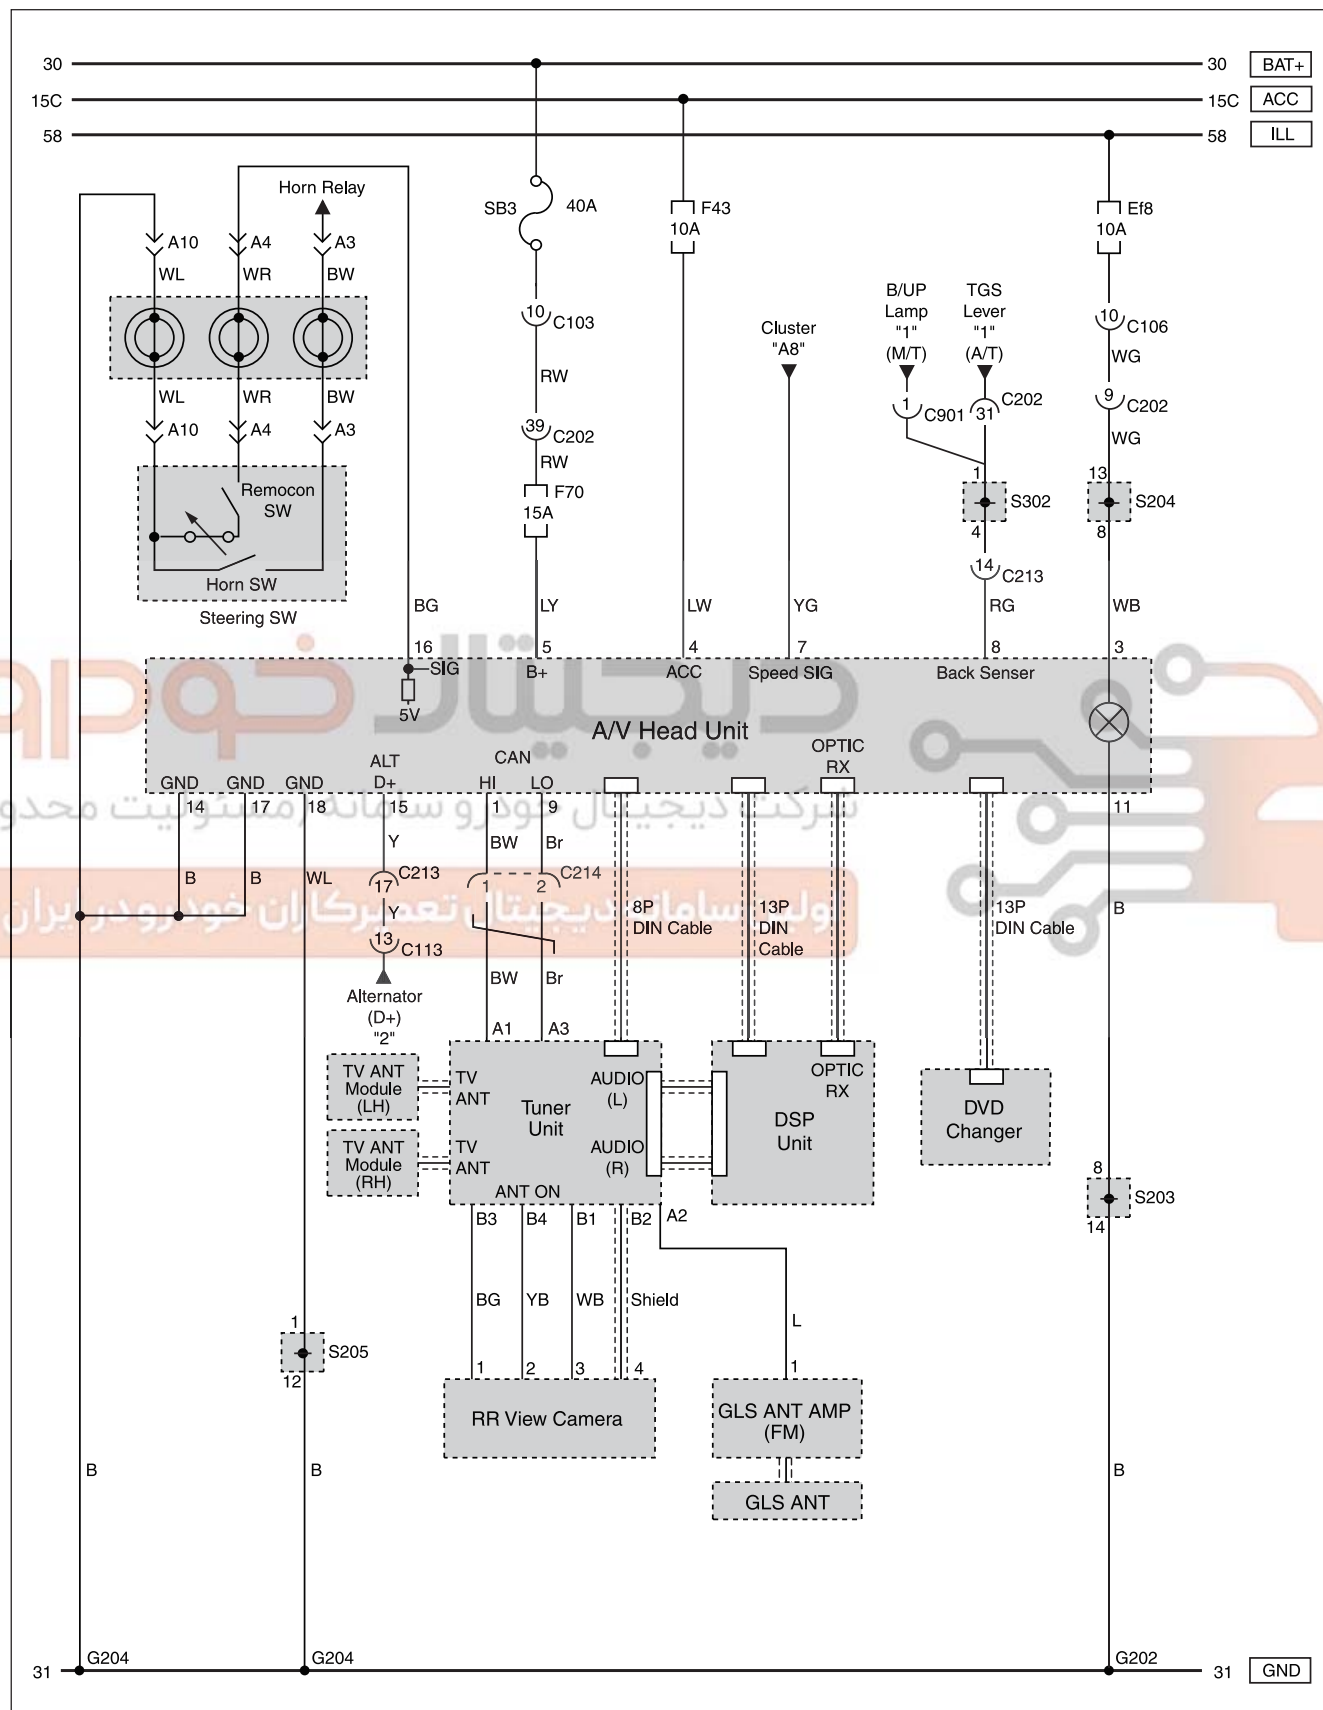

A. CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C214 (20Pin, Yellow)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C901 (4Pin, Black)	W/H Floor - W/H T/M	Upper the T/M	M/T
G202	W/H Main	Under the Driver "A" Pillar	
G204	W/H Main	Backside TGS Lever Unit	
S203 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND
S204 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	ILL
S205 (14Pin, Black)	W/H Main	Under the PTC Protector	GND
S302 (14Pin, Black)	W/H Main	Beside RR LH Seat W/H Protector	

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

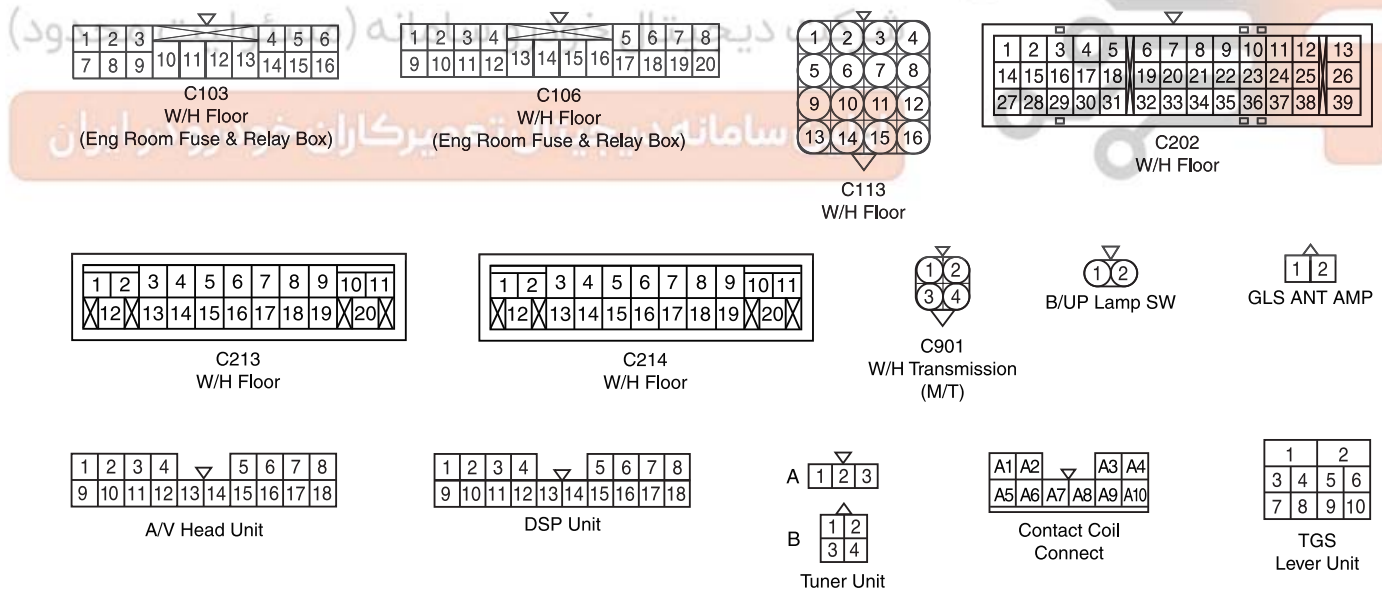



2) DSP UNIT, SPEAKER

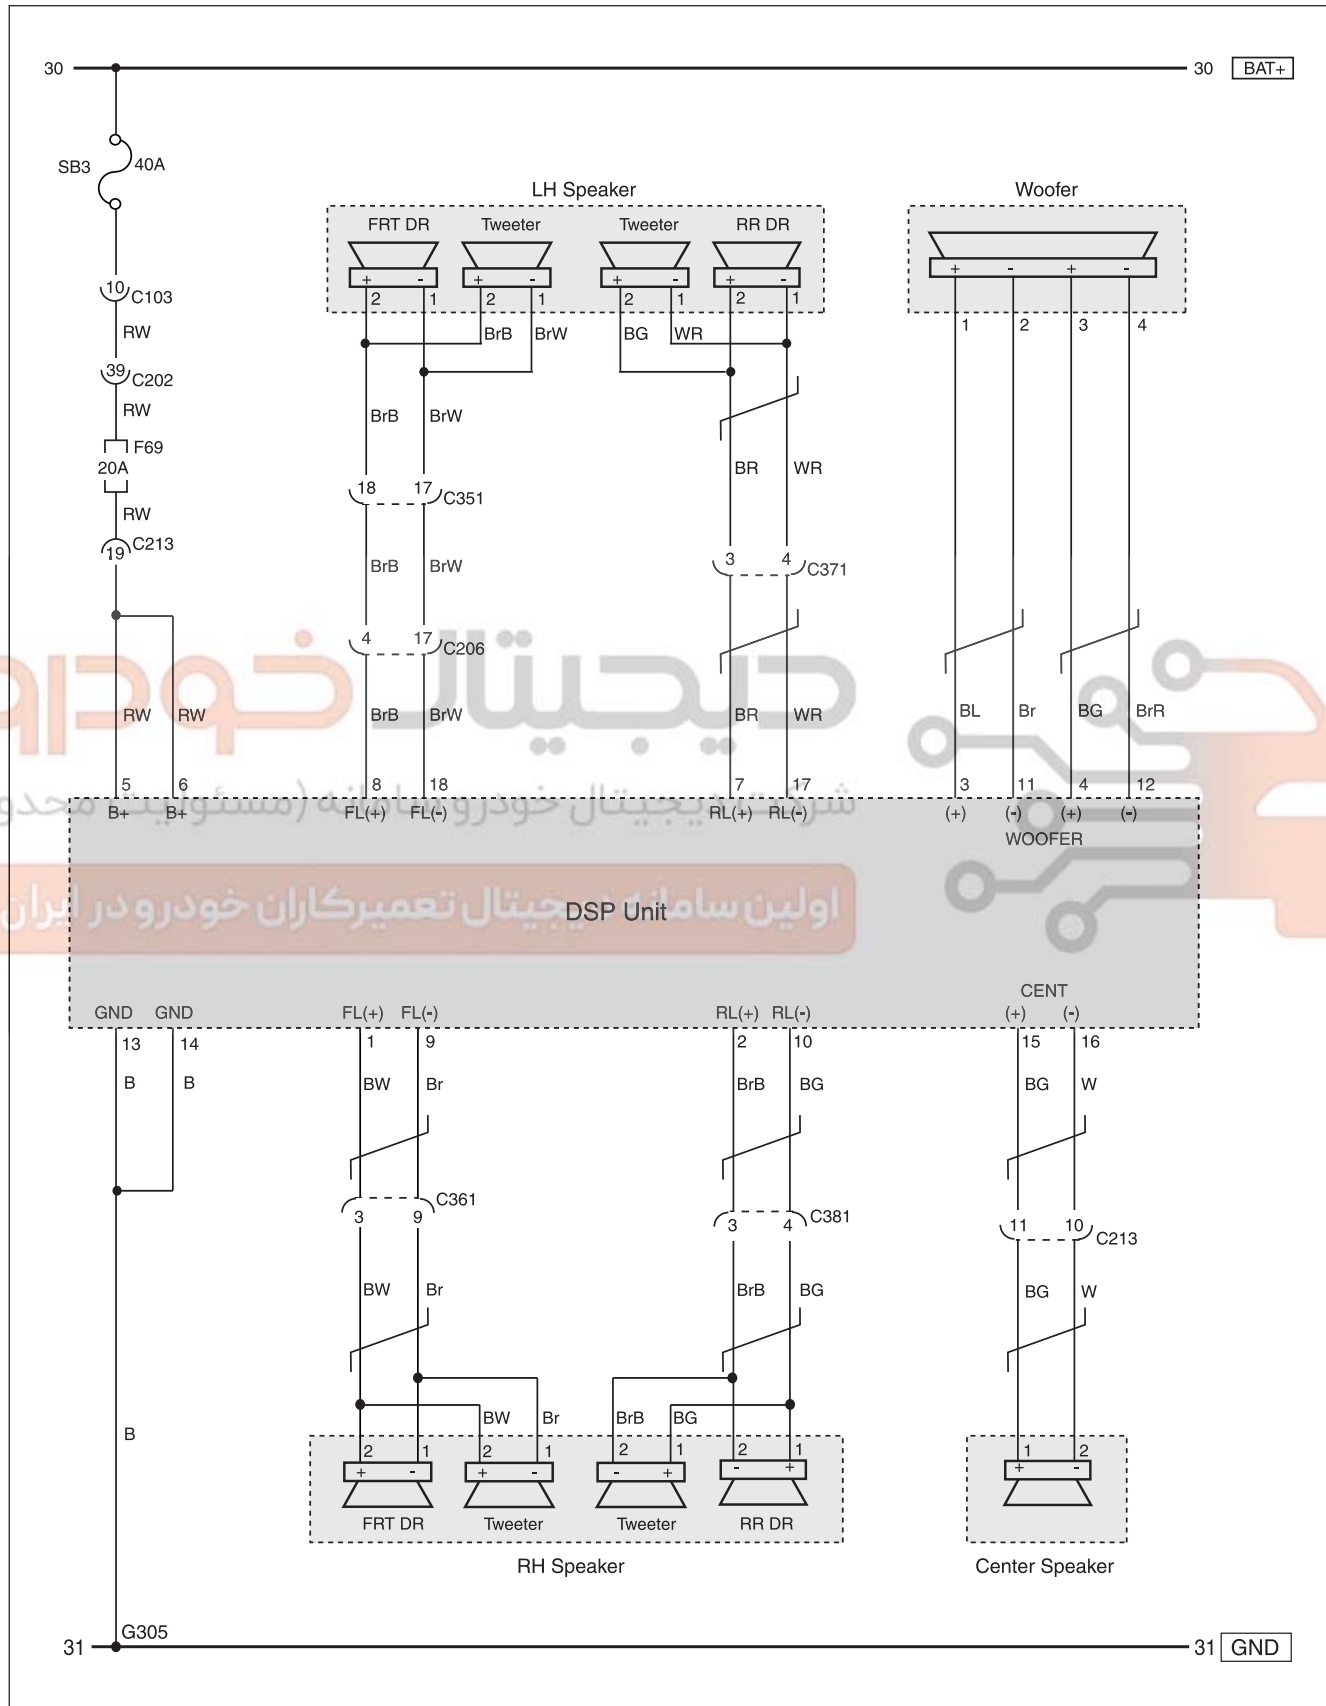

A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C351 (33Pin, White)	W/H Floor - W/H Driver DR	Under the LH "A" Pillar	
C361 (33Pin, White)	W/H Floor - W/H Passenger DR	Under the RH "A" Pillar	
C371 (11Pin, White)	W/H Floor - W/H RR LH DR	Under the LH "B" Pillar	
C381 (11Pin, White)	W/H Floor - W/H RR RH DR	Under the RH "B" Pillar	
G305	W/H Floor	Passenger QTR PNL	Audio

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

