

FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (2)

SD100-2

CIRCUIT

FUSE (A)	Circuit Protected
1	30A Driver window switch
2	30A Assistor window switch
3	10A Right rear combination lamp, Glove box ILL, Illuminations
4	30A Rear defogger relay
5	15A SRS control module
6	10A Instrument cluster, ETACM/TACM, Pre-excitation resistor
7	10A Left head lamp, Left rear combination lamp, License lamp
8	10A Digital clock, Audio, Power outside mirror folding module, Power outside mirror & mirror folding switch
9	20A Cigarette lighter
10	15A (SPARE)
11	10A Rear fog lamp relay
12	10A Driver/Assistor power outsider mirror & mirror folding motor, Rear defogger switch
13	10A Audio
14	20A Ignition coil(2.7 GSL)
15	10A Immobilizer control module (2.7 GSL)
16	15A Rear power outlet #1/#2
17	10A Auto light & Photo sensor, Transaxle range switch
18	20A Left/Right front seat warmer switch
19	10A A/C control module (Manual A/C)

FUSE (A)	Circuit Protected
20	10A Burglar alarm relay, Transaxle range switch, Ignition lock switch
21	30A Ignition switch (IG2, START)
22	10A Room lamp, A/C control module, Digital clock, ETACM/TACM, Key remind switch
23	20A Audio amp #2, Sub woofer
24	10A Hazard switch
25	10A Instrument cluster
26	15A Safety relay
27	10A Sunroof controller, A/C control module, Blower relay, ETACM/TACM, Electro chrome mirror
28	10A PTC heater relay, Fuel filter heater relay, DRL, Head lamp relay
29	10A Hazard switch, Hazard relay, Immobilizer control module (2.7 GSL)
30	20A Sunroof controller, Door lock/unlock relay
31	15A Stop lamp switch, Power outside mirror folding module
32	10A (Not used)
33	10A Cruise control module, Stop lamp switch, TCS switch, ESP switch, 4WD ECM, ECM, PCM, TCM, Pulse generator 'A'/B', Vehicle speed sensor
34	20A Front wiper relay, Front wiper motor, Multifunction switch
35	20A 4WD ECM
36	15A Winshield defogger relay, Power window relay(ETACS)
37	10A TCM (2.7 GSL/DSL)
38	10A G-Sensor, ESP control module, ABS control module, Multipurpos check connector

✘ USE THE DESIGNATED FUSE ONLY