


SQRE4T15B Fuel Supply System

Circuit Diagram (Page 1 of 2)

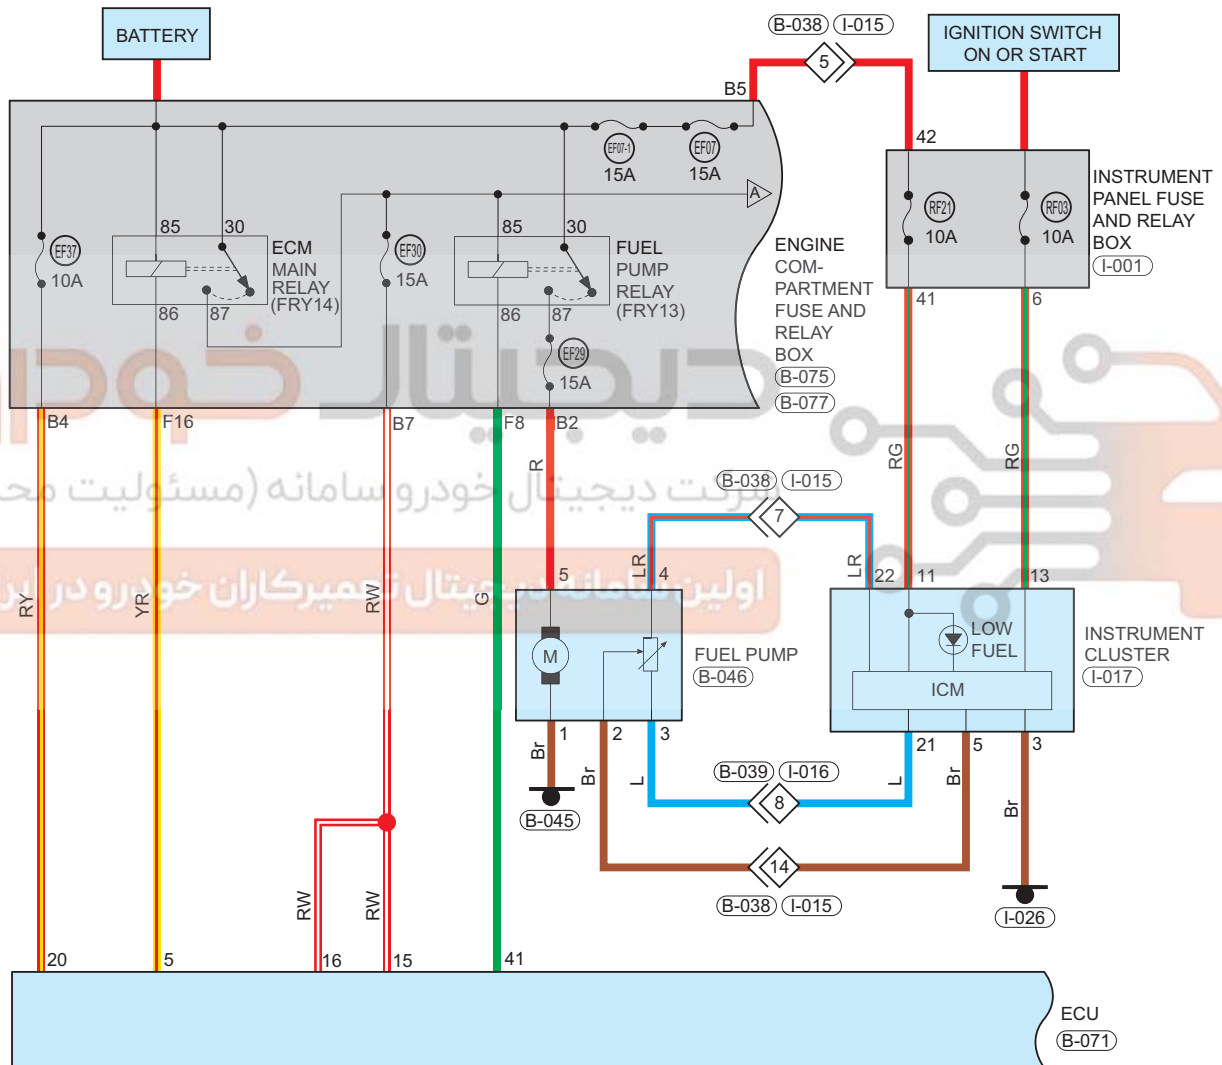

09 - SYSTEM CIRCUITS

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-075	08-12	B-077	08-12	I-001	08-8
B-046	08-12	B-045	08-12	I-017	08-8
B-071	08-12	I-026	08-8		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
EF37	06-2	Engine Compartment Fuse and Relay Box
EF30	06-2	Engine Compartment Fuse and Relay Box
EF29	06-2	Engine Compartment Fuse and Relay Box
EF07-1	06-2	Engine Compartment Fuse and Relay Box
EF07	06-2	Engine Compartment Fuse and Relay Box
ECM Main Relay (FRY14)	06-2	Engine Compartment Fuse and Relay Box
Fuel Pump Relay (FRY13)	06-2	Engine Compartment Fuse and Relay Box
RF21	06-9	Instrument Panel Fuse And Relay Box
RF03	06-9	Instrument Panel Fuse And Relay Box


Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-038, I-015	08-12	B-039, I-016	08-12		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
B-075	12-7	B-077	12-7	I-001	12-4
B-046	12-7	B-045	12-7	I-017	12-4
B-071	12-7	I-026	12-4	B-038, I-015	12-7
B-039, I-016	12-7				

Circuit Diagram (Page 2 of 2)

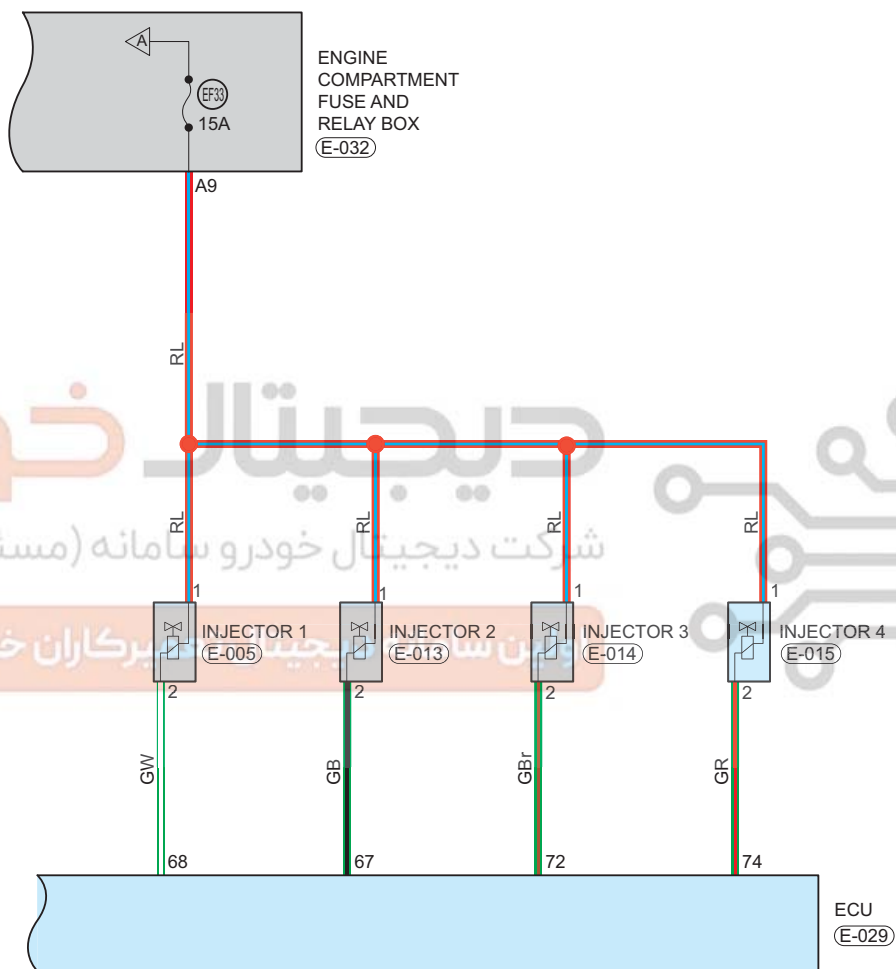

09

FUE002001