


Brake

Circuit Diagram (Page 1 of 1)

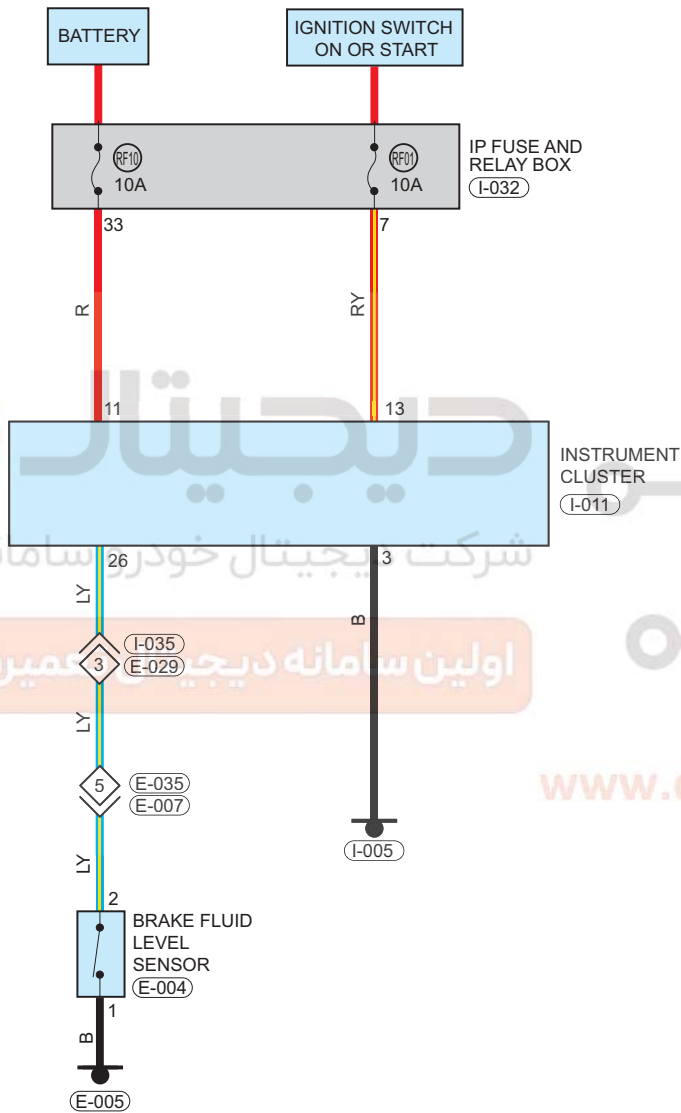

دیجیتال خودرو
شرکت سامانه خودرو سامانه (مسئولیت محدود)
اولین سامانه دیجی کمپیکاران خودرو در ایران



www.digitalkhodro.com

02 09 52 99 92 92

Parts Location

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-032	08-10	I-011	08-10	I-005	08-10
E-004	08-3	E-005	08-3		

Fuse and Relay

Fuse/Relay	See Page	Fuse and Relay Box
RF01	06-10	IP Fuse and Relay Box
RF10	06-10	IP Fuse and Relay Box

Location of Junction Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
E-035, E-007	08-5, 08-3 (MT) 08-7, 08-3 (AT)	I-035, E-029	08-10, 08-5 (MT) 08-10, 08-7 (AT)		

Form of Connector

Connector Code	See Page	Connector Code	See Page	Connector Code	See Page
I-032	12-9	I-011	12-7	I-005	12-7
E-004	12-2	E-005	12-2	E-035, E-007	12-4
I-035, E-029	12-9				