


FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (3)

SD100-3

U/H JUNCTION BOX

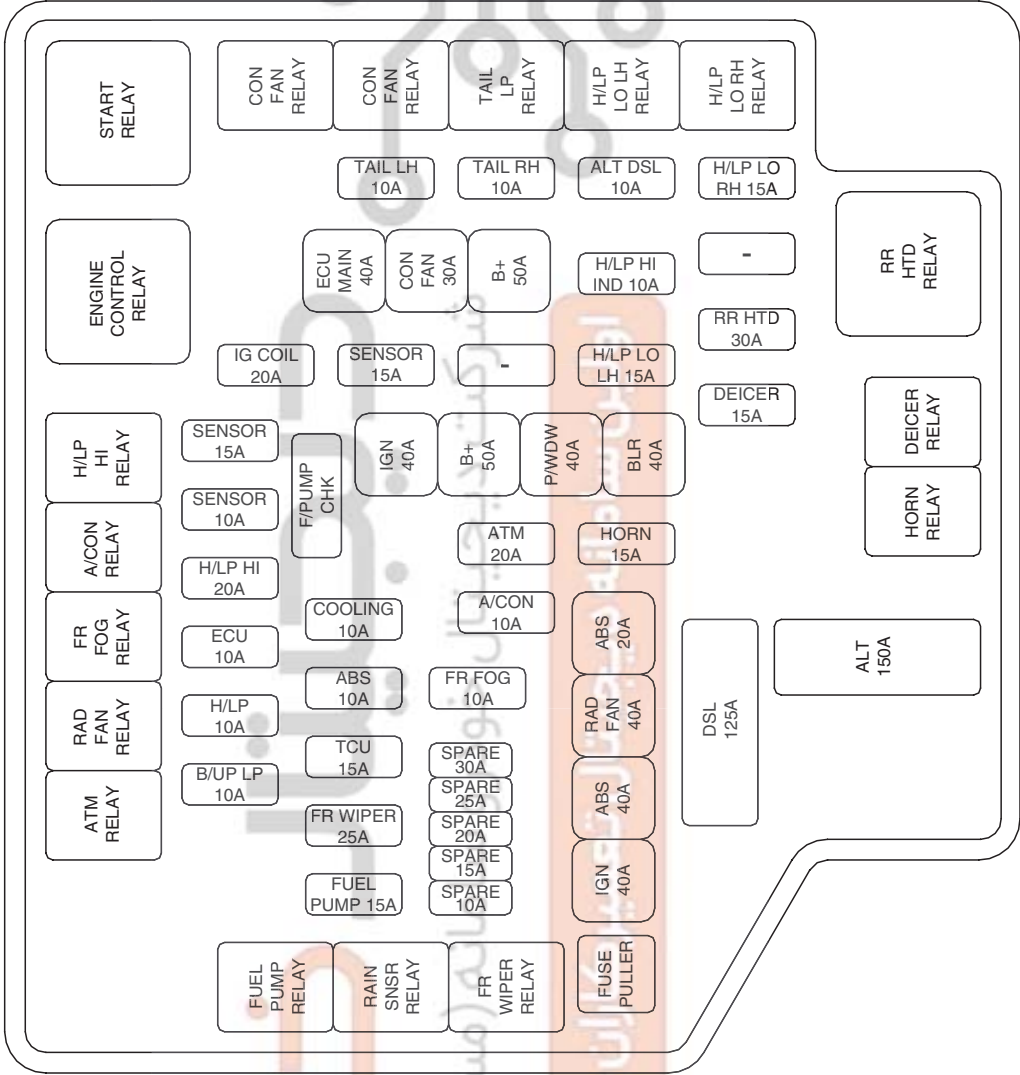

※USE THE DESIGNATED FUSE AND RELAY ONLY

FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (4)

SD100-4

CIRCUIT

FUSE	(A)	Circuit Protected	FUSE	(A)	Circuit Protected
DSL	125A	FUSIBLE LINK BOX	H/LP	10A	I/P JUNCTION BOX
ALT	150A	GENERATOR	FR WIPER	25A	FR WIPER RELAY, RAIN SNSR RELAY, FRONT WIPER MOTOR, MULTIFUNCTION SWITCH
A/CON	10A	A/CON RELAY	H/LP HI	20A	H/LP HI RELAY
RR HTD	30A	RR HTD RELAY	H/LP HI IND	10A	HEAD LAMP, INSTRUMENT CLUSTER
BLR	40A	I/P JUNCTION BOX	IGN #1	40A	IGNITION SWITCH
B+ #2	50A	I/P JUNCTION BOX	IGN #2	40A	IGNITION SWITCH, START RELAY
P/WDW	40A	I/P JUNCTION BOX	B+ #1	50A	I/P JUNCTION BOX
ABS #1	40A	ABS CONTROL MODULE, ESP CONTROL MODULE, MULTIPURPOSE CHECK CONNECTOR	ATM	20A	ATM RELAY(GSL), 4WD ECM, ATM CONTROL RELAY(DSL)
ABS #2	20A	ABS CONTROL MODULE, ESP CONTROL MODULE, MULTIPURPOSE CHECK CONNECTOR	TCU	15A	PCM(GSL), TCM(DSL)
DEICER	15A	DEICER RELAY	ALT DSL	10A	GENERATOR
ECU MAIN	40A	ENGINE CONTROL RELAY	ECU	10A	VEHICLE SPEED SENSOR, MASS AIR FLOW SENSOR(DSL), ECM(DSL), SEMI ACTIVE CONTROL MODULE(GSL), PCM(GSL)
HORN	15A	HORN RELAY	COOLING	10A	CON FAN #1 RELAY, CON FAN #2 RELAY
IG COIL	20A	IGNITION COIL #1~#6(GSL), CONDENSER(GSL), ECM(DSL)	B/UP LP	10A	INPUT SPEED SENSOR, OUTPUT SPEED SENSOR, TCM(DSL), TRANSAXLE RANGE SWITCH, BACK-UP LAMP SWITCH
SENSOR #3	15A	ECM(DSL), PURGE CONTROL SOLENOID VALVE(GSL), VARIABLE INTAKE MANIFOLD VALVE(GSL), PCM(GSL), OIL CONTROL VALVE(GSL)	ABS	10A	ABS CONTROL MODULE, ESP CONTROL MODULE, YAW RATE SENSOR, 4WD ECM, STOP LAMP SWITCH(GSL), FUSIBLE LINK BOX(DSL), FUEL FILTER WARNING SWITCH(DSL), CLUTCH SWITCH(GSL), MULTIPURPOSE CHECK CONNECTOR
RAD FAN	40A	RAD FAN RELAY	TAIL LH	10A	REAR COMBINATION LAMP LH, POSITION LAMP LH
CON FAN	30A	CON FAN #1 RELAY, CON FAN #2 RELAY	TAIL RH	10A	REAR COMBINATION LAMP RH, POSITION LAMP RH, GLOVE BOX LAMP, ICM RELAY BOX
SENSOR #2	15A	MASS AIR FLOW SENSOR(GSL), OXYGEN SENSOR #1~#4(GSL), EGR ACTUATOR(DSL), BOOST PRESSURE ACTUATOR(DSL), CAM SHAFT POSITION SENSOR(DSL), FUSIBLE LINK BOX(DSL), THROTTLE FLAP ACTUATOR(DSL), PCM(GSL)	FR FOG	10A	FR FOG RELAY
SENSOR #1	10A	IMMOBILIZER MODULE, INJECTOR #1~#6(GSL), PCM(GSL)	SPARE	10A	-
FUEL PUMP	15A	STOP LAMP SWITCH(DSL), A/CON RELAY, FUEL PUMP RELAY	SPARE	15A	-
H/LP LO LH	15A	FUEL PUMP RELAY	SPARE	20A	-
H/LP LO RH	15A	H/LP LO LH RELAY	SPARE	25A	-
		H/LP LO RH RELAY	SPARE	30A	-

※USE THE DESIGNATED FUSE ONLY


FUSE & RELAY INFORMATIONS

FUSE & RELAY INFORMATIONS (5)

SD100-5

FUSIBLE LINK BOX

DIESEL

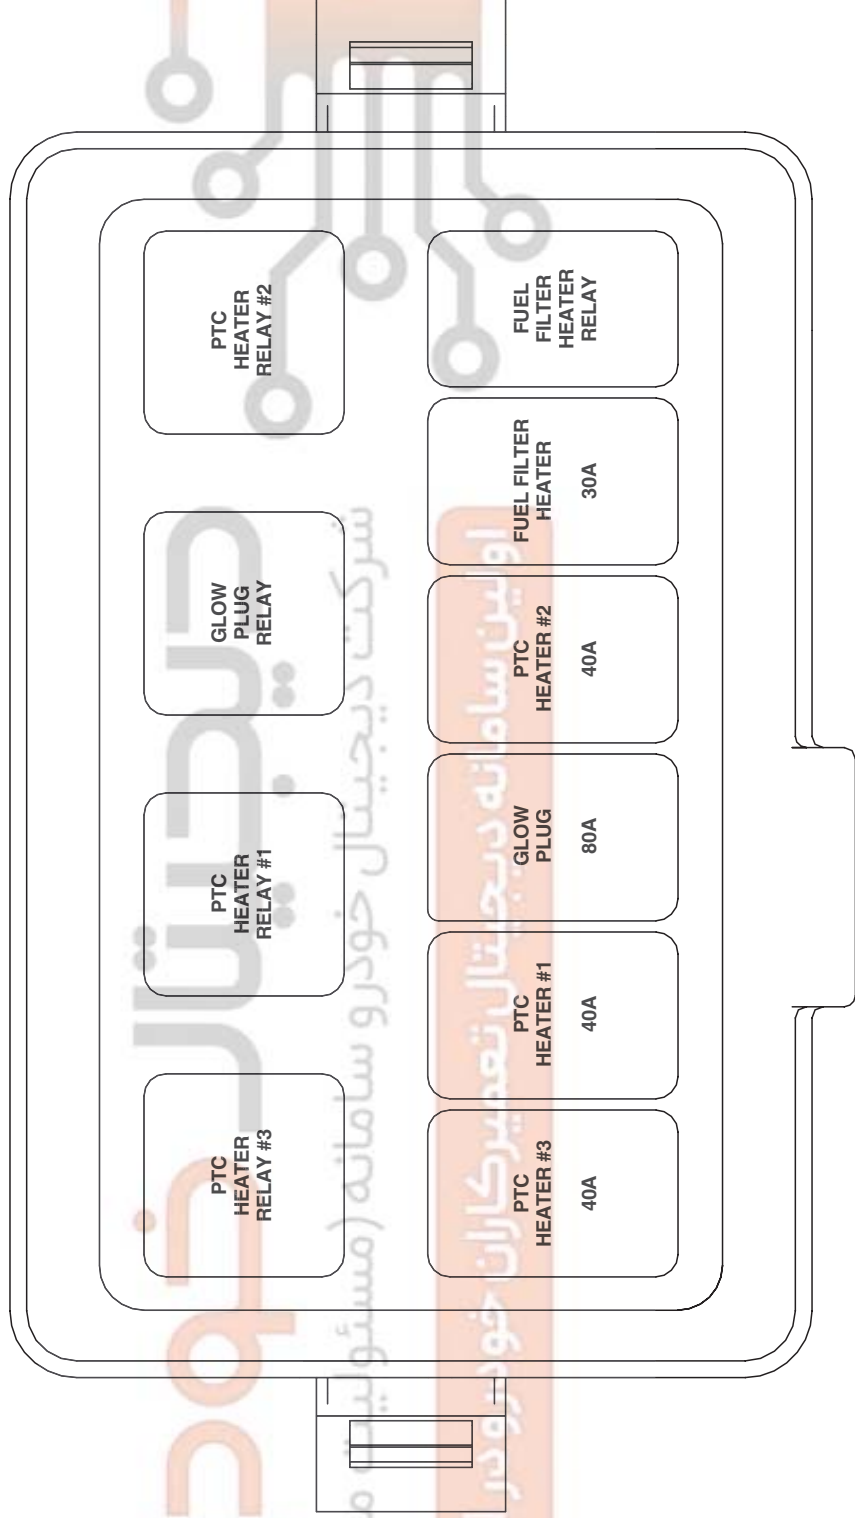


※ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATION


FUSE & RELAY INFORMATION (6)

SD100-6

ICM RELAY BOX

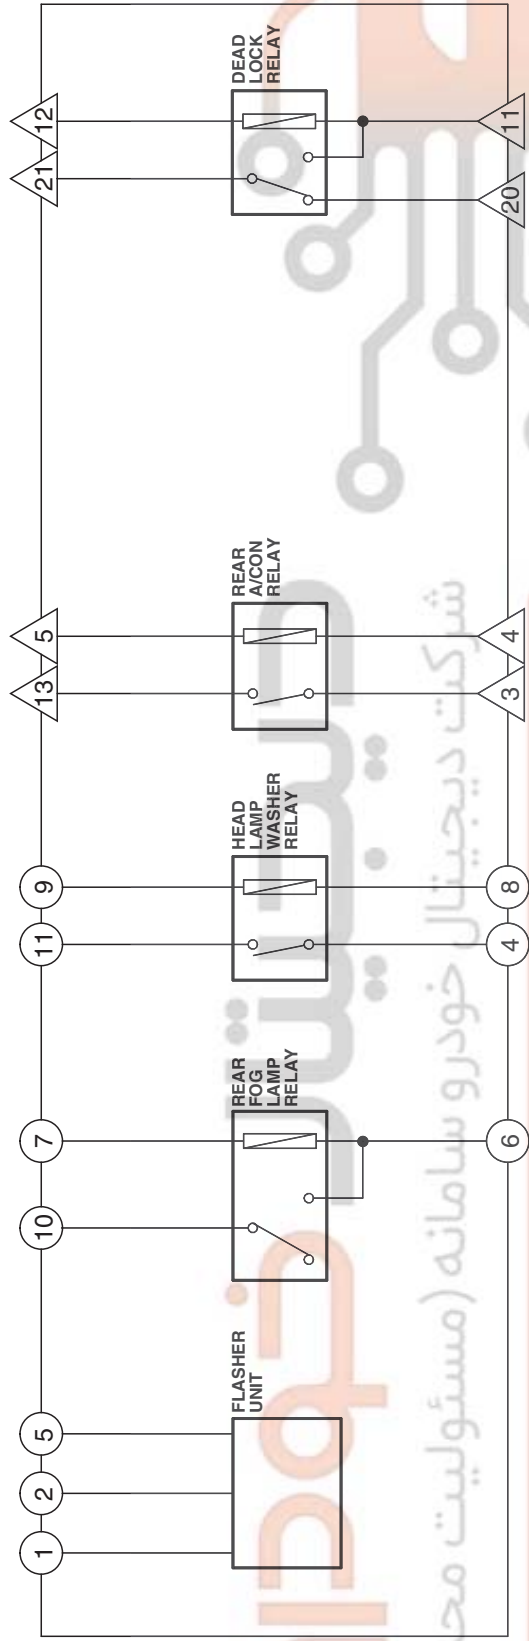


ICM-A(O)

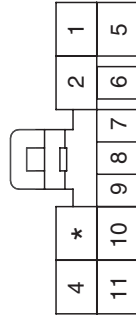


KET_1809_11F_W_UNIT

ICM-B(Δ)

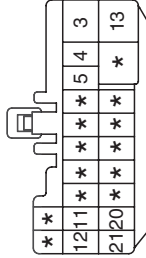

KET_1809_21F_W_A

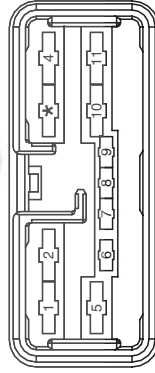

ICM-A(O)

12V 85 C/M
T/STG(W):
32(28)+27+1.2
21X2+5+1.2
HAZARD(W)
32(28)+27+1.2 X2+1.2
(21X2+5+1.2)X2
DOT