



EMS BOX (GSL)



<FRONT>

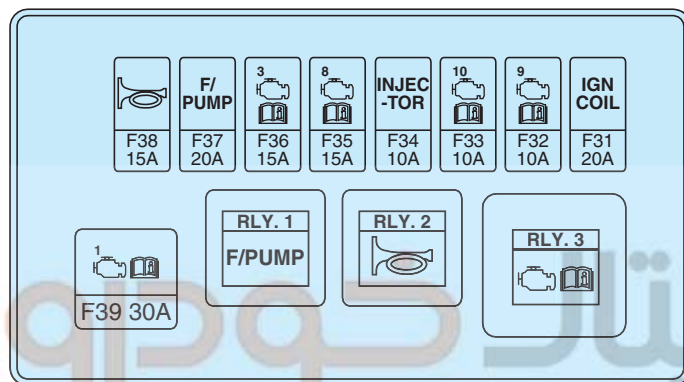

<REAR>

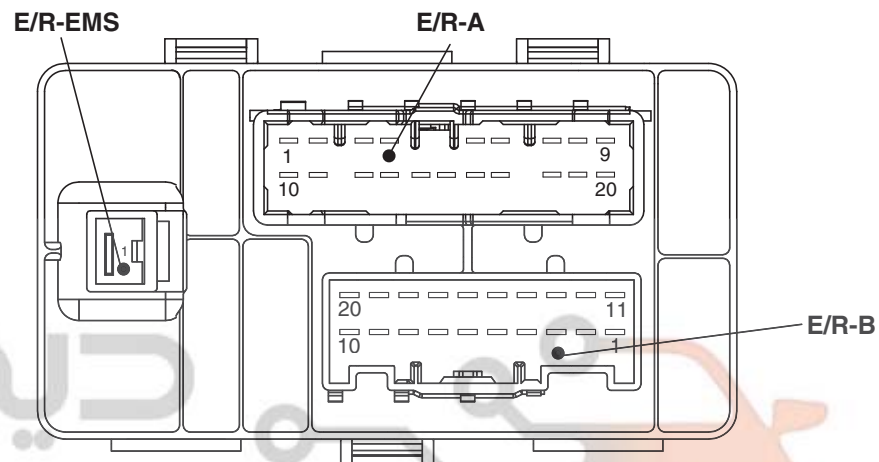

| Relay NO. | Relay Name           | Type       |
|-----------|----------------------|------------|
| 1         | F/PUMP Relay         | Plug Micro |
| 2         | Horn Relay           | Plug Micro |
| 3         | Engine Control Realy | Plug Mini  |

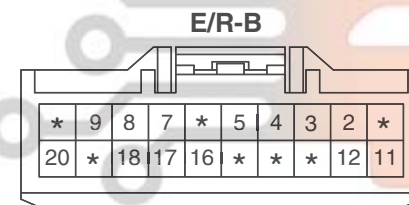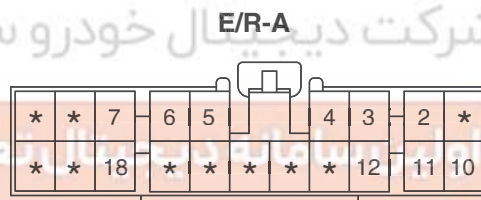

Circuit

| Fuse No. | (A) | Symbol   | Circuit Protected  |
|----------|-----|----------|--|
| F31      | 20A | IGN COIL | Ignition Coil #1 /#2 /#3 /#4, Condenser  |
| F32      | 10A |          | Oil Control Valve #1 /#2, Purge Control Solenoid Valve, Crankshaft Position Sensor, Variable Intake Solenoid Valve |
| F33      | 10A |          | Camshaft Position Sensor #1 /#2, Immobilizer Module  |
| F34      | 10A | INJECTOR | Injector #1/ #2/ #3 /#4 (G4KD/G4KE), RLY.1 (F/PUMP Relay)  |
| F35      | 15A |          | Oxygen Sensor (Up), Oxygen Sensor (Down), E/R Fuse & Relay Box (RLY.4 (C/FAN (LO) Relay))                          |
| F36      | 15A |          | PCM  |
| F37      | 20A | F/PUMP   | RLY.1 (F/PUMP Relay)   |
| F38      | 15A |          | E/R Fuse & Relay Box (RLY.13 (B/Horn Relay)), RLY.2 (Horn Relay)   |
| F39      | 30A |          | RLY.3 (Engine Control Relay)   |

✘ USE THE DESIGNATED FUSE AND RELAY ONLY