



Driver Power Seat

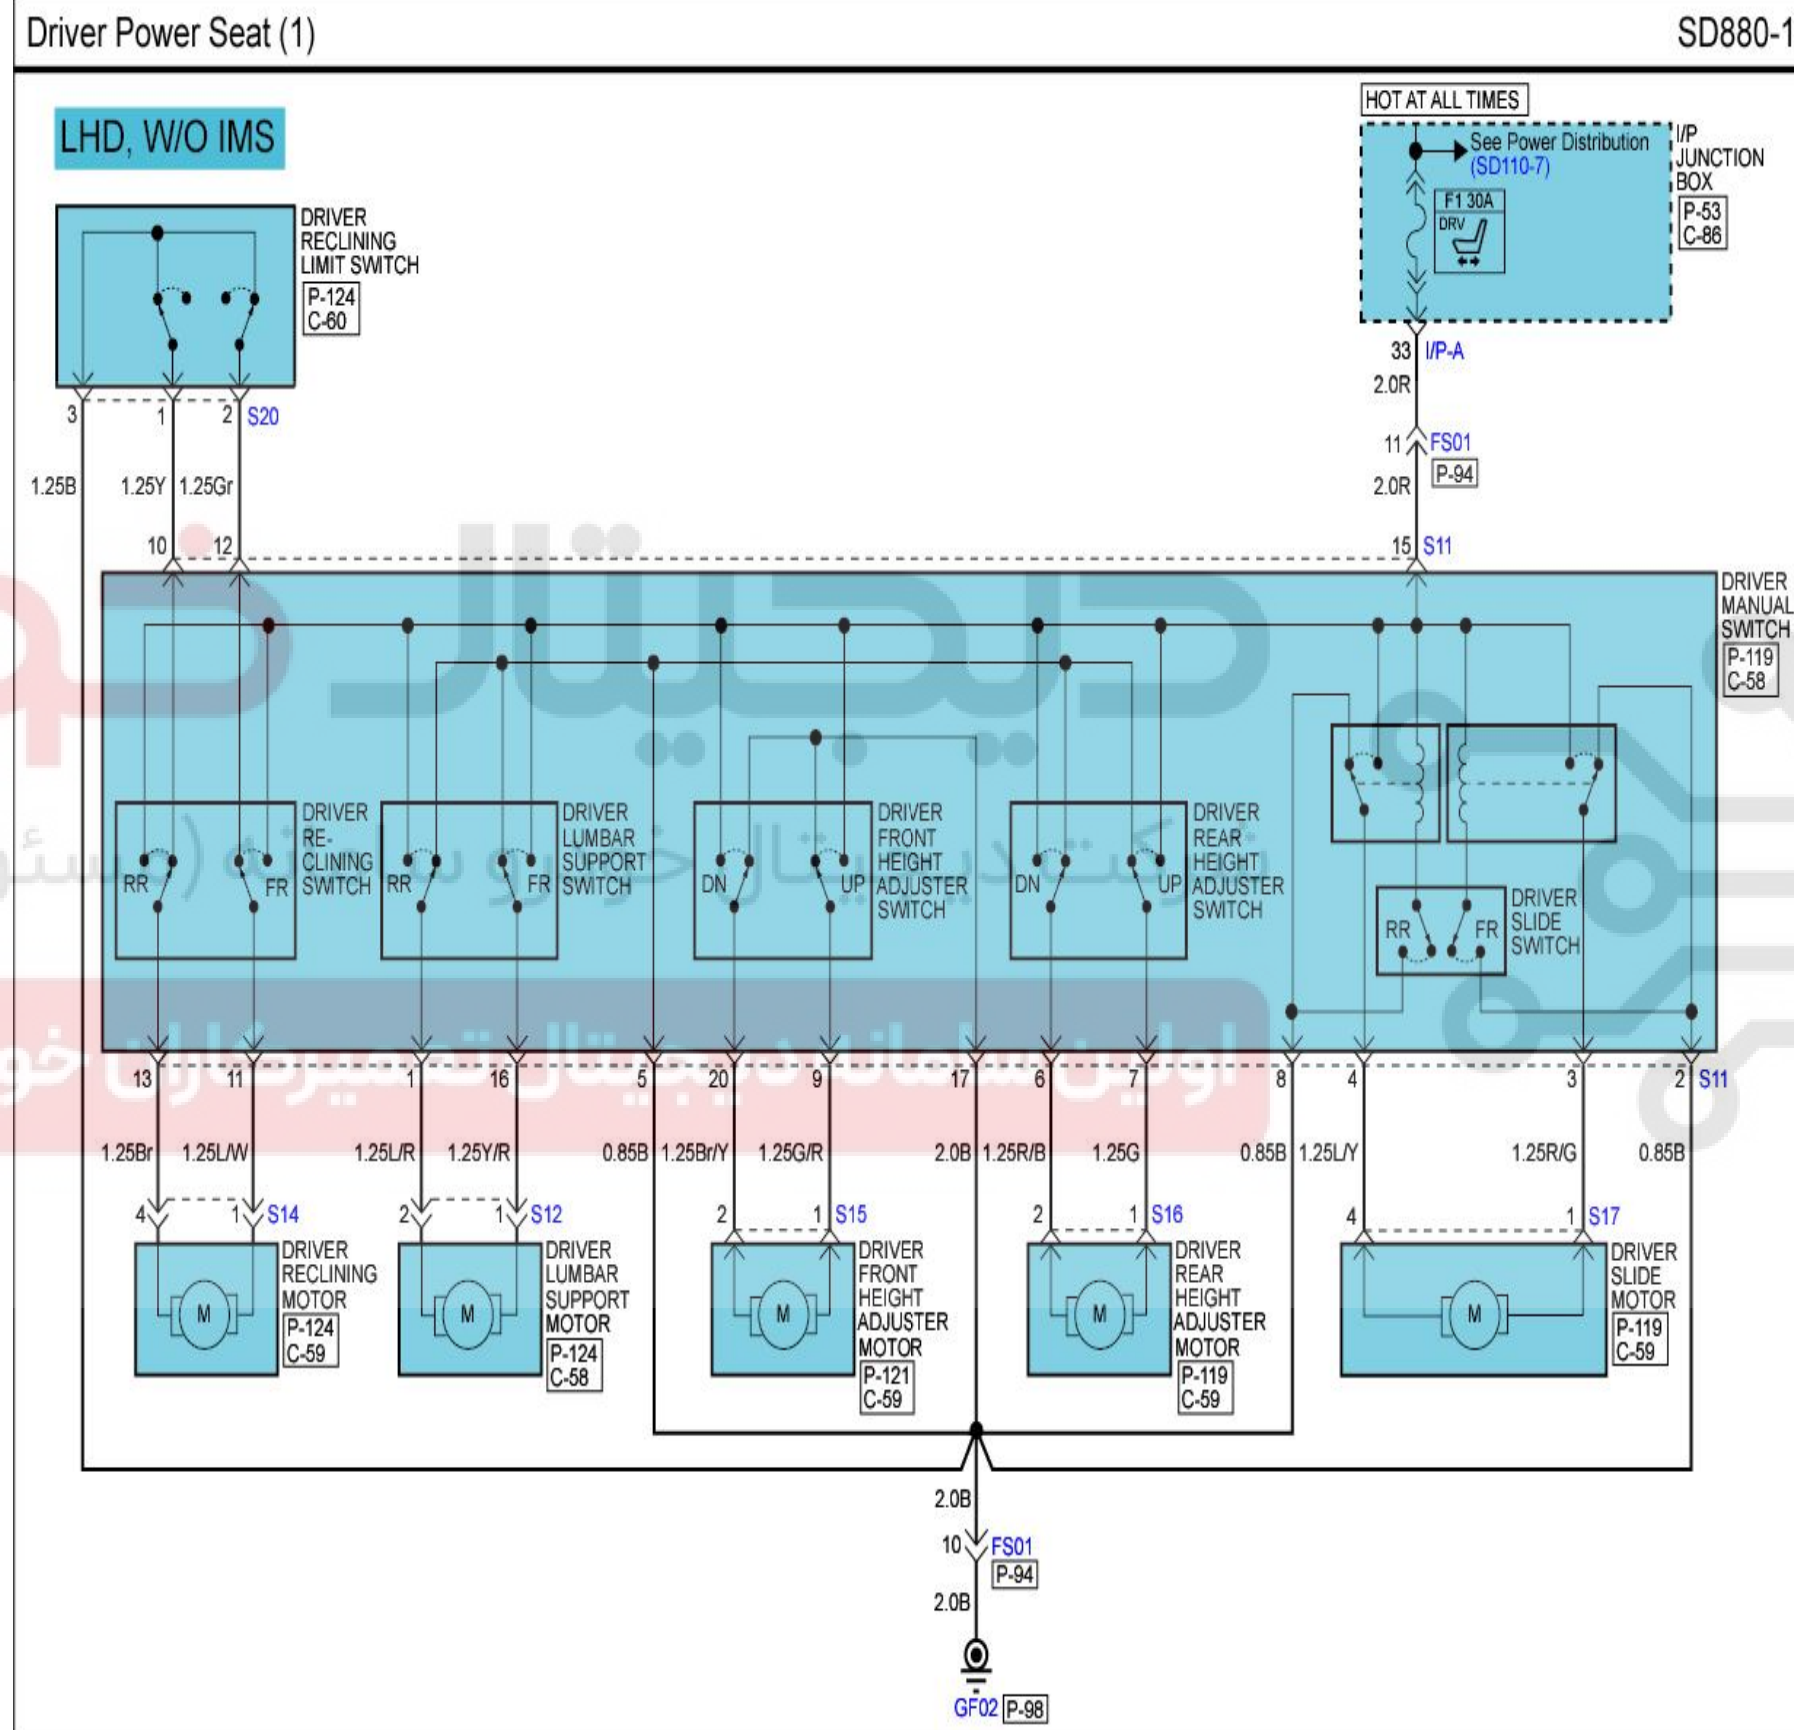

Driver Power Seat

Driver Power Seat (2)

SD880-2

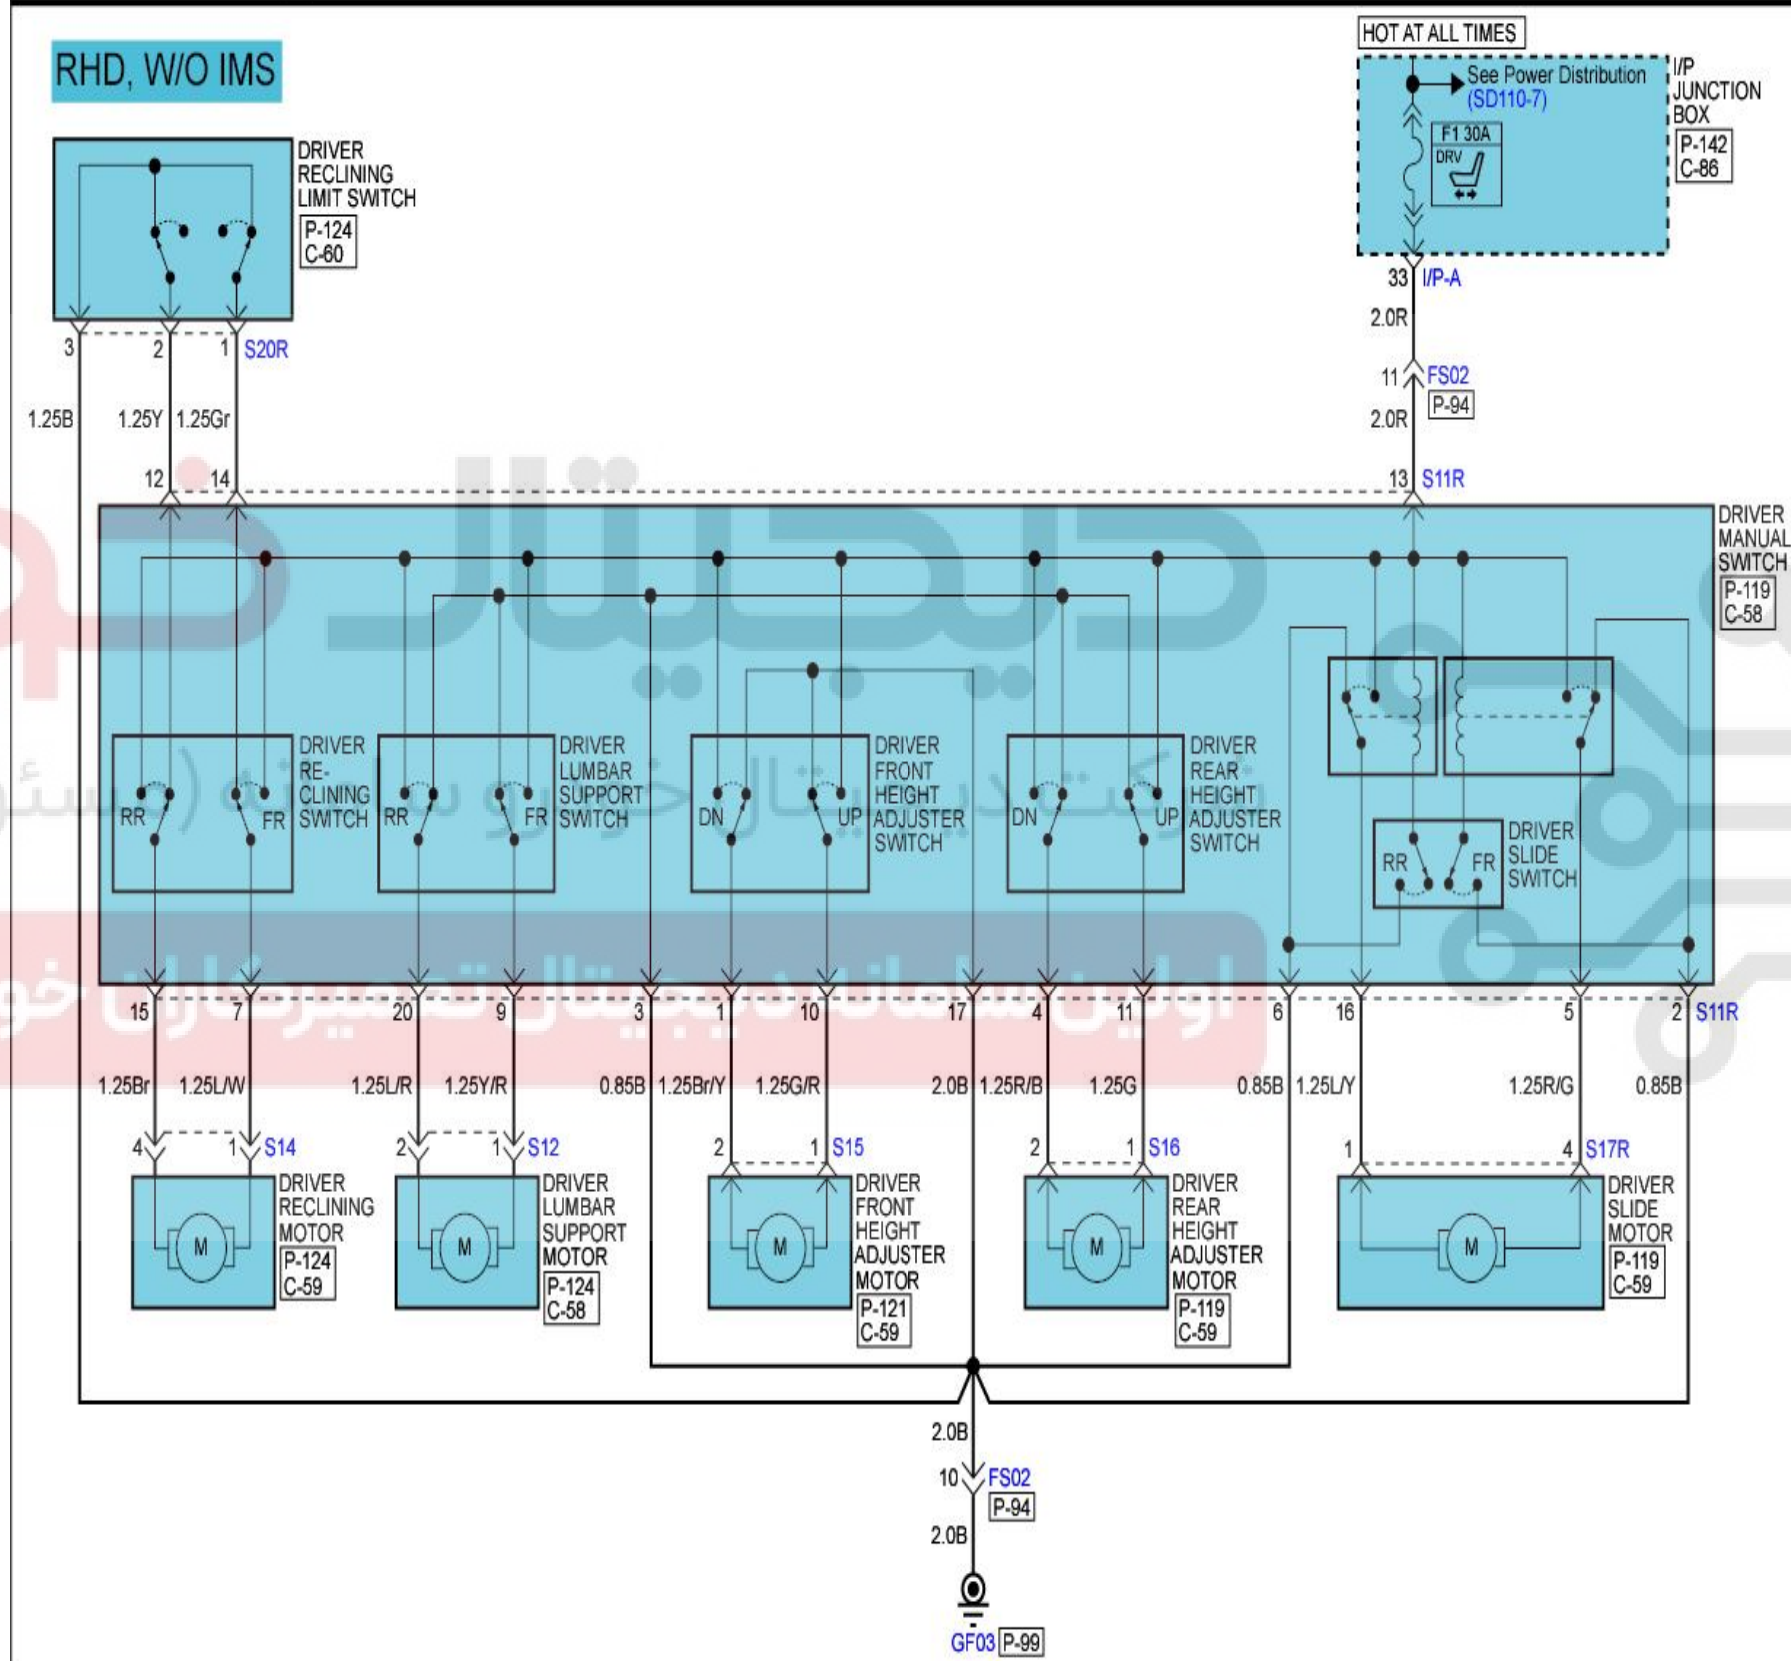




Connector	Component	Harness
-----------	-----------	---------


S11 Driver Manual Switch (LHD)

- 20 Female / N/A (AMP_070_20F)

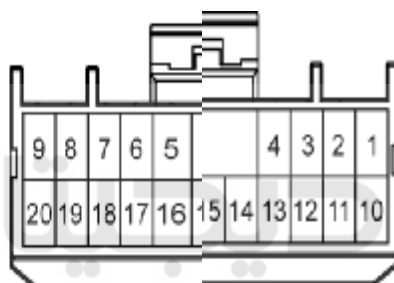

- | | | | |
|--------|---|----------|---|
| 1. L/R | Driver Lumbar Support Motor (RR) | 11. L/W | Driver Reclining Motor (FR) |
| 2. B | Ground (GF02) | 12. Gr | Driver Reclining Limit Switch (FR) |
| 3. R/G | Driver Slide Motor (FR) | 13. Br | Driver Reclining Motor (RR) |
| 4. L/Y | Driver Slide Motor (RR) | 14. — | — |
| 5. B | Ground (GF02) | 15. R | I/P Junction Box - F1 30A |
| 6. R/B | Driver Rear Height Adjuster Motor (DN) | 16. Y/R | Driver Lumbar Support Motor (FR) |
| 7. G | Driver Rear Height Adjuster Motor (UP) | 17. B | Ground (GF02) |
| 8. B | Ground (GF02) | 18. — | — |
| 9. G/R | Driver Front Height Adjuster Motor (UP) | 19. — | — |
| 10. Y | Driver Reclining Limit Switch (RR) | 20. Br/Y | Driver Front Height Adjuster Motor (DN) |

119. Driver Seat

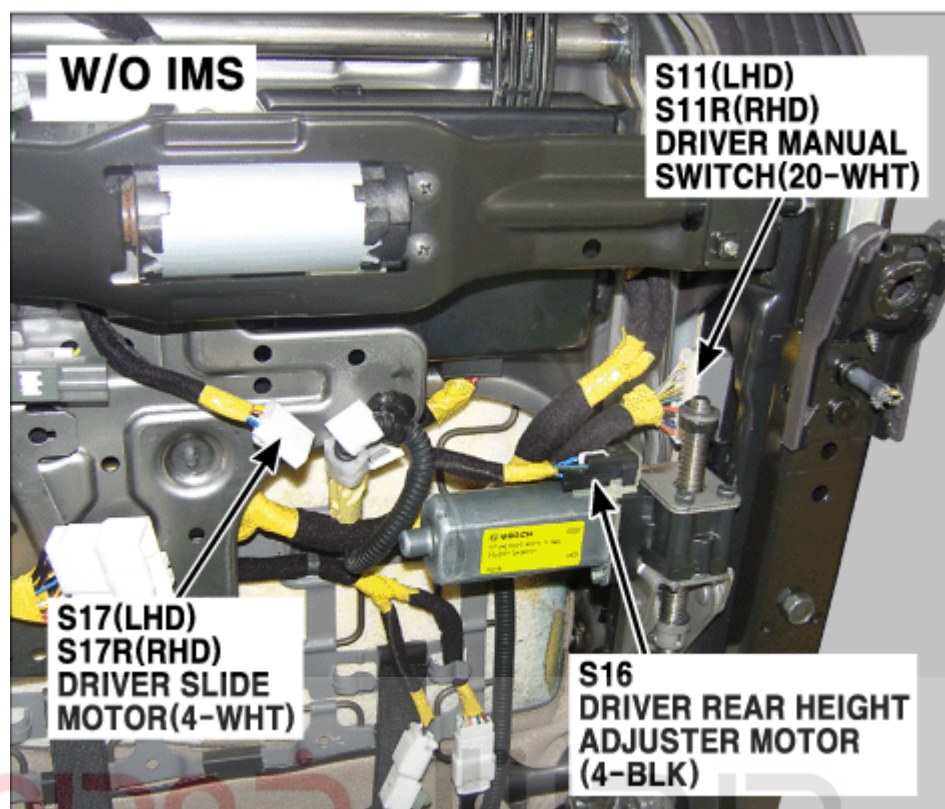

شرکت دیجیتال خودرو سامانه (مسئولیت محدود)

اولین سامانه دیجیتال تعمیرکاران خودرو در ایران