




12. POWER SEAT - DRIVER (W/ MEMORY)	7410
--	-------------


1) DRIVER POWER SEAT & SEAT MEMORY

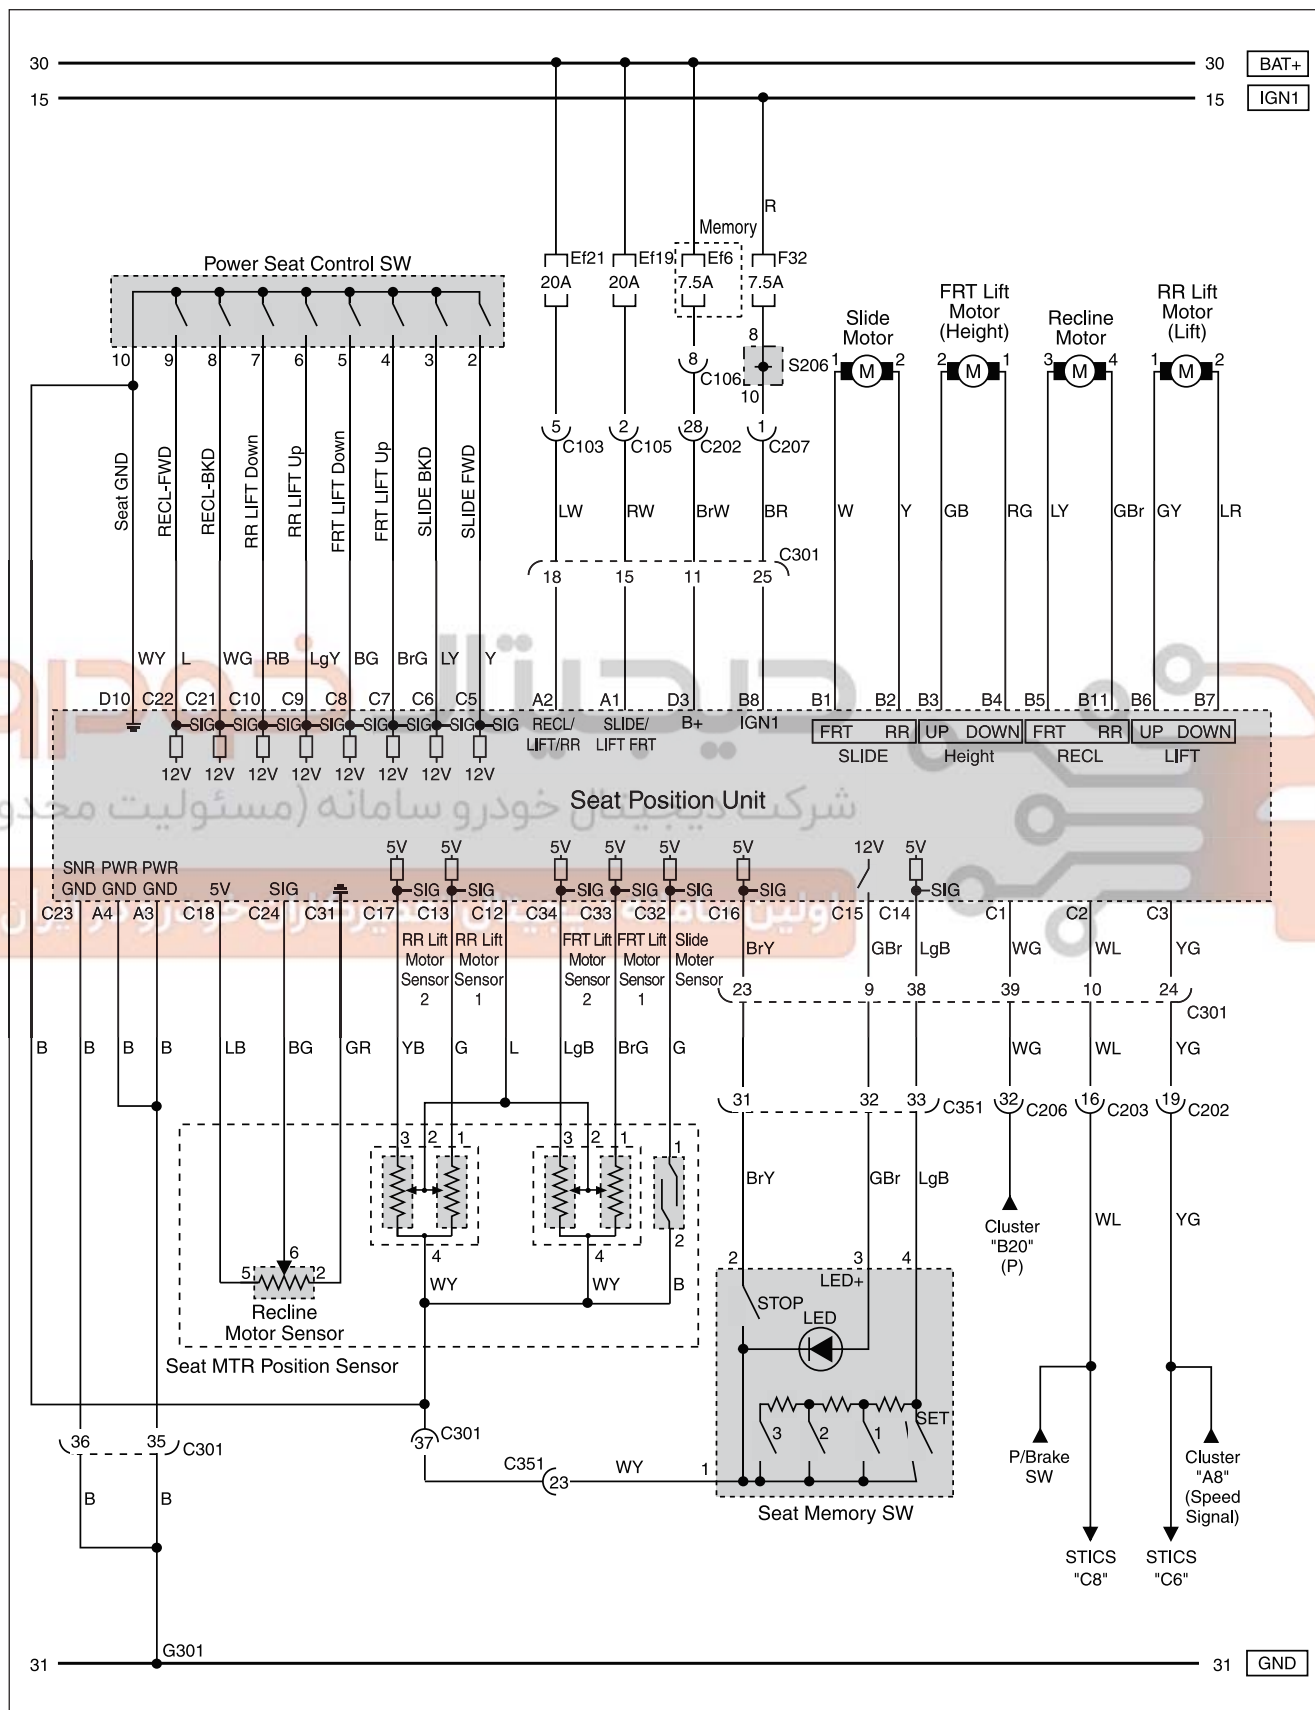


A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C301 (39Pin, Black)	W/H Floor - W/H Driver Seat	Under the Driver Seat	W/Memory
C351 (33Pin, White)	W/H Floor - W/H Driver DR	Under the LH "A" Pillar	
G301	W/H Floor	Under the Driver Seat	
S206 (14Pin, Black)	W/H Main	Upper the PTC Protector	IGN1, T/Signal

 
B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION



 C103
W/H Floor
(Eng Room Fuse & Relay Box)




C106
W/H Floor
(Eng Room Fuse & Relay Box)

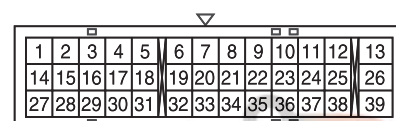


C202
W/H Floor





 
C207
W/H Floor




C301
W/H Driver Seat
(W/Memory)

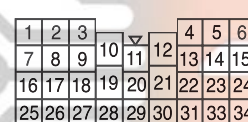

C351
W/H Driver DR

 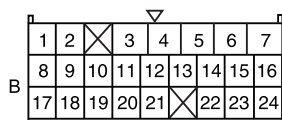 

STICS

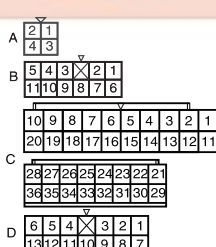

Seat Position Unit



FRT Lift
MTR Sensor



 
FRT Lift Motor




RR Lift Motor



RR Lift Motor
Sensor



Power Seat SW

 

Seat Memory
(Driver)



Seat Slid'g
Motor



Seat Slid'g
Motor SenSor