


3691-07 TCU(6-A/T)

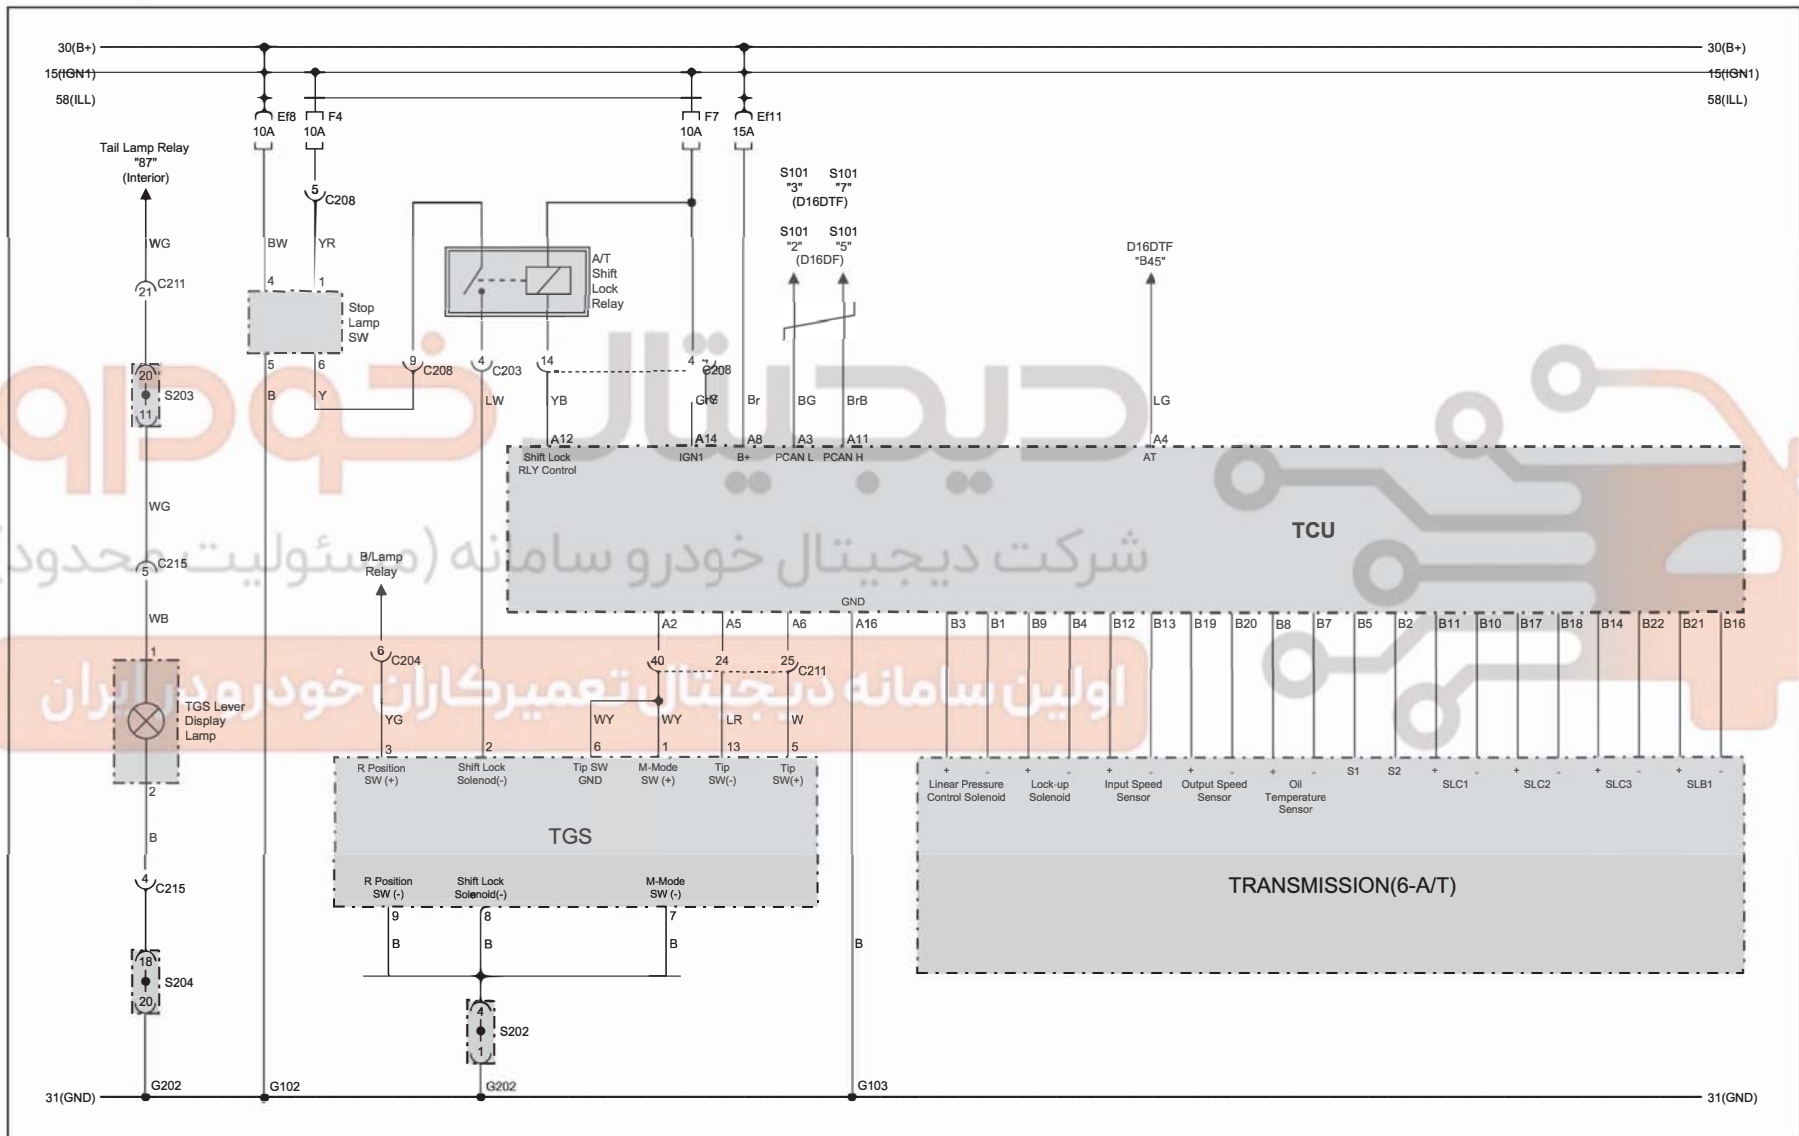

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |

## 1) CONNECTOR

| Connector Number<br>(Pin Number/Color) | Connecting Wiring Harness               | Connector Position                | Remark |
|----------------------------------------|-----------------------------------------|-----------------------------------|--------|
| C203 18 White                          | W/H IP (Main) - IP Fuse & Relay BOX     | Back Side of IP Fuse & Relay Box  |        |
| C204 18 White                          | W/H IP (Main) - IP Fuse & Relay BOX     | Back Side of IP Fuse & Relay Box  |        |
| C208 18 White                          | W/H Eng Room - IP Fuse & Relay BOX      | Front Side of IP Fuse & Relay Box |        |
| C211 41 White                          | W/H Eng Room - W/H IP (Main)            | Inside of Driver Cowl Side        |        |
| C215 6 White                           | W/H IP (Main) - W/H Center Consloe EXTN | In Front of Shift Lever           |        |


## 2) GROUND

| Connector Number | Connecting Wiring Harness | Connecting Position                 | Remark                                                              |
|------------------|---------------------------|-------------------------------------|---------------------------------------------------------------------|
| G102             | W/H Eng Room              | Above External Buzzer (back)        | LH headlamp/side repeater, stop lamp switch, wiper motor            |
| G103             | W/H Eng Room              | Above External Buzzer (front)       | Theft deterrent horn, front end module, A/T TCU, M/T neutral switch |
| G202             | W/H IP (Main)             | Rear LH of Cluster (IP Panel Frame) | S202, S204, IP Fuse                                                 |


## 3) SPLICE PACK

| Connector Number<br>(Pin Number) | Connecting Wiring Harness | Connector Position                     | Remark        |
|----------------------------------|---------------------------|----------------------------------------|---------------|
| S101 6                           | W/H Eng Room              | Under Engine Room Fuse & Relay Box     | PCAN(G16DF)   |
| S101 8                           | W/H Eng Room              | Under Engine Room Fuse & Relay Box     | PCAN(D16DTF)  |
| S202 20                          | W/H IP (Main)             | Rear RH of IP                          | Ground, PCAN  |
| S203 20                          | W/H IP (Main)             | Rear LH of Front Passenger Air Bag     | B+, room lamp |
| S204 20                          | W/H IP (Main)             | Rear Center of Front Passenger Air Bag | Ground        |

## 4) CONNECTOR IDENTIFICATION SYMBOL &amp; PIN NUMBER POSITION

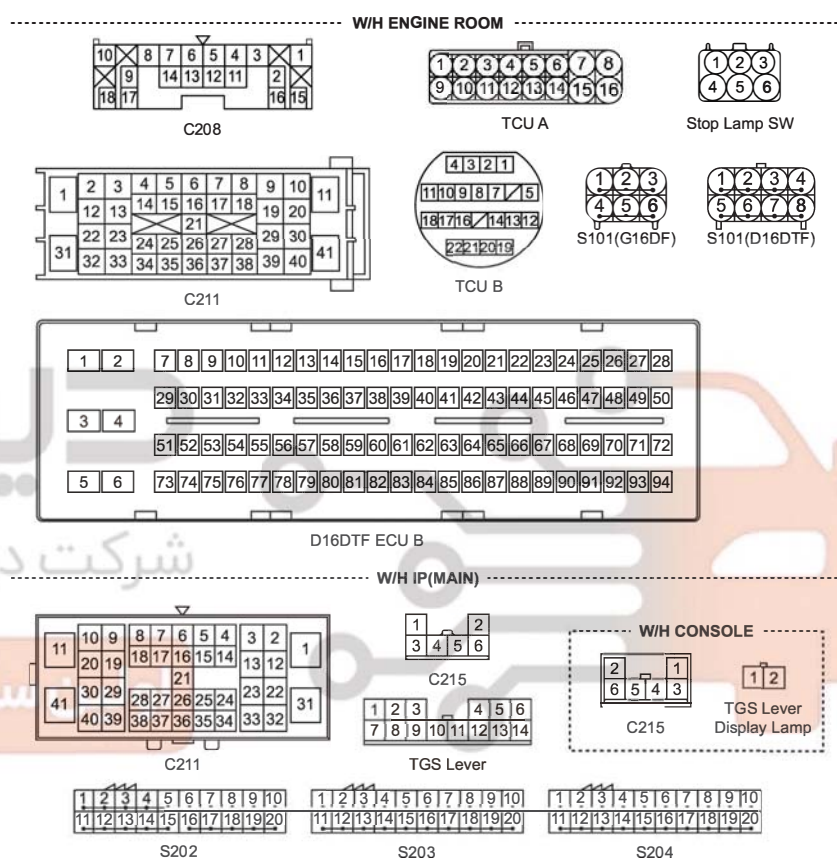

3280-17 AWD COUPLING UNIT

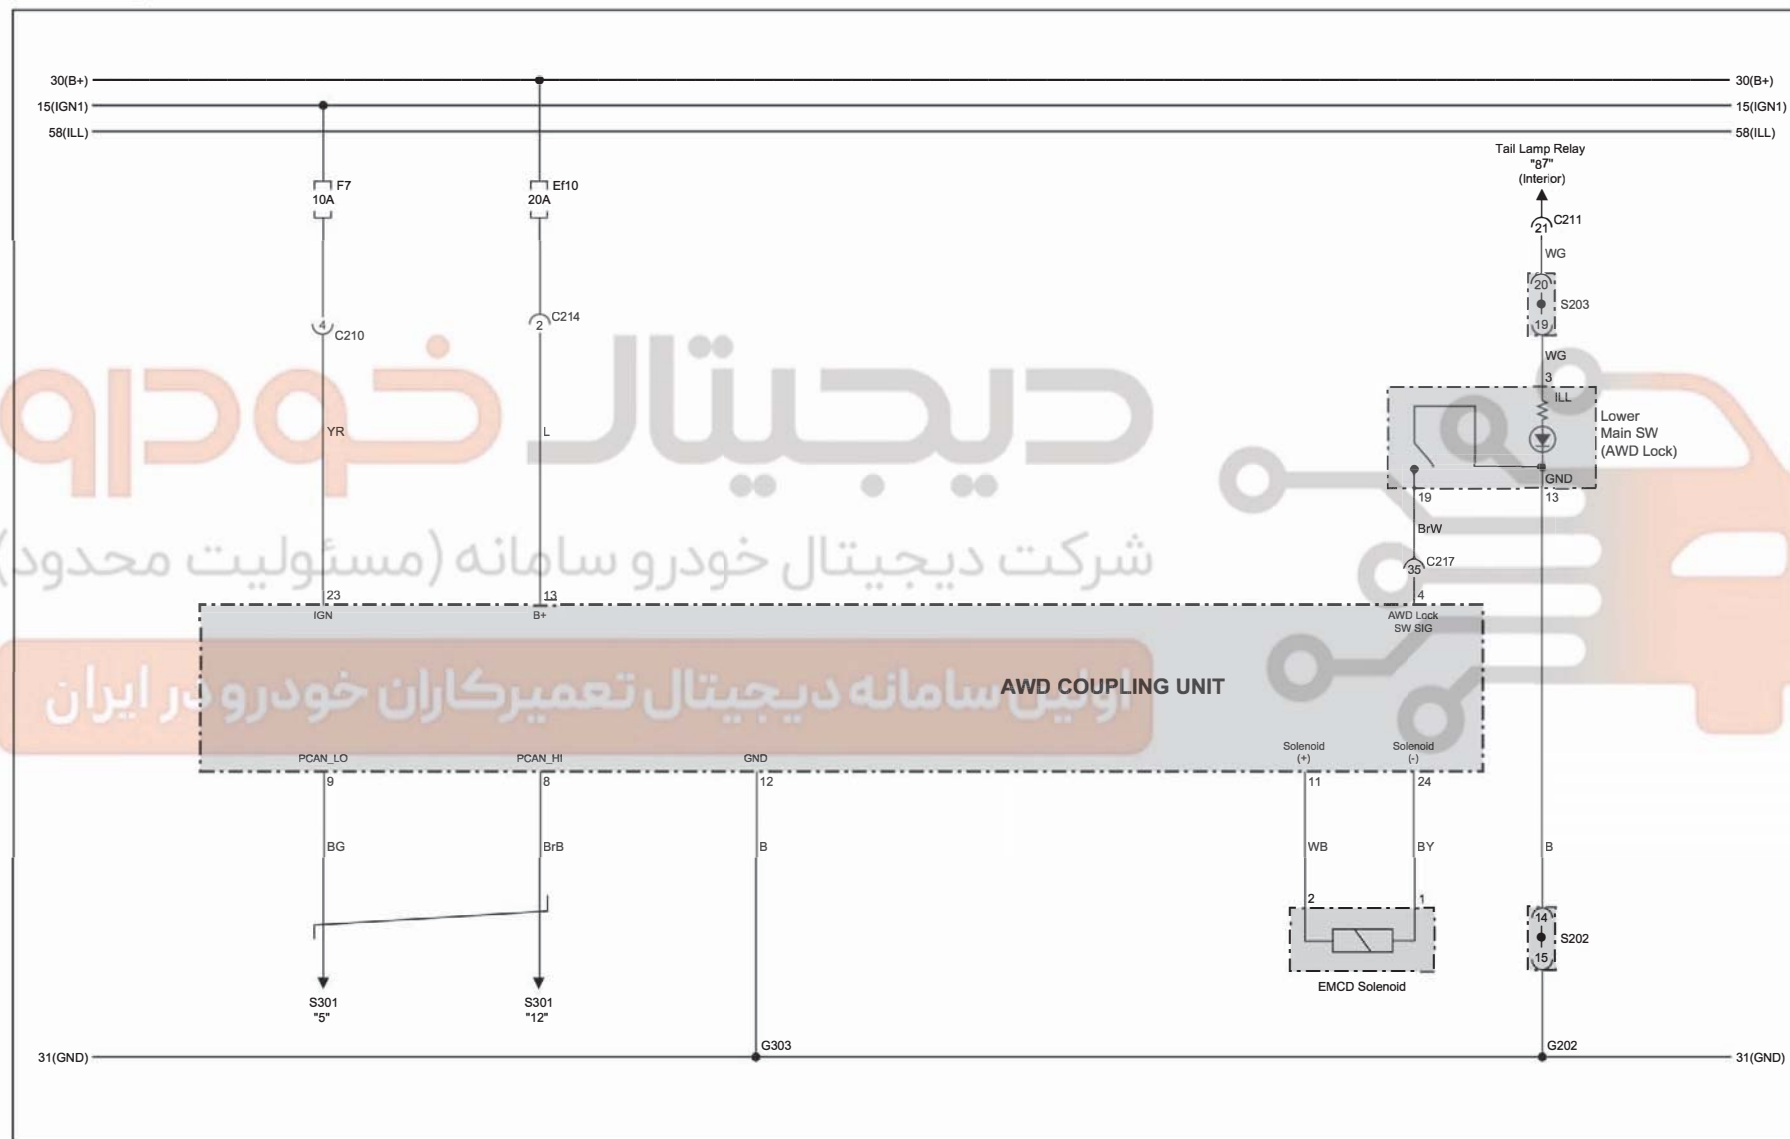

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |

## 1) CONNECTOR

| Connector Number<br>(Pin Number/Color) | Connecting Wiring Harness | Connector Position              | Remark                              |
|----------------------------------------|---------------------------|---------------------------------|-------------------------------------|
| C210                                   | 22 White                  | W/H Floor - IP Fuse & Relay BOX | Front Side of IP Fuse & Relay Box   |
| C211                                   | 41 White                  | W/H Eng Room - W/H IP (Main)    | Inside of Driver Cowl Side          |
| C214                                   | 25 White                  | W/H Eng Room - W/H Floor        | Inside of Driver Cowl Side          |
| C217                                   | 41 White                  | W/H IP (Main) - W/H Floor       | Inside of Front Passenger Cowl Side |


## 2) GROUND

| Connector Number | Connecting Wiring Harness | Connecting Position                 | Remark                                                                   |
|------------------|---------------------------|-------------------------------------|--------------------------------------------------------------------------|
| G202             | W/H IP (Main)             | Rear LH of Cluster (IP Panel Frame) | S202, S204, IP Fuse                                                      |
| G303             | W/H Floor                 | Inside of Passenger Door Scuff      | Rear RH door, front passenger door/<br>door switch, front passenger seat |

## 3) SPLICE PACK

| Connector Number<br>(Pin Number) | Connecting Wiring Harness | Connector Position | Remark                             |
|----------------------------------|---------------------------|--------------------|------------------------------------|
| S202                             | 20                        | W/H IP (Main)      | Rear RH of IP                      |
| S203                             | 20                        | W/H IP (Main)      | Rear LH of Front Passenger Air Bag |
| S301                             | 14                        | W/H Floor          | Under LH of Driver Seat            |

## 4) CONNECTOR IDENTIFICATION SYMBOL &amp; PIN NUMBER POSITION

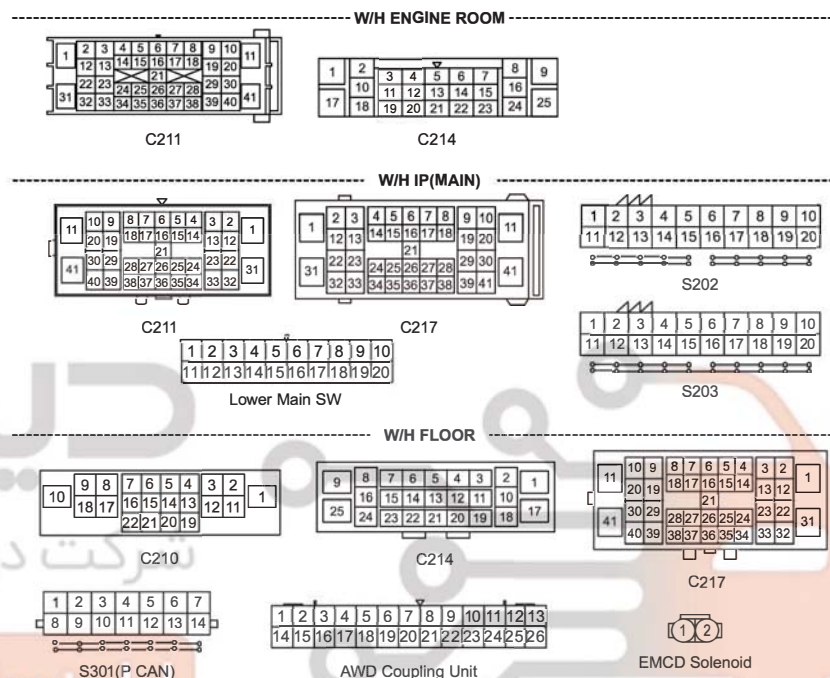

|  |  |
|--|--|
|  |  |
|  |  |
|  |  |