




5. DIAGNOSIS CIRCUIT

8210

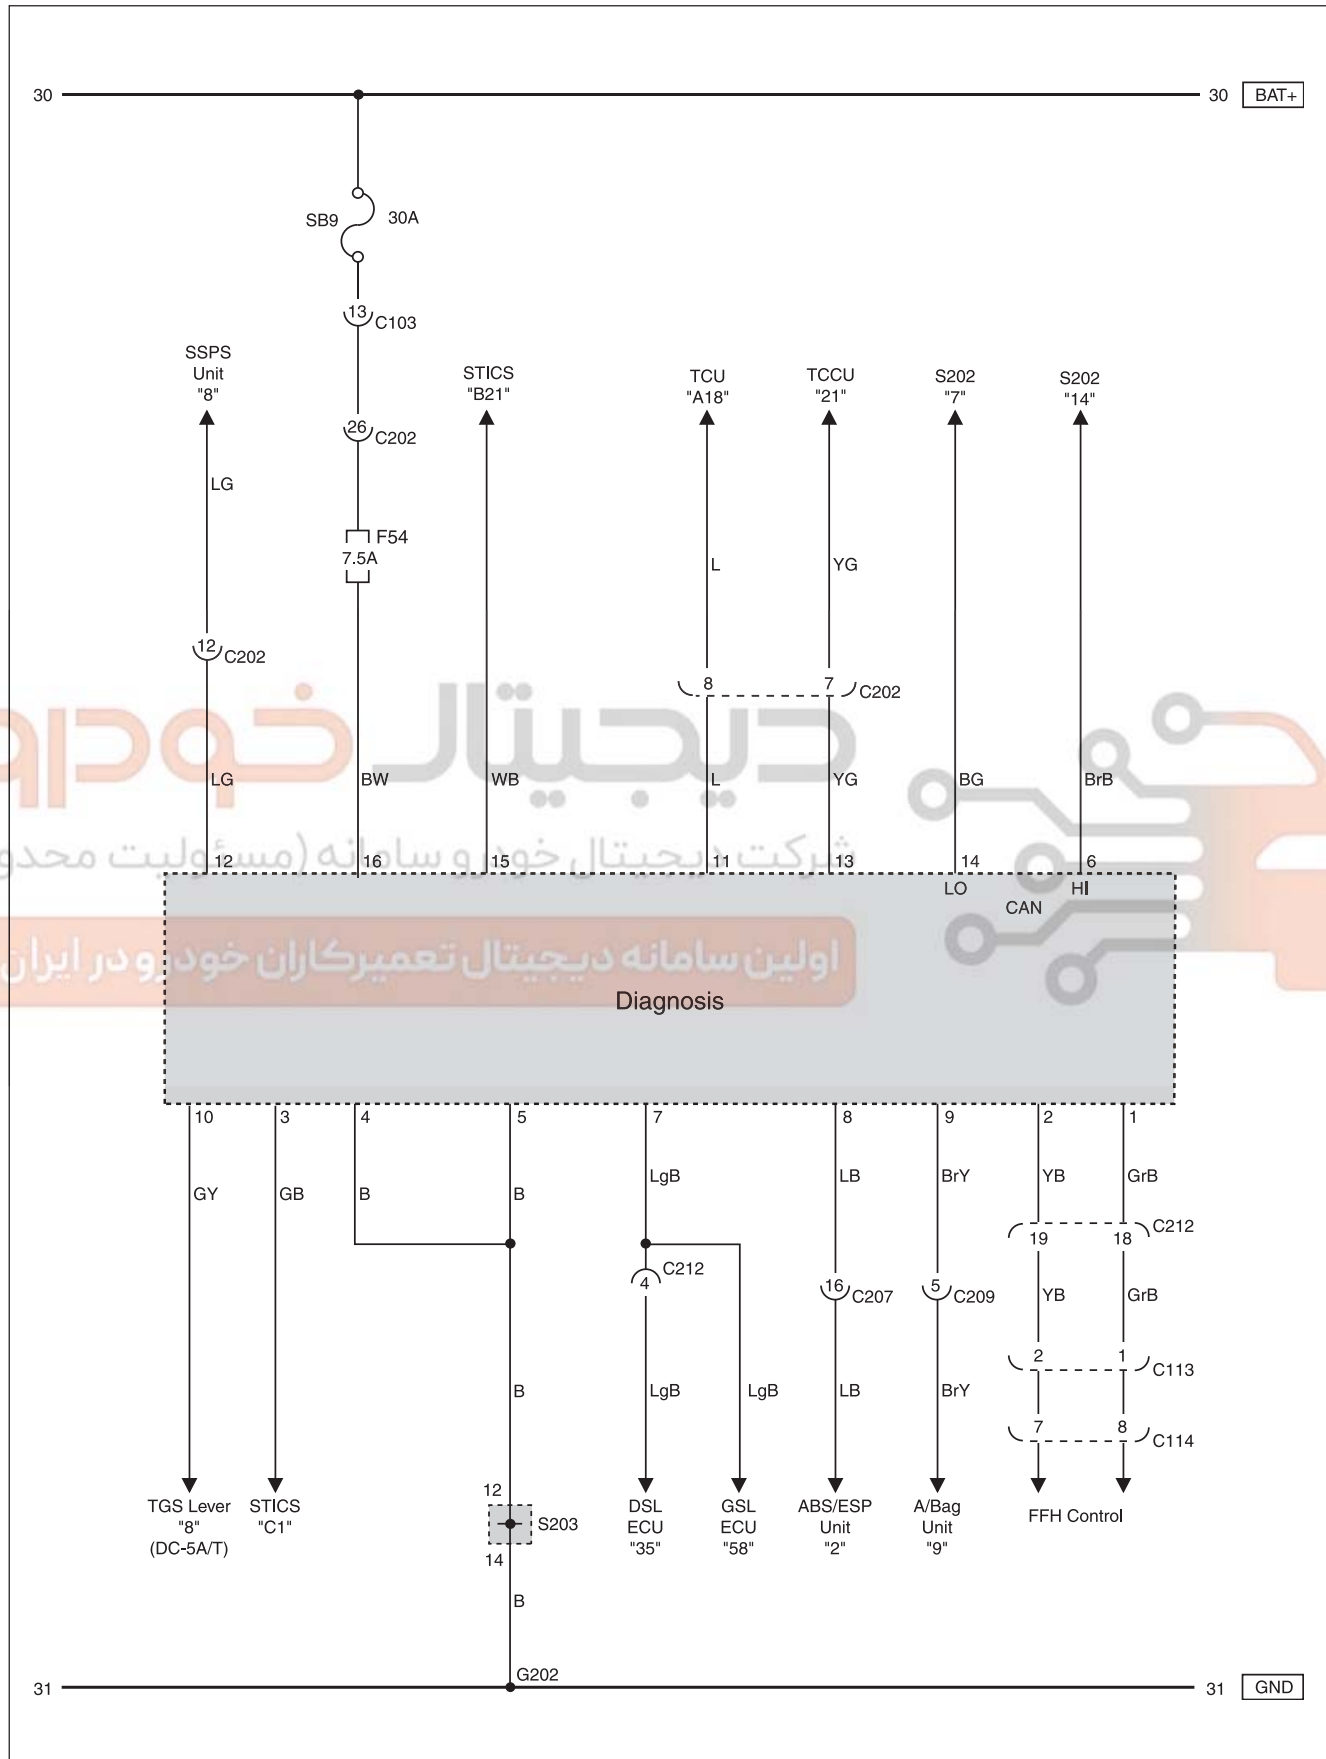

A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C114 (10Pin, Black)	W/H Eng - W/H FFH	Right Eng Room Dash PNL	FFH
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C209 (6Pin, White)	W/H Main - W/H A/Bag	Upper the Driver Legroom	A/Bag
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G202	W/H Main	Under the Driver "A" Pillar	
S202 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	CAN
S203 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

