


8520-01 POWER WINDOW

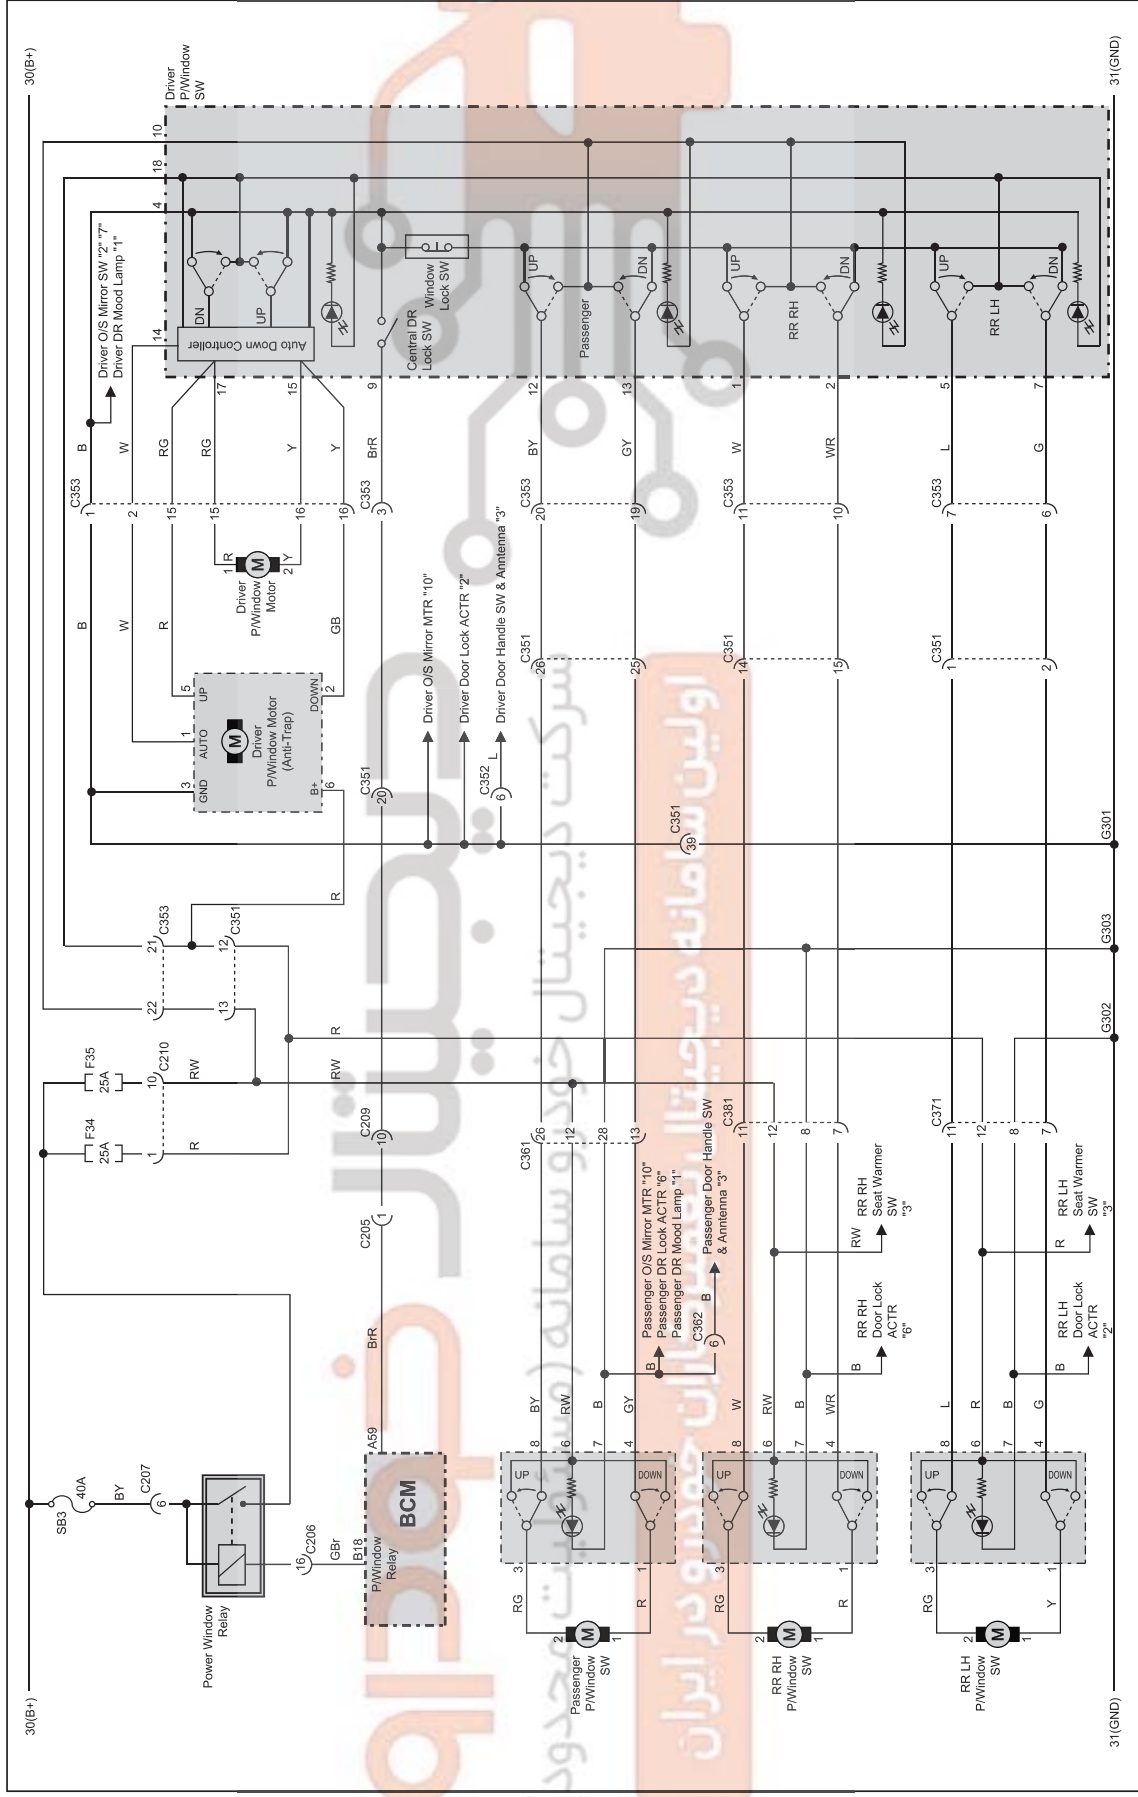

Modification basis	
Application basis	
Affected VIN	

1) CONNECTOR


Connector Number (Pin Number/Color)	Connecting Wiring Harness	Connector Position	Remark
C206	White	Back Side of IP Fuse & Relay Box	
C207	White	Front Side of IP Fuse & Relay Box	
C210	White	Front Side of IP Fuse & Relay Box	
C351	Black	Under Driver Door Hinge	
C353	White	Inside of Driver Door	
C361	Black	Under Front Passenger Door Hinge	
C371	White	Inside of B-Pillar	
C381	White	Inside of B-Pillar	

2) GROUND

Connector Number	Connecting Wiring Harness	Connecting Position	Remark
G301	W/H Floor	Inside of Driver Door Scuff	Driver door/seat, IP fuse box
G302	W/H Floor	Under Driver Seat	Rear LH door, driver door switch, driver seat/seat belt, fuel tank
G303	W/H Floor	Inside of Passenger Door Scuff	Rear RH door, front passenger door/door switch, front passenger seat

3) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

W/H ENGINE ROOM



C207

W/H IP(MAIN)



C206



BCM A



BCM B


W/H FLOOR




C210



C371



C351



C381

W/H DRIVER DOOR




C353



Power Window Motor
(Anti Trap)

W/H PASSENGER DOOR



C361



C353




Power Window Motor
(W/O Anti Trap)

W/H DRIVER DOOR EXT




C353




Power Window SW(Main)

W/H RR LH DOOR




C371



Power Window SW

W/H RR RH DOOR



C381



Power Window SW

Modification basis	
Application basis	
Affected VIN	