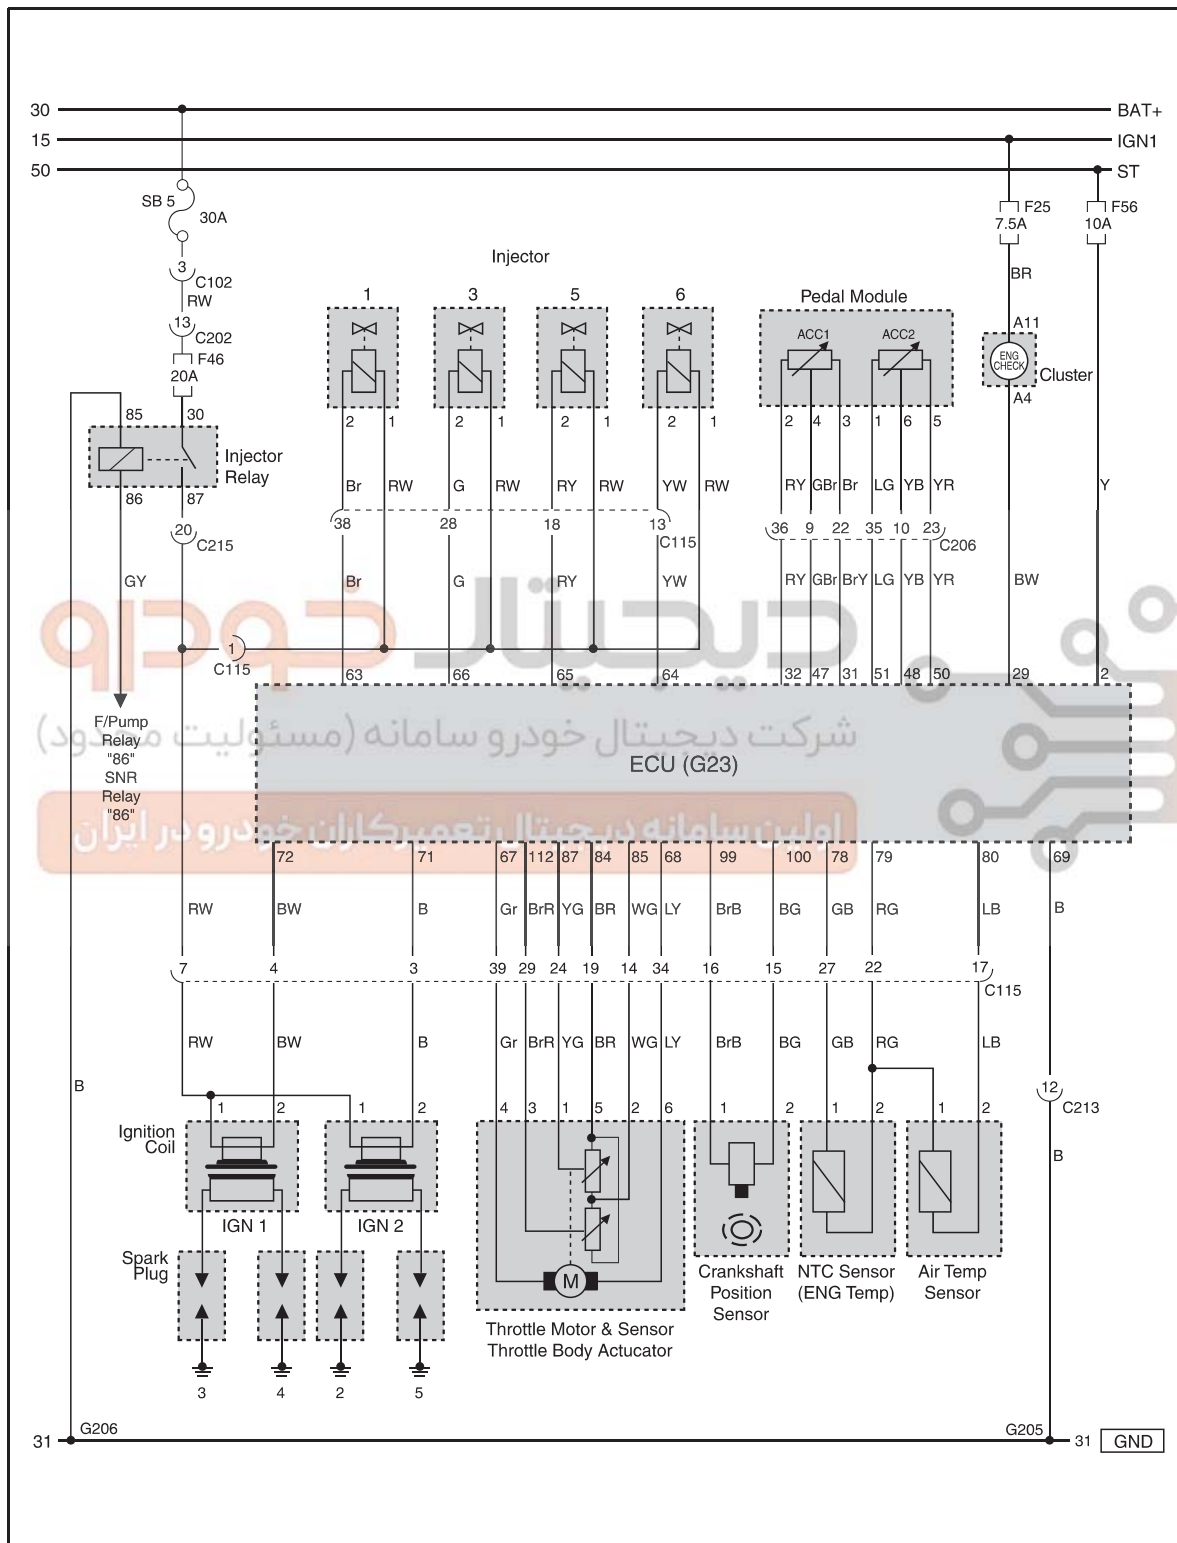


S.G.N.

1490-00

**ECU (ENGINE CONTROL UNIT - GSL G23)****1) IGN COIL, INJECTOR, PEDAL MODULE, THROTTLE SENSOR**


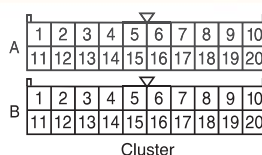
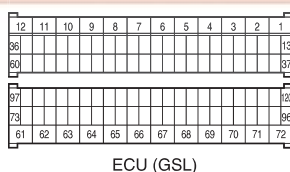
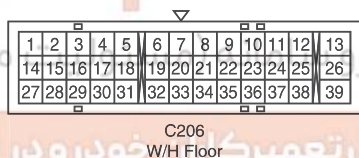
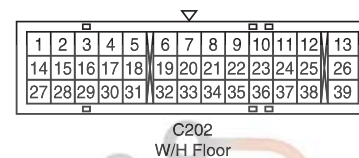
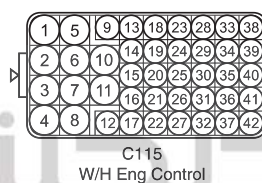
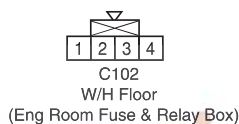
CIRCUIT

ACTYON 2010.01

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |

**(1) CONNECTOR INFORMATION**

| Connector Number<br>(Pin Number, Color) | Connecting Wiring<br>Harness          | Connector Position                | Remark   |
|-----------------------------------------|---------------------------------------|-----------------------------------|----------|
| C102 (4Pin, White)                      | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box         |          |
| C115 (42Pin, Black)                     | W/H Floor - W/H Eng Control           | Right Eng Room Dash PNL           |          |
| C202 (39Pin, Black)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder         |          |
| C206 (39Pin, Black)                     | W/H Main - W/H Floor                  | Upper the Driver Legroom          | C/Holder |
| C213 (20Pin, Red)                       | W/H Main - W/H Floor                  | Passenger Cowl Side C/Holder      |          |
| C215 (20Pin, Brown)                     | W/H Main - W/H Floor                  | Passenger Cowl Side C/Holder      |          |
| G205                                    | W/H Floor                             | RH Eng ECU                        | ECU      |
| G206                                    | W/H Main                              | Inner the Passenger Cowl Side PNL |          |

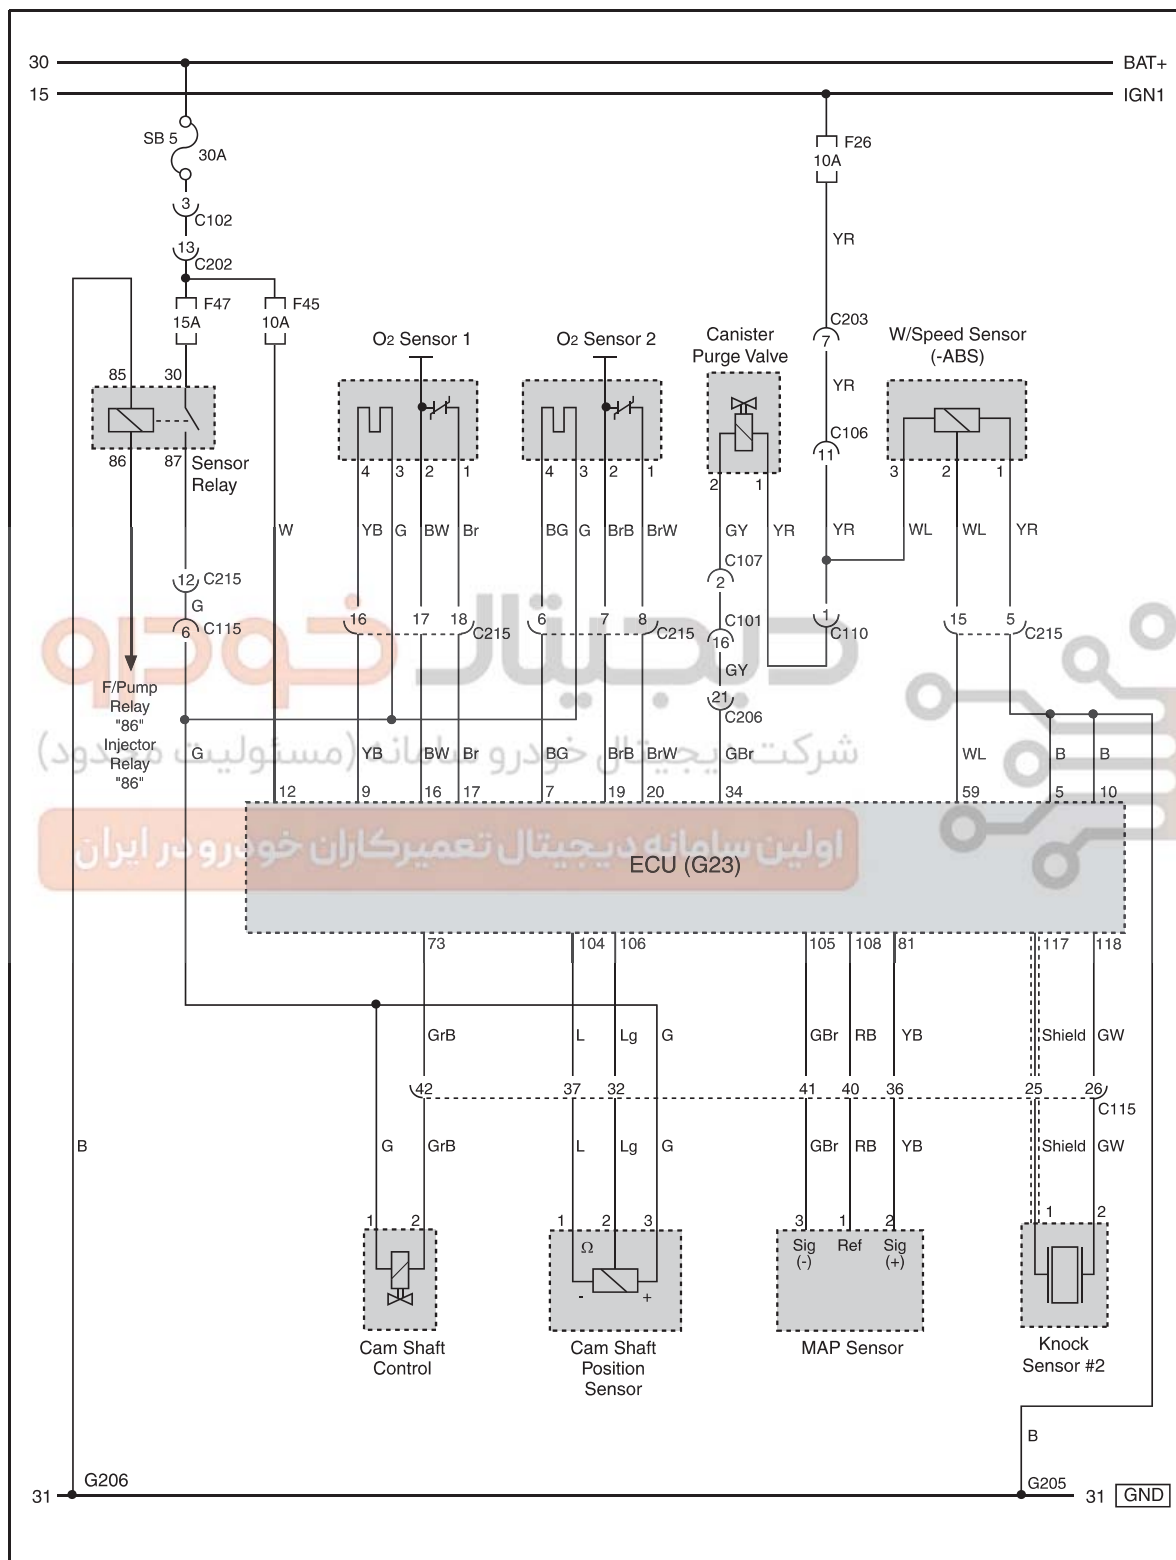
**(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION**

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |

CIRCUIT

ACTYON 2010.01

## 2) O<sub>2</sub> SENSOR, CPS, KNOCK SENSOR, MAP SENSOR, CANISTER PURGE VALVE





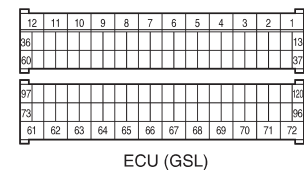
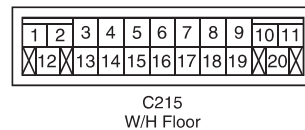
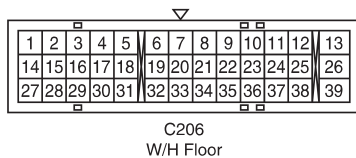
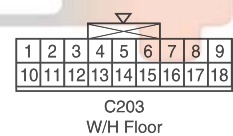
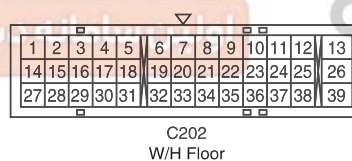
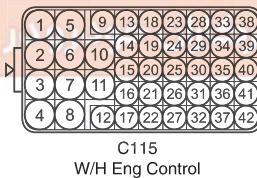
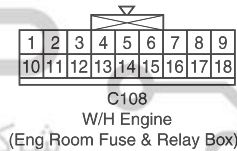
CIRCUIT

ACTYON 2010.01

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |

**(1) CONNECTOR INFORMATION**

| Connector Number<br>(Pin Number, Color) | Connecting Wiring Harness             | Connector Position                | Remark   |
|-----------------------------------------|---------------------------------------|-----------------------------------|----------|
| C102 (4Pin, White)                      | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box         |          |
| C106 (20Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box         |          |
| C107 (12Pin, White)                     | W/H Eng - Eng Room Fuse & Relay Box   | Eng Room Fuse & Relay Box         |          |
| C110 (10Pin, White)                     | W/H Eng - Eng Room Fuse & Relay Box   | Eng Room Fuse & Relay Box         |          |
| C115 (42Pin, Black)                     | W/H Floor - W/H Eng Control           | Right Eng Room Dash PNL           |          |
| C202 (39Pin, Black)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder         |          |
| C203 (18Pin, White)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder         |          |
| C206 (39Pin, Black)                     | W/H Main - W/H Floor                  | Upper the Driver Legroom          | C/Holder |
| C215 (20Pin, Brown)                     | W/H Main - W/H Floor                  | Passenger Cowl Side C/Holder      |          |
| G205                                    | W/H Floor                             | RH Eng ECU                        | ECU      |
| G206                                    | W/H Main                              | Inner the Passenger Cowl Side PNL |          |

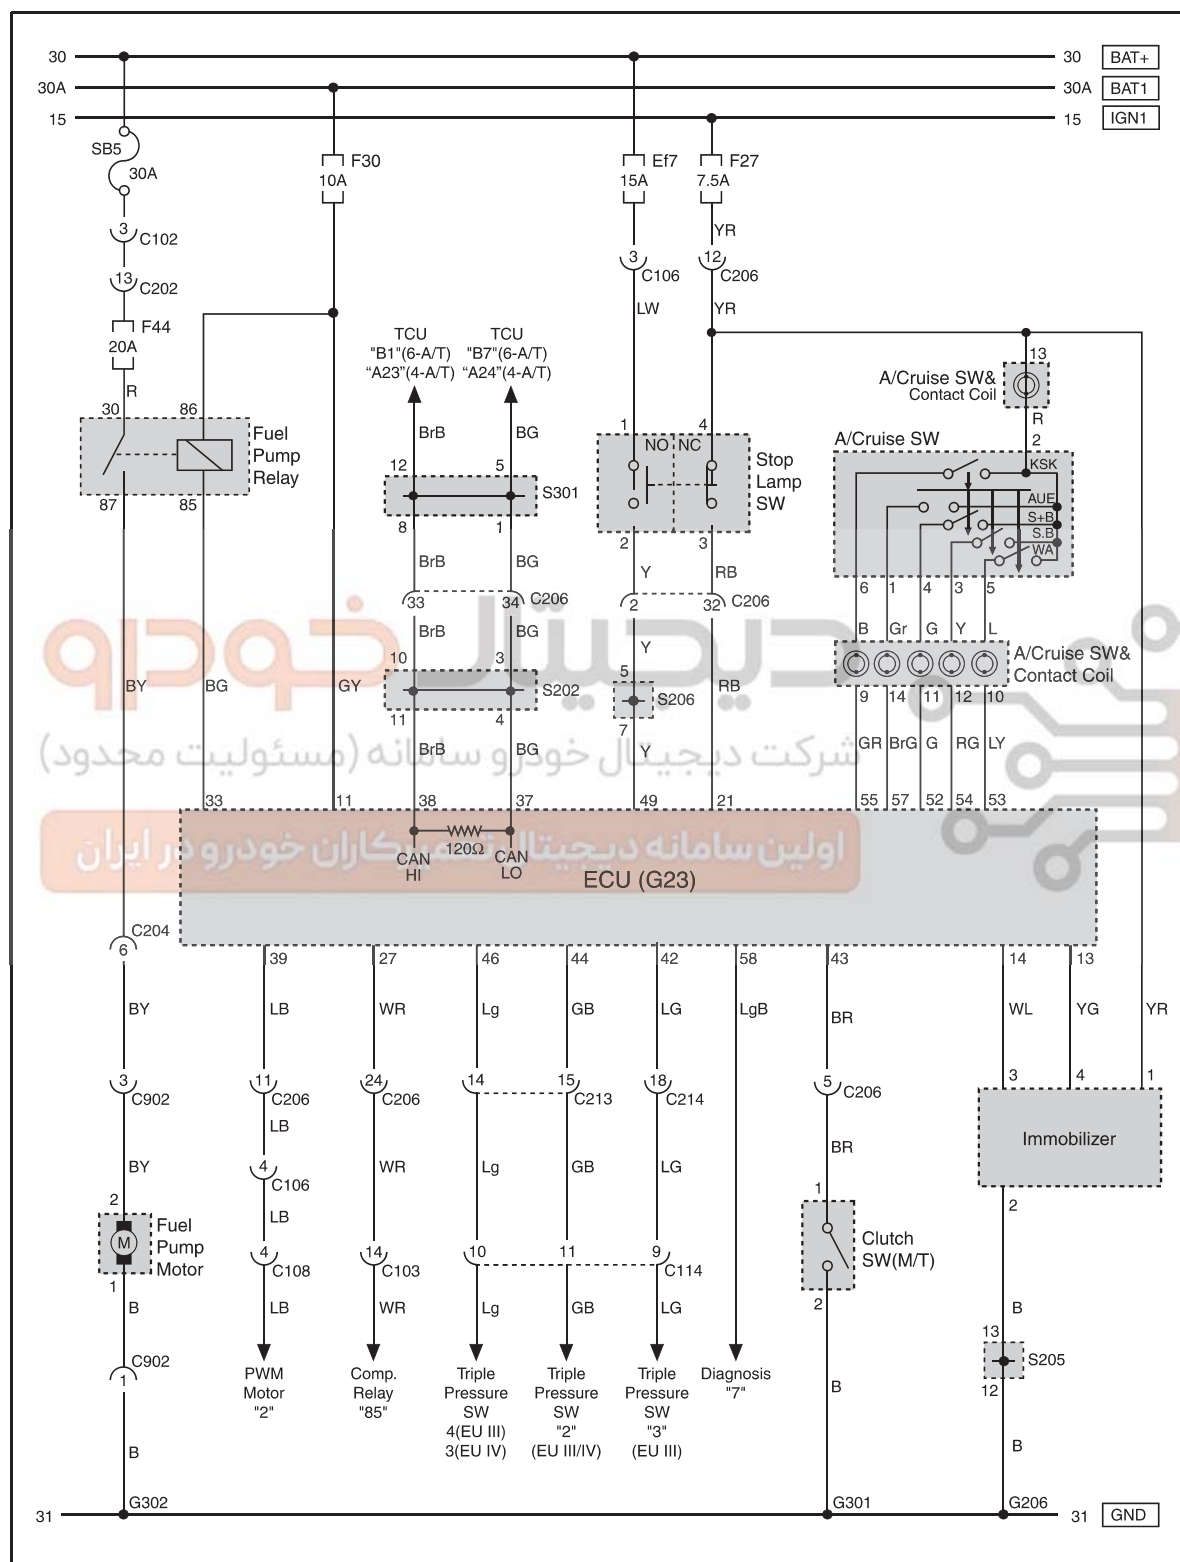
**(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION**

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |

CIRCUIT

ACTYON 2010.01

## 3) STOP LAMP, CRUISE CONTROL SW, FUEL PUMP, IMMOBILIZER



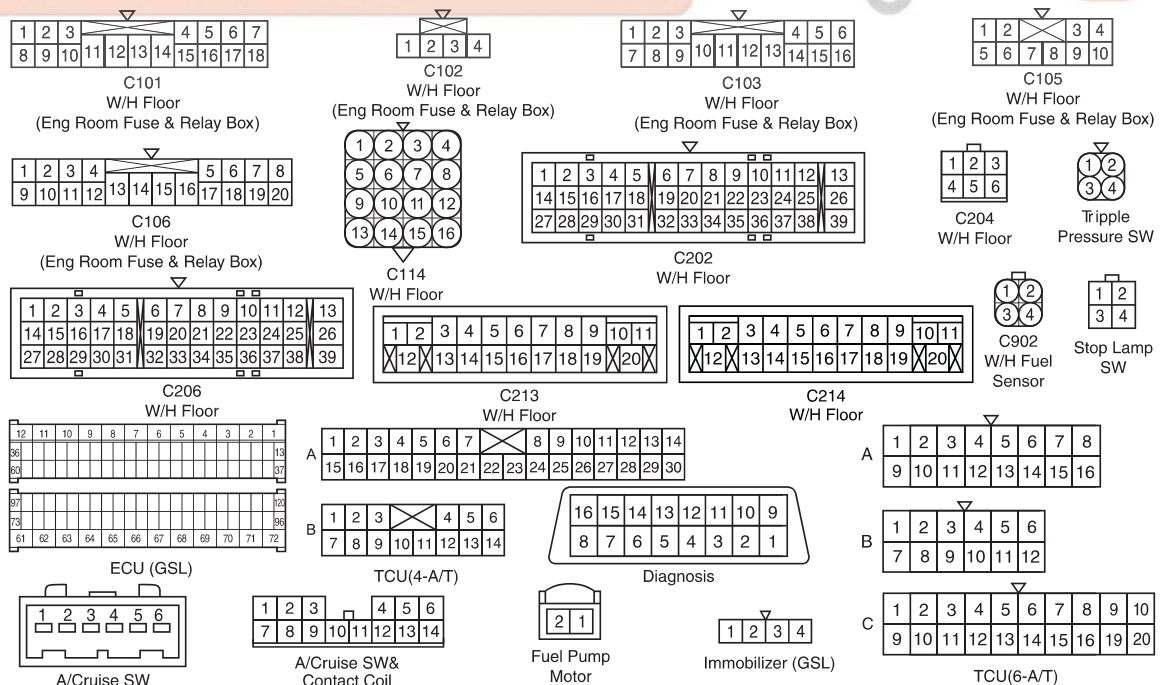
CIRCUIT

ACTYON 2010.01

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |

**(1) CONNECTOR INFORMATION**

| Connector Number<br>(Pin Number, Color) | Connecting Wiring<br>Harness          | Connector Position                 | Remark        |
|-----------------------------------------|---------------------------------------|------------------------------------|---------------|
| C102 (4Pin, White)                      | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box          |               |
| C103 (16Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box          |               |
| C105 (10Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box          |               |
| C106 (20Pin, White)                     | W/H Floor - Eng Room Fuse & Relay Box | Eng Room Fuse & Relay Box          |               |
| C114 (16Pin, Black)                     | W/H Eng - W/H Floor                   | Inside RH Fender PNL               |               |
| C202 (39Pin, Black)                     | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder          |               |
| C204 (6Pin, Colorless)                  | W/H Main - W/H Floor                  | Driver Cowl Side C/Holder          |               |
| C206 (39Pin, Black)                     | W/H Main - W/H Floor                  | Upper the Driver Legroom           | C/Holder      |
| C213 (20Pin, Red)                       | W/H Main - W/H Floor                  | Passenger Cowl Side C/Holder       |               |
| C214 (20Pin, Yellow)                    | W/H Main - W/H Floor                  | Passenger Cowl Side C/Holder       |               |
| C902 (4Pin, Black)                      | W/H Floor - W/H Fuel Sender           | Upper the T/M                      |               |
| G206                                    | W/H Main                              | Inner the Passenger Cowl Side PNL  |               |
| G301                                    | W/H Floor                             | Under the Driver Seat              |               |
| G302                                    | W/H Floor                             | Under the Driver Seat              |               |
| S202 (14Pin, Black)                     | W/H Main                              | RH Protector of the Driver Legroom | CAN           |
| S205 (14Pin, Black)                     | W/H Main                              | Upper the PTC Protector            | GND           |
| S206 (8Pin, Black)                      | W/H Main                              | Upper the PTC Protector            | IGN1,T/Signal |
| S301 (14Pin, Black)                     | W/H Floor                             | Beside Driver Seat W/H Protector   | CAN           |

**(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION**

|                    |  |
|--------------------|--|
| Modification basis |  |
| Application basis  |  |
| Affected VIN       |  |

CIRCUIT

ACTYON 2010.01