

FUSE & RELAY INFORMATION E13AB0CF



FUSE & RELAY INFORMATION (1)

SD100-1

I/P JUNCTION BOX

< REAR >

< FRONT >

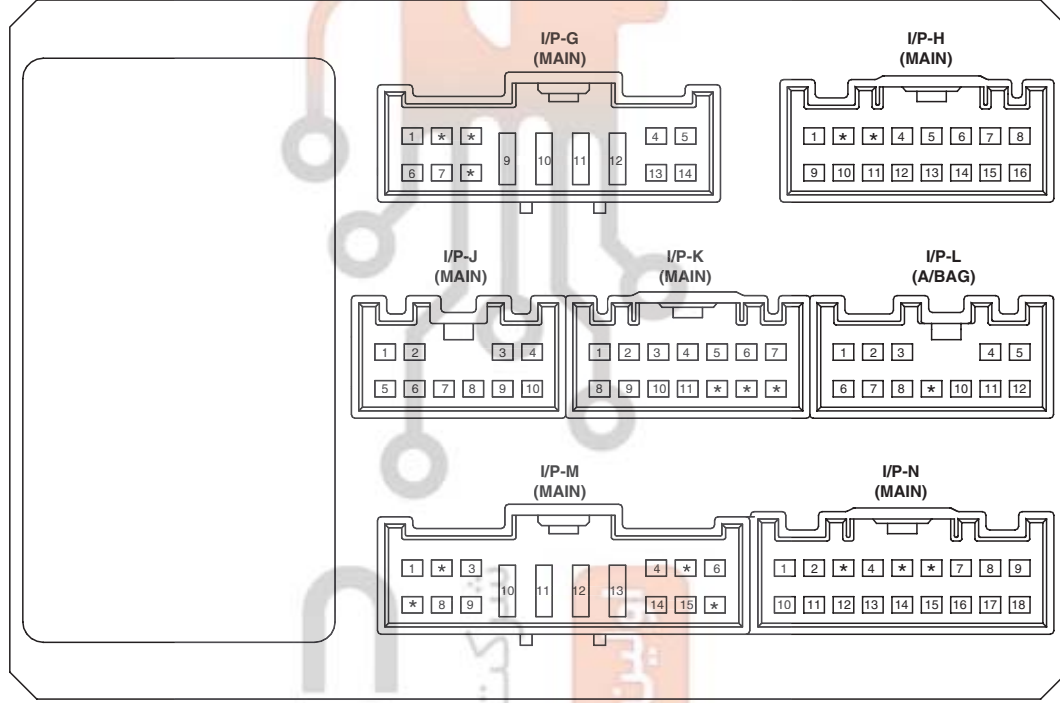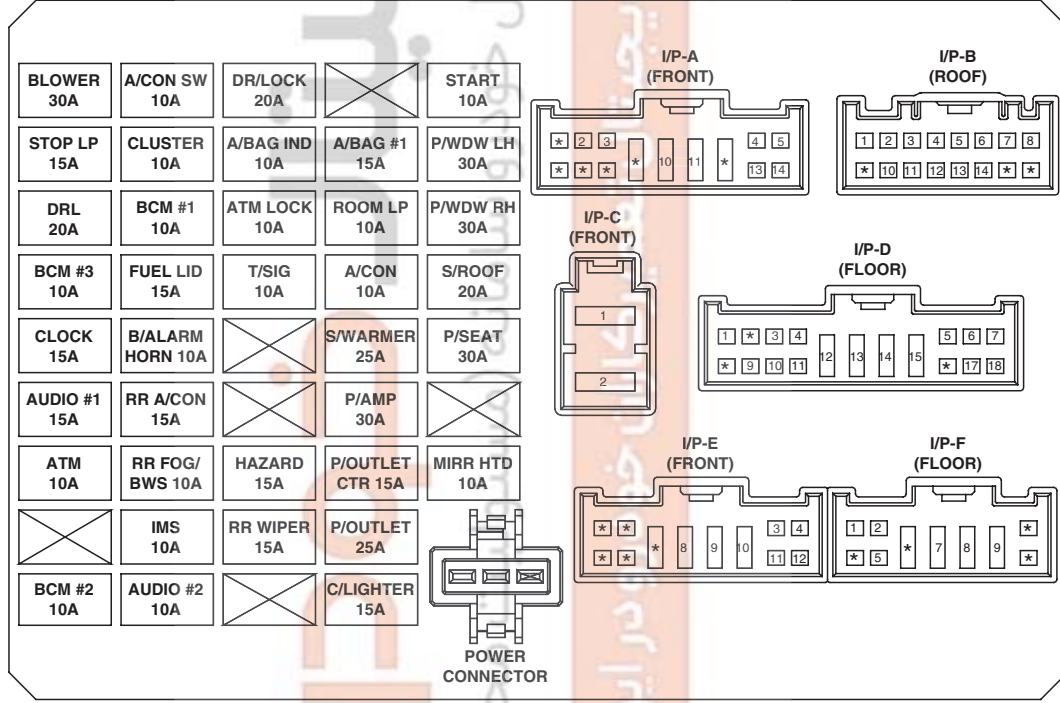

※USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATION

FUSE & RELAY INFORMATION (2)

SD100-2

CIRCUIT

FUSE	(A)	Circuit Protected	FUSE	(A)	Circuit Protected
C/LIGHTER	15A	CIGARETTE LIGHTER	P/AMP	30A	DELPHI AMP, MOBIS AMP
P/OUTLET	25A	FRONT POWER OUTLET, REAR POWER OUTLET	S/WARMER	25A	SEAT WARMER CONTROL MODULE
P/OUTLET CTR	15A	CENTER POWER OUTLET	P/SEAT	30A	POWER SEAT SWITCH
AUDIO #2	10A	DRIVER POWER OUTSIDE MIRROR SWITCH, AUDIO, DIGITAL CLOCK, ATM KEY LOCK CONTROL MODULE	RR A/CON	15A	ICM RELAY BOX
RR WIPER	15A	MULTIFUNCTION SWITCH, REAR WIPER CONTROL MODULE, REAR WIPER MOTOR	RR FOG/BWS	10A	ICM RELAY BOX
IMS	10A	RAIN SENSOR	S/ROOF	20A	SUNROOF MOTOR
BCM #2	10A	RHEOSTAT, BCM, INSTRUMENT CLUSTER	B/ALARM HORN	10A	BURGLAR ALARM HORN RELAY
A/CON	10A	A/C CONTROL MODULE, INCAR & HUMIDITY SENSOR, HIGH BLOWER RELAY, REAR A/CON SWITCH, ICM RELAY BOX, AQS SENSOR, FUSIBLE LINK BOX (DSL), SUNROOF MOTOR, BLOWER RELAY, ELECTRO CHROMIC MIRROR	MIRR HTD	10A	REAR DEFOGGER SWITCH, POWER OUTSIDE MIRROR MOTOR
BLOWER	30A	BLOWER RELAY, BLOWER MOTOR, A/C CONTROL MODULE	DR/LOCK	20A	DOOR LOCK (UN) RELAY, ICM RELAY BOX
A/CON SW	10A	A/C CONTROL MODULE	STOP LP	15A	STOP LAMP SWITCH
A/BAG #1	15A	SRS CONTROL MODULE	FUEL LID	15A	FUEL LID SWITCH
A/BAG IND	10A	PAB CUT OFF SWITCH, INSTRUMENT CLUSTER	ATM	10A	KEY SOLENOID, SEMI ACTIVE SOLENOID (GSL), SPORTS MODE SWITCH
T/SIG	10A	HAZARD SWITCH	ROOM LP	10A	INSTRUMENT CLUSTER, LUGGAGE LAMP, MAP LAMP, REAR PERSONAL LAMP, ROOM LAMP, DOOR LAMP, CARGO LAMP, VANITY LAMP SWITCH
ATM LOCK	10A	MULTIFUNCTION SWITCH, STEERING ANGLE SENSOR, ESP SWITCH, ATM KEY LOCK CONTROL MODULE, SEAT WARMER MODULE	BCM #3	10A	IGNITION KEY ILL. & DOOR WARNING SWITCH, BCM, SECURITY INDICATOR
BCM #1	10A	OIL LEVEL SENSOR MODULE, BCM	CLOCK	15A	A/C CONTROL MODULE, DATA LINK CONNECTOR, DIGITAL CLOCK
CLUSTER	10A	INSTRUMENT CLUSTER, PRE-EXCITATION RESISTOR, BCM, SEMI ACTIVE ENGINE MOUNTING CONTROL MODULE (GSL), GENERATOR	AUDIO #1	15A	DELPHI AUDIO, MOBIS AUDIO
START	10A	BURGLAR ALARM RELAY	HAZARD	15A	HAZARD SWITCH, HAZARD RELAY
DRL	20A	ICM RELAY BOX	P/WDW LH	30A	POWER WINDOW MAIN SWITCH, REAR POWER WINDOW SWITCH LH
			P/WDW RH	30A	POWER WINDOW MAIN SWITCH, REAR POWER WINDOW SWITCH RH

※USE THE DESIGNATED FUSE ONLY