


8790-01 S.C.N.
BACK UP LAMP / ECM MIRROR / PARKING AID

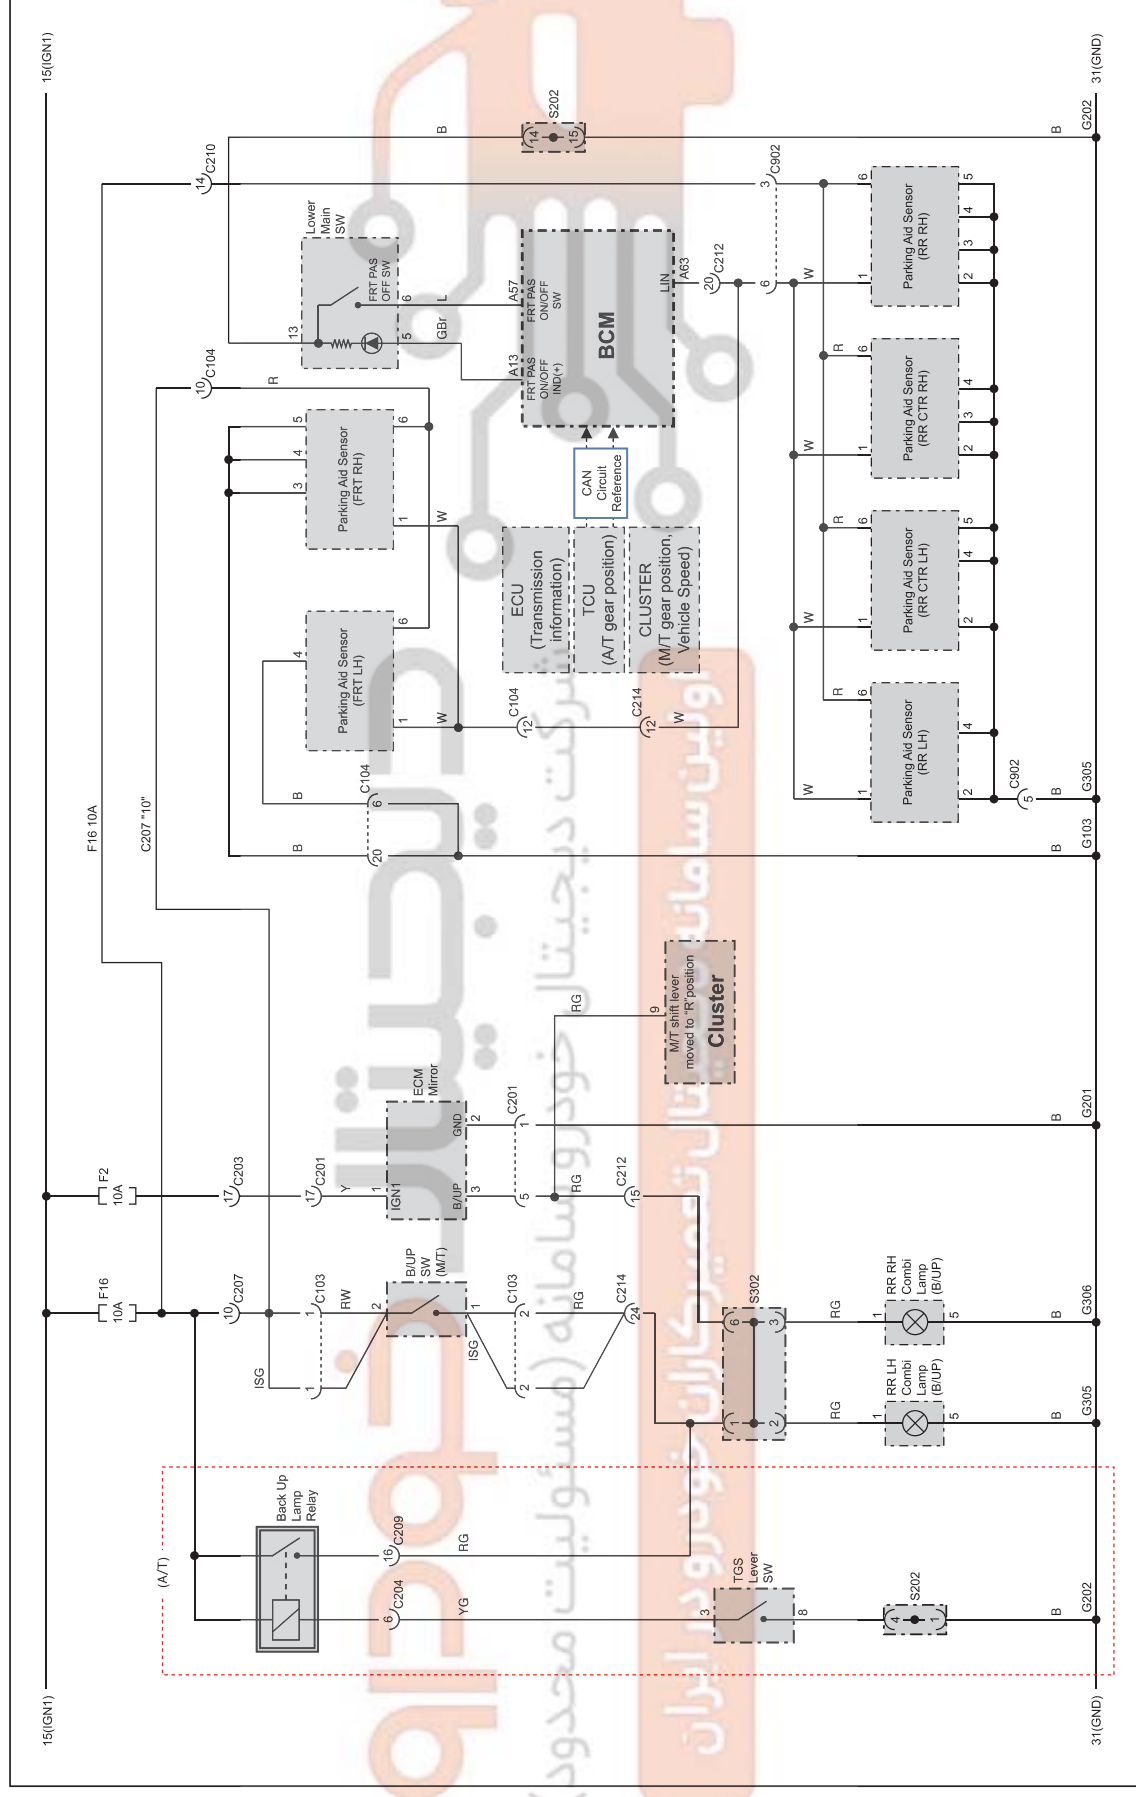

Modification basis	
Application basis	
Affected VIN	

1) CONNECTOR

Connector Number (Pin Number/Color)	Connecting Wiring Harness	Connector Position	Remark
4	W/H Eng Room - W/H BATT	Under Battery Tray	
C103	Black		
6	W/H Eng Room - W/H BATT	Under Battery Tray	ISG
C104	Black		
20	W/H Front END Module - W/H Eng Room	Behind LH Fog Lamp	
C201	Black		
18	W/H IP (Main) - W/H Roof	Inside of LH A-Pillar	
C203	White		
18	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C204	White		
18	W/H IP (Main) - IP Fuse & Relay BOX	Back Side of IP Fuse & Relay Box	
C207	White		
16	W/H Eng Room - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C210	White		
22	W/H Floor - IP Fuse & Relay BOX	Front Side of IP Fuse & Relay Box	
C212	White		
46	Black	Inside of Driver Cowl Side	
C214	White		
25	W/H IP (Main) - W/H Floor	Inside of Driver Cowl Side	
C902	Black		
6	W/H Floor - W/H RR Bumper	Inside of Rear Bumper LH	


2) GROUND

Connector Number	Connecting Wiring Harness	Connecting Position	Remark
G103	W/H Eng Room	Above External Buzzer (front)	Theft deterrent horn, front end module, AT TCU, M/T neutral switch
G201	W/H IP (Main)	IP panel frame left side	Diagnostic connector, auto cruise switch, BCM, roof wiring
G202	W/H IP (Main)	Rear LH of Cluster (IP Panel Frame)	S202, S204, IP Fuse
G305	W/H Floor	Inside of LH C-pillar Upper Cover (above Luggage Lamp)	Tailgate, power outlet, rear fog lamp, rear LH seat warmer, rear LH door switch, LH combination lamp, TPMS, rear PAS
G306	W/H Floor	Inside of RH C-pillar Upper Cover	LH/RH combination lamps, rear RH seat warmer, rear RH door switch

3) SPLICE PACK

Connector Number	Connecting Wiring Harness	Connector Position	Remark
S202	20	W/H IP (Main)	Rear RH of IP
S302	14	W/H Floor	Under RH of Driver Seat
			Stop Lamp, Back Up Lamp

4) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

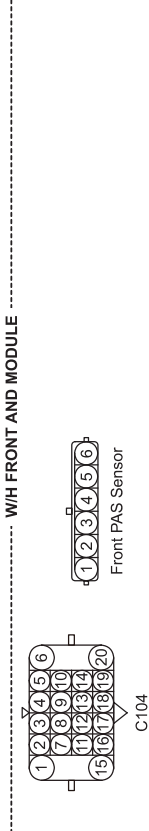

Modification basis	
Application basis	
Affected VIN	