


5) PANIC, AUTO LIGHT & RAIN SENSING, ROOM LAMP

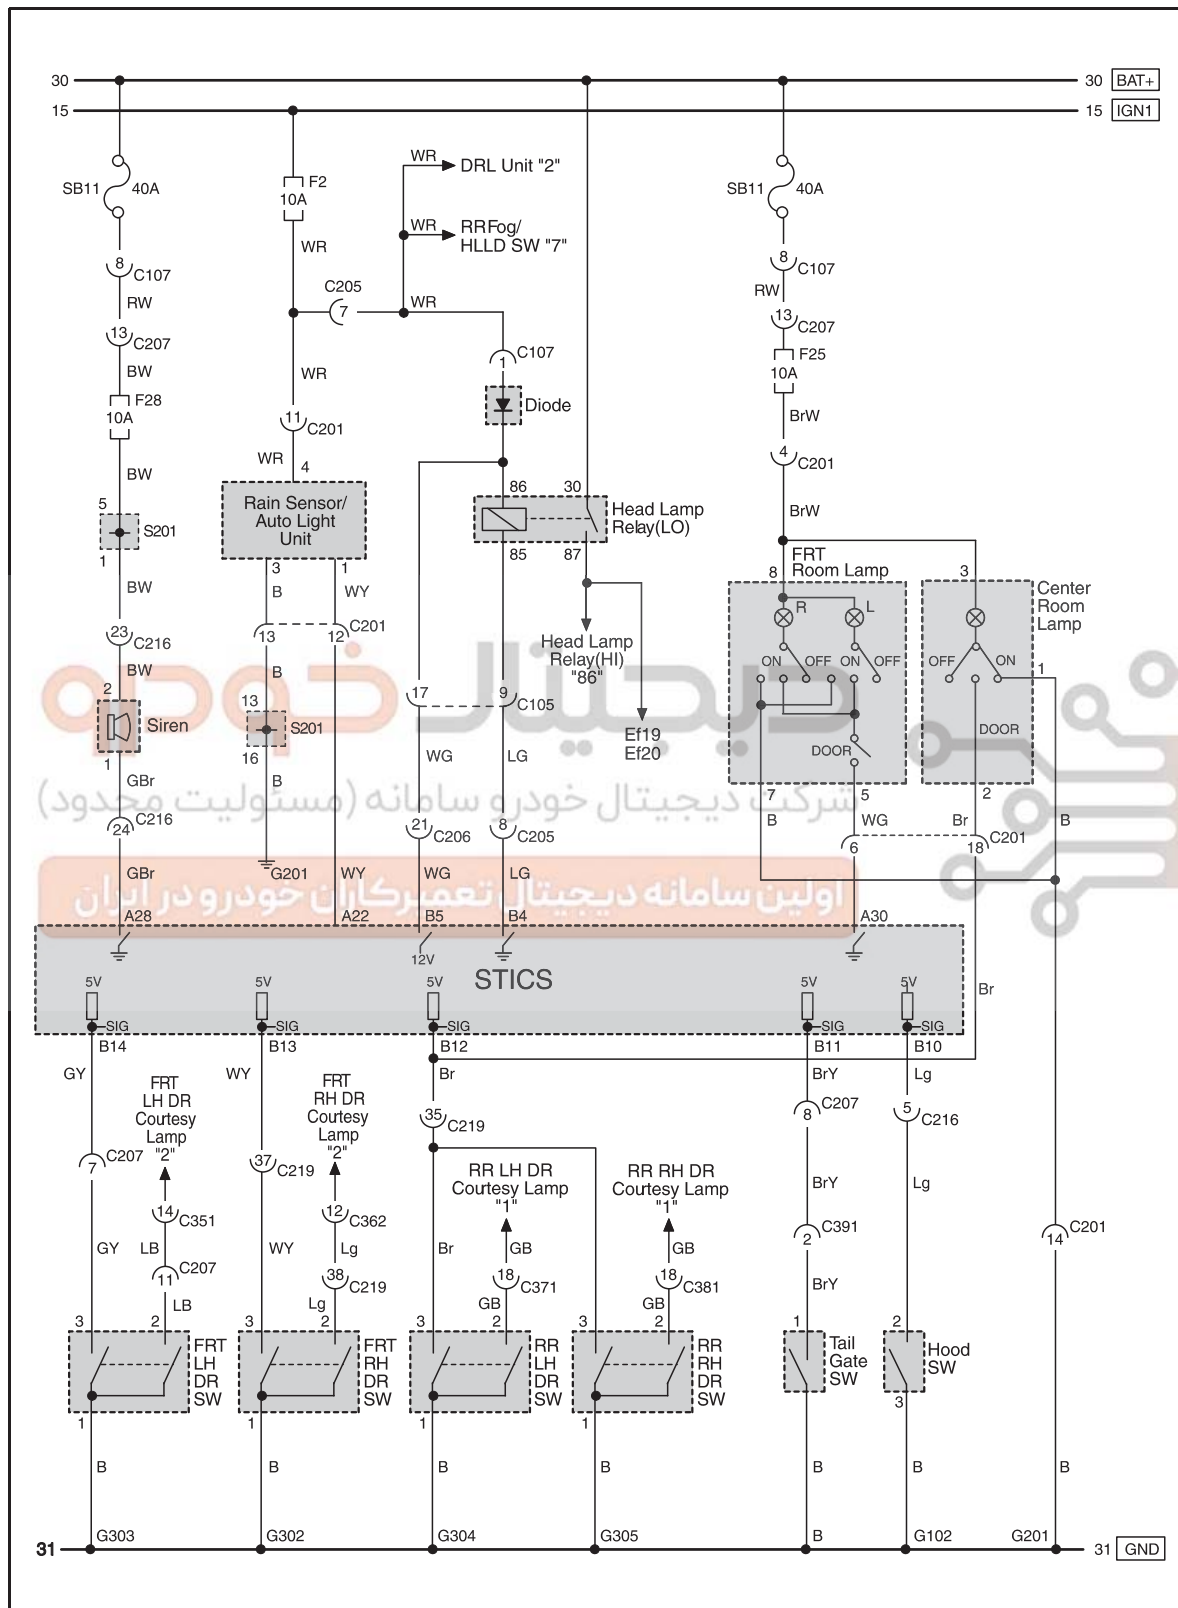


CIRCUIT

REXTON 2010.01

Modification basis	
Application basis	
Affected VIN	

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C105 (22Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C107 (14Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C201 (18Pin, White)	W/H Main - W/H Roof	Under the I/P Fuse Box	
C205 (16Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C206 (21Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C207 (39Pin, Gray)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	C/Holder
C216 (26Pin, White)	W/H Main - W/H Eng	Passenger Cowl Side C/Holder	C/Holder
C219 (39Pin, Gray)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	C/Holder
C351 (21Pin, Black)	W/H Main - W/H Driver DR	Inside the Driver Cowl Side PNL	
C362 (21Pin, Black)	W/H Main - W/H Passenger DR	Inside the Passenger Cowl Side PNL	
C371 (21Pin, White)	W/H Floor - W/H RR LH DR	Under the Left "B" PLR	
C381 (21Pin, White)	W/H Floor - W/H RR RH DR	Under the Right "B" PLR	
C391 (12Pin, White)	W/H Floor - W/H Tail Gate	Inside the Tail Gate	
G102	W/H Eng	Center the Eng BATT	
G201	W/H Main	Under the Driver Cowl Side PNL	
G302	W/H Floor	Under the Passenger Seat	
G303	W/H Floor	Under the LH "B" PLR	
G304	W/H Floor	Inside the LH QTR GLS Lower	
G305	W/H Floor	Inside the RH QTR GLS Lower	
S201 (20Pin)	W/H Main	Upper the I/P Relay Box (Inside Protector)	

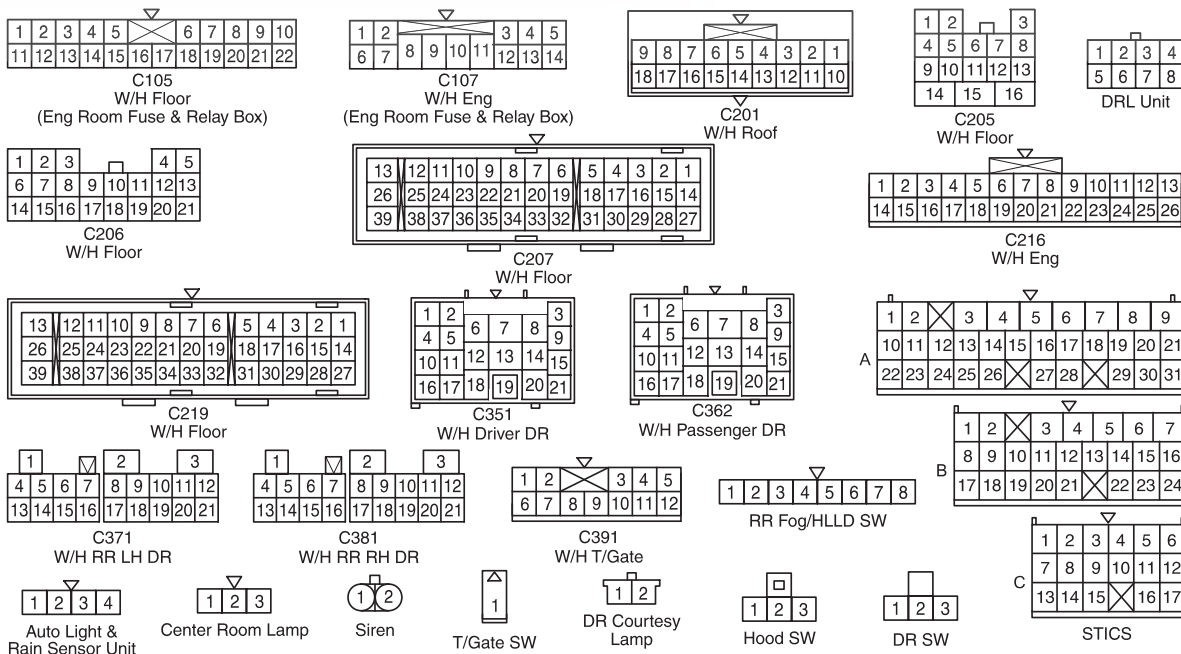(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

Modification basis	
Application basis	
Affected VIN	

CIRCUIT

REXTON 2010.01