




2) CENTRAL DOOR LOCK CIRCUIT

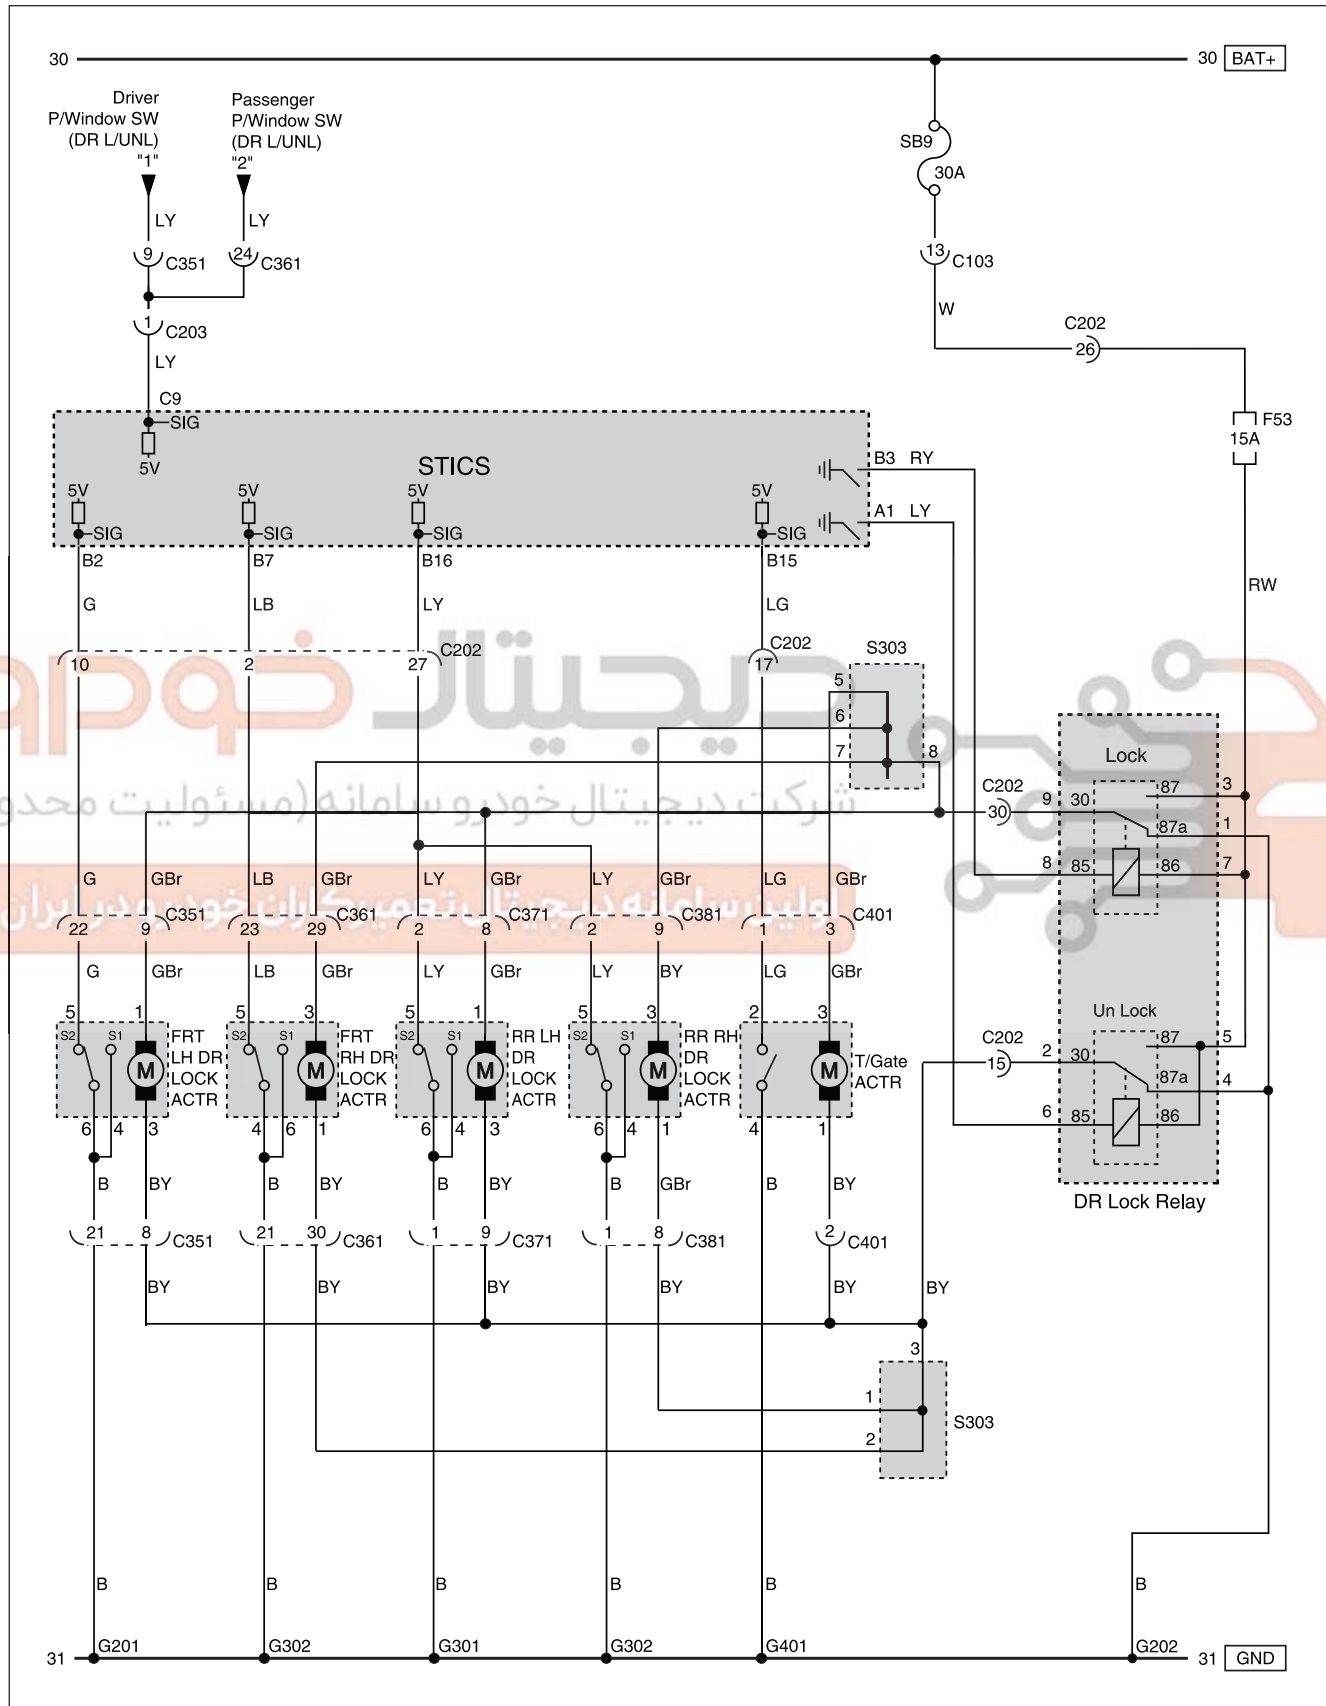

A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C351 (33Pin, White)	W/H Floor - W/H Driver DR	Under the LH "A" Pillar	
C371 (11Pin, White)	W/H Floor - W/H RR LH DR	Under the LH "B" Pillar	
C381 (11Pin, White)	W/H Floor - W/H RR RH DR	Under the RH "B" Pillar	
C401 (12Pin, Black)	W/H Floor - W/H T/Gate	Upper the RH T/Gate	
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G301	W/H Floor	Under the Driver Seat	
G302	W/H Floor	Under the Passenger Seat	
G401	W/H T/Gate	Center the T/Gate	
S303 (8Pin, Black)	W/H Floor	Under the Passenger "B" PLR W/H Protector	DR Lock

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

