


FUSE & RELAY INFORMATION

Fuse & Relay Information (4)

SD100-4

IPM (INSTRUMENT PANEL MODULE)

< FRONT >

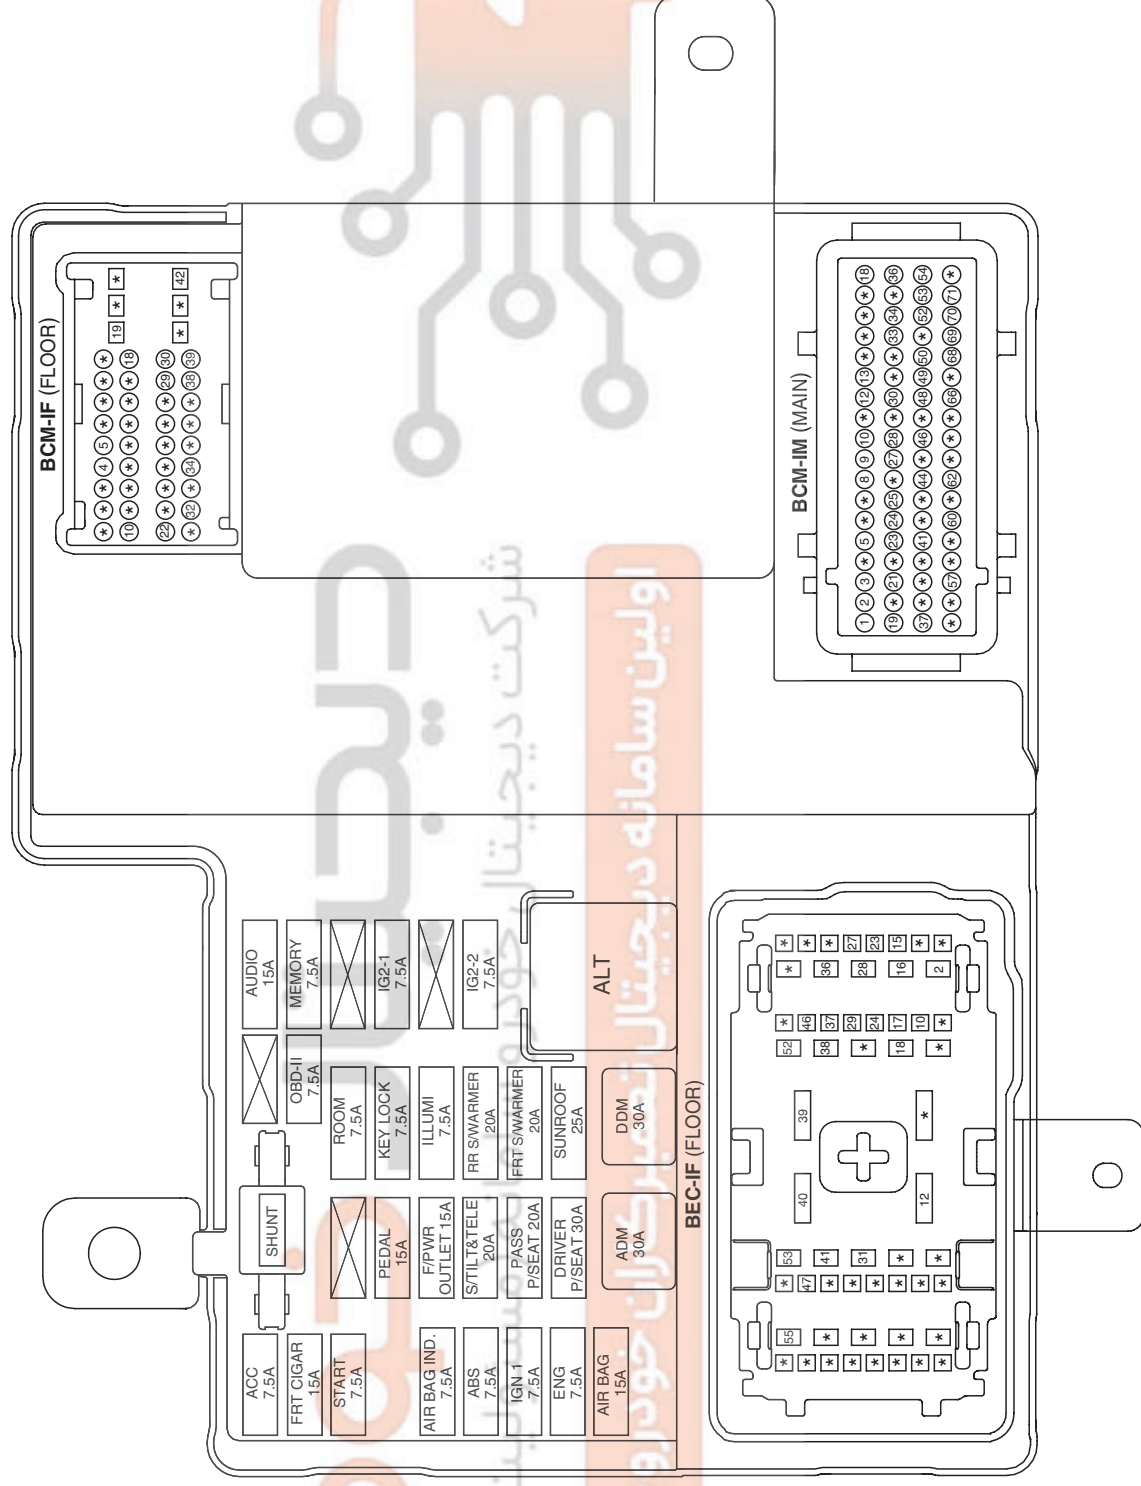

FUSE & RELAY INFORMATION

Fuse & Relay Information (5)

SD100-5

CIRCUIT

Description		(A)	Circuit Protected
FUSE	AUDIO	15A	Audio, Rear Monitor
	MEMORY	7.5A	Front A/C Control Module, Rear A/C Control Module, Instrument Cluster(IND.), RF Receiver, FAM, RAM, Driver Door Module, Assistant Door Module
	S/TILT & TELE	20A	Tilt & Telescopic Module, IMS Control Module
			Tilt & Telescopic Module
	IG2-1	7.5A	Front A/C Control Module, Incar Temperature Sensor, PDM, Multifunction Switch(Wiper/Washer), Driver/Passenger Seat Warmer Module,
			Front Blower Relay, Electro Chromic Mirror, Rear Blower Relay
	IG2-2	7.5A	Rear A/C Control Module, Driver Door Module, FAM, Assistant Door Module, IMS Control Module, Tilt & Telescopic Module
	OBD-II	7.5A	Start Stop Button Switch, Data Link Connector, PDM, Multipurpose Check Connector, Smart Key Control Module, Fob Holder
	ROOM	7.5A	Electro Chromic Mirror, Map Lamp, Vanity Lamp Switch LH/RH, Front/Rear A/C Control Module, Center Room Lamp, Rear Room Lamp
	KEY LOCK	7.5A	Sport Mode Switch
	ILLUMI	7.5A	IPM
	RR S/WARMER	20A	Rear Seat Warmer Relay
	FRT S/WARMER	20A	Driver Seat Warmer Module, Passenger Seat Warmer Module
	SUNROOF	25A	Sunroof Module
	PEDAL	15A	Adjustable Pedal Relay
FUSIBLE LINK	F/PWR OUTLET	15A	Front Power Outlet
	PASS P/SEAT	20A	Passenger Power Seat Switch
	DRIVER P/SEAT	30A	Driver Power Seat Switch, Lumbar Support Switch, IMS Control Module
	ACC	7.5A	Audio, Front A/C Control Module, Smart Key Control Module, PDM
	FRT CIGAR	15A	Cigarette Lighter
	START	7.5A	Burglar Alarm Relay, Start Relay
	AIR BAG IND.	7.5A	Instrument Cluster(Air Bag IND.)
	ABS	7.5A	ABS Control Module, ESP Control Module, DBC Relay, Steering Angle Sensor, Crash Pad Switch LH
	IGN 1	7.5A	PDM, Rheostat, Instrument Cluster(MICOM), Smart Key Control Module, Multifunction Switch(Cruise Remocon), Air Suspension Control Module, Generator, Rear Parking Assist Control Module, Rear Parking Assist Buzzer
	ENG	7.5A	Multipurpose Check Connector, ECM, TCM, Front Wiper Motor, 4WD ECM, Stop Lamp Switch
	AIR BAG	15A	SRS Control Module
	DDM	30A	Driver Door Module, Driver Safety Power Window Motor
	ADM	30A	Assistant Door Module, Passenger Safety Power Window Motor

✘ USE THE DESIGNATED FUSE ONLY

FUSE & RELAY INFORMATION

Fuse & Relay Information (6)

SD100-6

IPM (INSTRUMENT PANEL MODULE)

< REAR >

