




30. INTERIOR LAMP CIRCUIT 7770

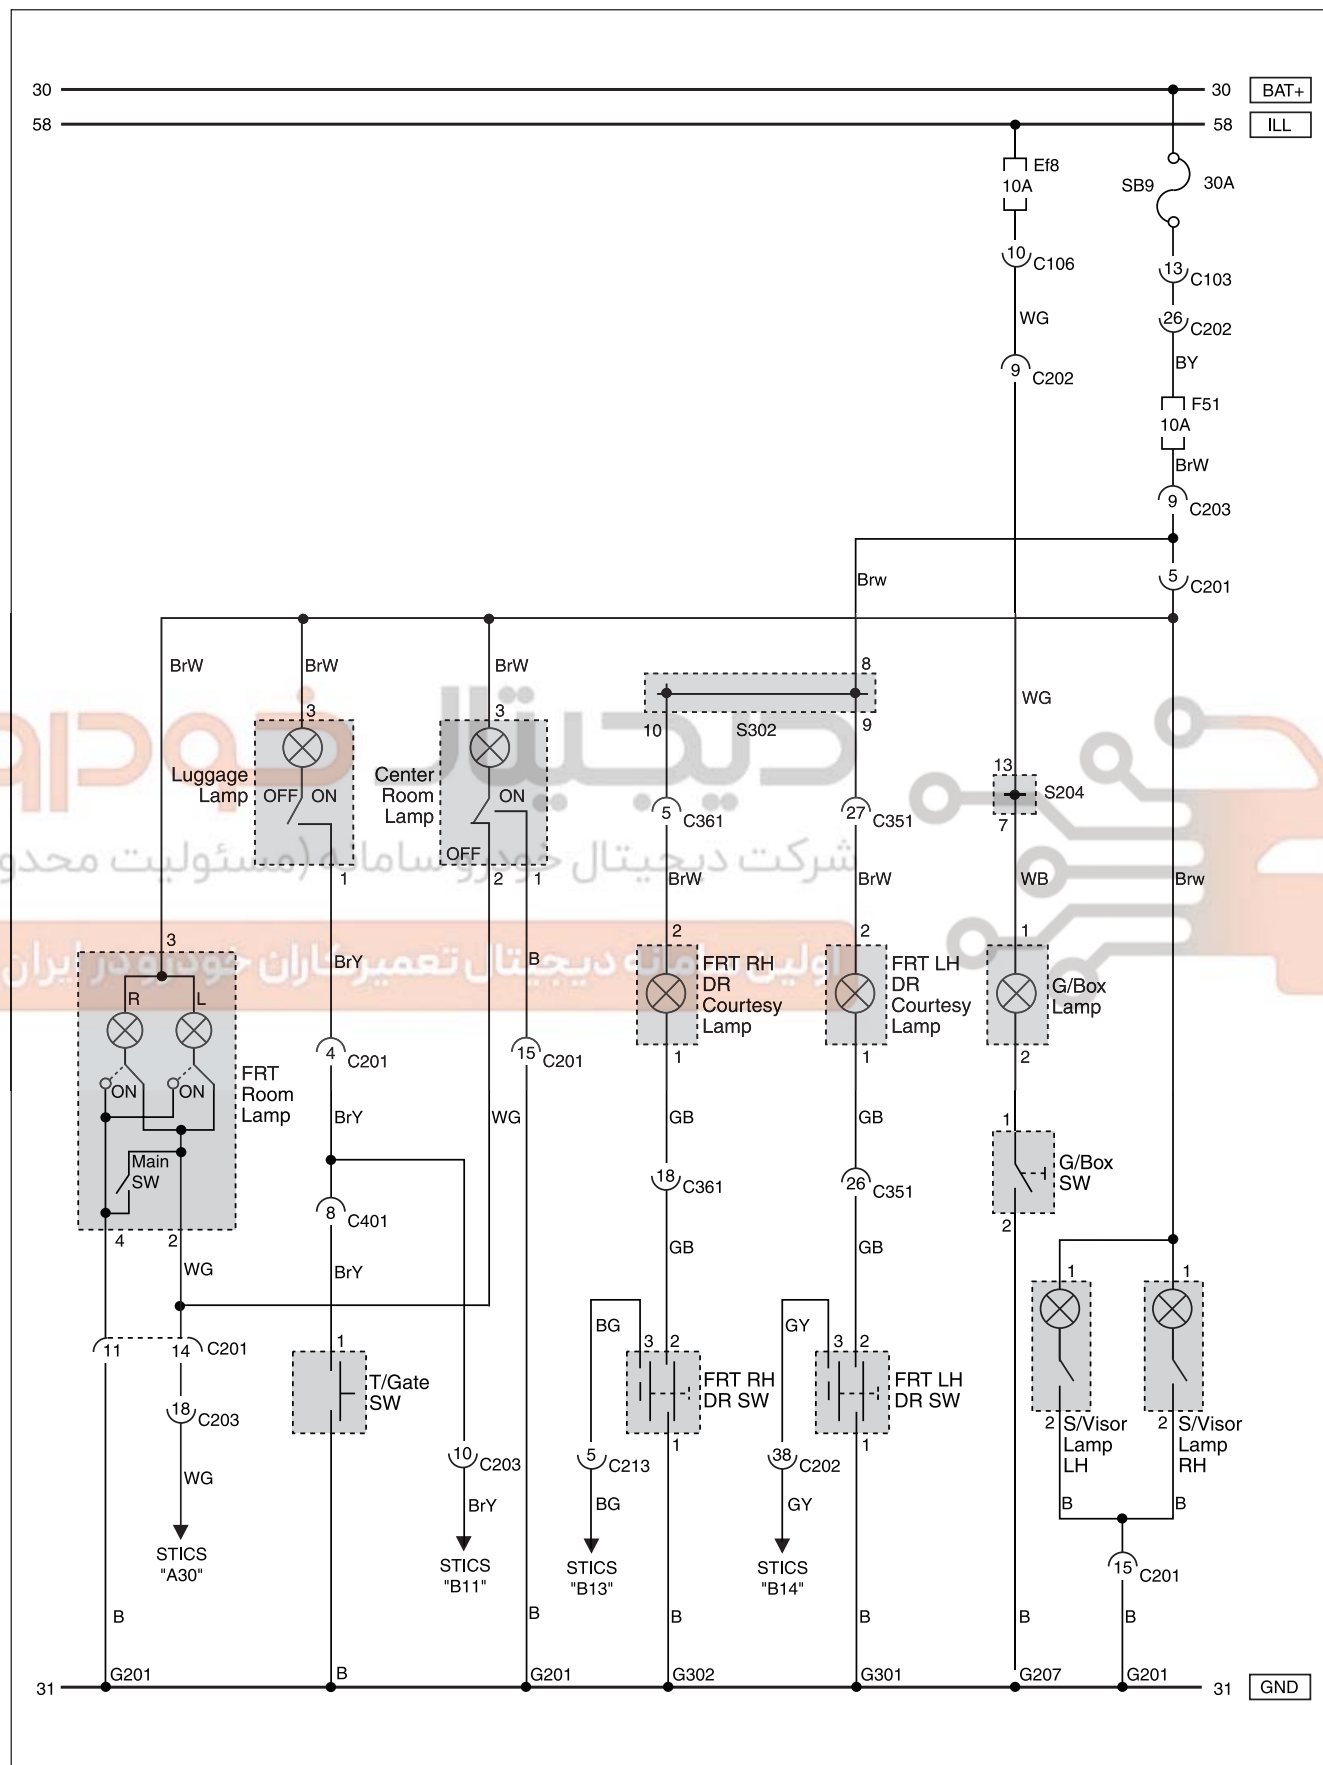

A. CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C201 (20Pin, White)	W/H Floor - W/H Roof	Inside Driver Cowl Side PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C351 (33Pin, White)	W/H Floor - W/H Driver DR	Under the LH "A" Pillar	
C361 (33Pin, White)	W/H Floor - W/H Passenger DR	Under the RH "A" Pillar	
C401 (12Pin, Black)	W/H Floor - W/H T/Gate	Upper the RH T/Gate	
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G207	W/H Main	Inner the Passenger Cowl Side PNL	
G301	W/H Floor	Under the Driver Seat	
G302	W/H Floor	Under the Passenger Seat	
S204 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	ILL
S302 (14Pin, Black)	W/H Main	Beside RR LH Seat W/H Protector	

01

02

03

04

05

B. CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION




C103
W/H Floor
(Eng Room Fuse & Relay Box)




C106
W/H Floor
(Eng Room Fuse & Relay Box)




C201
W/H Roof

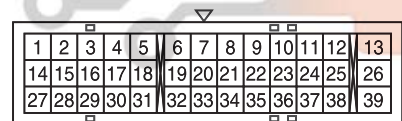


C202
W/H Floor




C203
W/H Floor




C213
W/H Floor



C351
W/H Drive DR



C361
W/H Passenger DR




C401
W/H T/Gate




DR SW




G/Box Lamp




Luggage Lamp



A




B



C

STICS



FRT Room Lamp



T/Gate SW



S/Visor Lamp



Center Room Lamp



DR Courtesy
Lamp